


# YUTAKI S80 SERIES

# Service Manual

RWH-(4.0-6.0)FS(V)NFE Indoor unit RAS-(4-6)H(V)RNME-AF Outdoor unit DHWS-(195/260)S-2.0H1E DHW tank PC-S80TE LCD controller

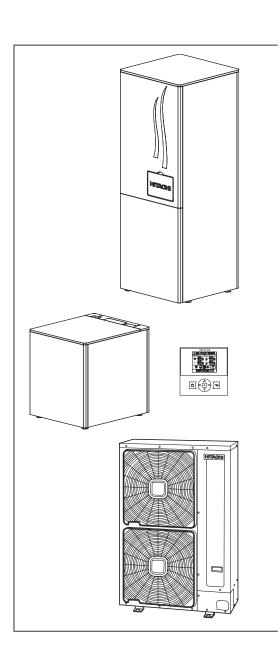

# Contents

General Information	
Unit installation	2
Refrigerant and water piping	3
Electrical and control settings	4
Control system	5
LCD user's interface	6
Optional functions	7
Commissioning	8
Electrical checks of the main parts	9
Spare parts	10
Servicing	11
Troubleshooting	12
Maintenance notes	13

# Index

1.	General information	1
1.1	Scope of this document	2
1.2	General information	2
	1.2.1 General notes	
	1.2.2 Introduction	
	1.2.3 Environment-friendly units	3
1.3	Applied symbols	4
1.4	Product guide	5
	1.4.1 Classification of the units	5
	1.4.2 Product guide	6
	1.4.3 Accessory code list	8
2.	Unit installation	11
2.1	Outdoor unit installation	13
	2.1.1 Initial check	13
	2.1.2 Transportation of outdoor unit	14
	2.1.3 Installation space	15
	2.1.4 Installation place provision	18
	2.1.5 Optional parts and installation	21
2.2	Indoor unit installation	25
	2.2.1 Selecting an installation configuration	25
	2.2.1.1 Indoor unit and DHW tank configurations	25
	2.2.1.2 Dimensions	26
	2.2.1.3 Service space	26
	2.2.2 General notes	27
	2.2.2.1 Reception	27
	2.2.2.2 Flexible water pipes considerations	28
	2.2.3 Removal of parts during the installation process	29
	2.2.3.1 Removing the indoor unit covers	29
	2.2.3.2 Removing indoor unit electrical box	31
	2.2.4 Installation of Indoor unit alone (Without tank)	32
	2.2.4.1 Water pipes connection to the indoor unit (Space heating pipes)	32
	2.2.4.2 Drain pipes connection	
	2.2.4.3 Refrigerant piping connection and indoor unit's placing	
	2.2.4.4 Water pipes connection to the space heating (Space heating pipes)	
	2.2.4.5 Power and transmission wiring connection	38



	2.2.4.6 LCD wiring connection	39
	2.2.4.7 Levelling procedure	40
	2.2.4.8 Test and check	40
	2.2.4.9 Cover's assembly	40
2.3	DHW tank (optional) installation	41
	2.3.1 Selecting an installation configuration	41
	2.3.1.1 DHW tank configurations	41
	2.3.1.2 Dimensions	41
	2.3.1.3 Service space	42
	2.3.2 General notes	43
	2.3.2.1 Reception	43
	2.3.2.2 Flexible water pipes considerations	44
	2.3.3 Removal of parts during the installation process	45
	2.3.3.1 Removing the domestic hot water tank covers	45
	Installation of Indoor unit with HITACHI tank     (Tank integrated over the indoor unit)	46
	2.3.4.1 Water pipes connection to the indoor unit (Space heating pipes)	46
	2.3.4.2 Drain pipes connection	46
	2.3.4.3 Water pipe connection to the indoor unit (Heating coil pipes)	46
	2.3.4.4 Refrigerant piping connection and indoor unit's placing	49
	2.3.4.5 Water pipes connection to the space heating (Space heating pipes)	49
	2.3.4.6 Water pipes connection to the tank (DHW pipes)	49
	2.3.4.7 Removing the mounting foot	51
	2.3.4.8 Tank over the indoor unit assembly	51
	2.3.4.9 Water pipes connection to the tank (heating coil pipes)	52
	2.3.4.10 Water pipes connection to the DHW installation (DHW pipes)	52
	2.3.4.11 Power wiring connection	53
	2.3.4.12 Tank wiring connection	53
	2.3.4.13 Levelling procedure	54
	2.3.4.14 Tank's fixation to the wall	54
	2.3.4.15 Test and check	54
	2.3.4.16 Cover's assembly	54
	2.3.5 Installation of Indoor unit with HITACHI tank (Tank beside the indoor unit)	55
	2.3.5.1 Water pipes connection to the indoor unit (Space heating pipes)	55
	2.3.5.2 Drain pipes connection	55
	2.3.5.3 Water pipes connection to the indoor unit (Flexible water pipes kit (ATW-FWP-01))	55
	2.3.5.4 Refrigerant piping connection and indoor unit's placing	58
	2.3.5.5 Water pipes connection to the space heating (Space heating pipes)	58
	2.3.5.6 Water pipes connection to the tank (DHW pipes)	59
	2.3.5.7 Water pipes connection to the tank (heating coil pipes)	59
	2.3.5.8 DHW tank's placing	60

	2.3.5.9 Connection between the flexible water pipes kit (ATW-FWP-01) and the heating coil pipes	61
	2.3.5.10 Water pipes connection to the DHW installation (DHW pipes)	62
	2.3.5.11 Power wiring connection	62
	2.3.5.12 Tank wiring connections	62
	2.3.5.13 Levelling procedure	64
	2.3.5.14 DHW tank fixation to the wall	65
	2.3.5.15 Test and check	65
	2.3.5.16 Cover's assembly	65
3.	Refrigerant and water piping	67
3.1	General notes before performing pipe work	68
	3.1.1 General notes	68
	3.1.2 Suspension of refrigerant and water pipes	69
	3.1.3 Brazing work	69
3.2	Refrigerant circuit	70
	3.2.1 Refrigerant piping	70
	3.2.2 Piping connections	71
	3.2.3 Refrigerant charge	74
	3.2.4 Precautions in the event of gas refrigerant leaks	76
	3.2.5 Pump down of refrigerant	77
	3.2.6 Refrigerant check joints	78
3.3	Drain discharging boss of the outdoor unit	79
3.4	Space heating hydraulic circuit	80
	3.4.1 Hydraulic circuit	80
	3.4.2 Water piping	82
	3.4.3 Water quality	83
	3.4.4 Water filling	83
	3.4.5 Water flow adjustment	84
	3.4.6 Pressure charts	86
3.5	DHW hydraulic circuit (Optional)	87
	3.5.1 Hydraulic circuit	88
	3.5.2 Water piping	90
	3.5.3 Water quality	93
	3.5.4 Water filling	93



4.	Electrical and control settings	95
4.1	General check	96
4.2	System wiring diagram	97
4.3	Electrical connection	98
	4.3.1 Wiring size	98
	4.3.2 Minimum requirements of the protection devices	99
4.4	Transmission wiring between outdoor and indoor unit	100
4.5	Electrical wiring connection between indoor unit and optional DHW tank	101
4.6	Optional indoor unit wiring (accessories)	102
	4.6.1 Summary of the terminal board connections	102
	4.6.2 Terminal board detailed connections	103
4.7	Printed circuit board (PCB)	109
	4.7.1 Outdoor unit	109
	4.7.2 Indoor unit	110
4.8	Setting of DIP switches and RSW switches	112
	4.8.1 Outdoor unit	112
	4.8.2 Indoor unit	115
4.9	Electrical wiring diagrams	120
	4.9.1 Electrical wiring diagram for outdoor unit	120
	4.9.2 Electrical wiring diagram for indoor unit	122
5.	Control system	127
5.1	Device control system	128
5.2	Safety protection and control device	129
	5.2.1 Indoor unit	129
	5.2.2 Outdoor unit	129
5.3	Installation configurations	130
	5.3.1 Main configurations	131
	5.3.2 Additional combinations	134
5.4	Standard control functions	138
	5.4.1 Space heating	138
	5.4.2 Room Thermostat control	145
	5.4.3 Circuit water pumps	151
	5.4.4 Domestic Hot Water (DHW)	155
	5.4.5 Swimming pool	
	5.4.6 Auxiliary electric heater accessory for space heating	163
	5.4.7 Auxiliary Boiler combination for space heating	
	5.4.8 Solar combination	171

5.5	Room thermostat (accessory)	175
	5.5.1 Room Thermostat Unit installation and configuration (as accessory)	175
	5.5.2 Installing the Programmable thermostat	176
6.	LCD user's interface	191
6.1	Description of the hardware	192
6.2	Comprehensive view	192
6.3	Description of the icons	194
6.4	Menu description	196
	6.4.1 User mode	196
	6.4.2 Installer mode	196
6.5	Menu navigation	198
	6.5.1 Unit configuration	198
	6.5.1.1 Operation display parameters	198
	6.5.1.2 General parameters	200
	6.5.1.3 System configuration	203
	6.5.2 Controller configuration	216
	6.5.2.1 Time and date	216
	6.5.2.2 Language selection	217
	6.5.2.3 LCD energy saving	217
	6.5.2.4 Screen contrast	217
	6.5.2.5 About controller	
	6.5.3 Return to global view (Logout when Installer mode)	217
7.	Optional functions	219
7.1	Indoor unit	220
	7.1.1 Optional functions from LCD controller	221
	7.1.2 Optional functions from dip-switch setting	225
	7.1.3 Indoor external output signals	227
7.2	Outdoor unit	228
	7.2.1 Available ports	228
	7.2.2 Configuration	229
	7.2.3 Description of optional output signals	231
8.	Commissioning	233
8.1	Preliminary check	234
	8.1.1 Checking the unit	234
	8.1.2 Electrical checking	234

	8.1.3 Hydraulic circuit checking (space heating circuit and DHWT)	234
	8.1.4 Checking the refrigerant circuit	235
8.2	Commissioning procedure	235
8.3	Indoor unit test run	236
8.4	Outdoor unit test run	237
9.	Electrical checks of the main parts	239
9.1	Inverter	240
	9.1.1 Specifications of inverter	240
	9.1.2 Inverter time chart	242
	9.1.3 Protective function	243
	9.1.4 Overload control	244
9.2	Thermistor	245
	9.2.1 Summary of thermistors	245
	9.2.2 Diagrams of thermistors	246
9.3	Electronic expansion valve	249
	9.3.1 Electronic expansion valve for the outdoor unit and the 2nd cycle from indoor unit	249
	9.3.2 Electronic expansion valve for the 1s cycle from indoor unit	250
9.4	High pressure protection device	251
	9.4.1 Outdoor unit	251
	9.4.2 2nd cycle indoor unit	252
9.5	Noise filter (NF)	253
	9.5.1 Noise filter for 1~	253
	9.5.2 Noise filter for 3N~	254
9.6	Capacitor (CB1, CB2)	255
9.7	Reactor (DCL)	256
	9.7.1 Reactor (DCL) for 1~	256
	9.7.2 Reactor (DCL) for 3N~	256
9.8	R410A (outdoor unit) and R134a (indoor unit) scroll compressor	257
10.	Spare parts	259
10.1	Outdoor unit	
	10.1.1 Cycle and structural parts	
	10.1.2 Electrical parts	
	10.1.3 Cycle and structural parts table	
	10.1.4 Electrical parts table	263

10.2	Indoor unit	264
	10.2.1 Cycle and structural parts	264
	10.2.2 Electrical parts	267
	10.2.3 Cycle and structural parts table	268
	10.2.4 Electrical parts table	270
10.3	Domestic hot water tank (Optional accessory)	271
	10.3.1 Structural and electrical parts	271
	10.3.2 Parts table	272
11.	Servicing	273
11.1	Outdoor unit	275
	11.1.1 Removing covers	275
	11.1.1.1 Removing service cover	
	11.1.1.2 Removing air outlet grille	
	11.1.1.3 Removing upper cover	
	11.1.1.4 Removing the lower part of service panel and rear panel	
	11.1.2 Removing electrical components	277
	11.1.2.1 Opening electrical box (P-mounting plate)	277
	11.1.2.2 Removing electrical box components	277
	11.1.2.3 Removing "W" electrical components surface	279
	11.1.2.4 Removing other electrical components	280
	11.1.2.5 Removing outdoor fan motor	281
	11.1.2.6 Removing expansion valve coil	282
	11.1.2.7 Removing the coils for the reversing and solenoid valves (SVA1, SVA2 and SVF)	283
	11.1.3 Removing refrigerant parts	284
	11.1.3.1 Removing the R-410A compressor	284
	11.1.3.2 Removing high pressure switch and control pressure switch	287
	11.1.3.3 Removing reversing valve	288
	11.1.3.4 Removing expansion valve	289
	11.1.3.5 Removing solenoid valve	289
11.2	Indoor unit	290
	11.2.1 Removing service covers	290
	11.2.1.1 Removing the indoor unit front cover	290
	11.2.1.2 Removing the indoor unit upper cover	290
	11.2.1.3 Removing the indoor unit left cover	291
	11.2.1.4 Removing the indoor unit right cover	291
	11.2.1.5 Removing the auxiliary indoor unit covers	292
	11.2.2 Removing indoor unit electrical box	293
	11.2.2.1 Removing the electrical box	293
	11.2.2.2 Removing the internal electrical box covers	294

11.2.3 Repla	cement of electrical components	295
	11.2.3.1 Removing electrical box components	295
	11.2.3.2 Replacing the electrical box	296
	11.2.3.3 Replacing thermistors	300
	11.2.3.4 Replacing LCD controller	301
	11.2.3.5 Replacing the DIP-IPM (Inverter module - 1~ 230V 50Hz)	302
	11.2.3.6 Replacing the ISPM (Inverter module - 3N~ 400V 50Hz)	303
	11.2.3.7 Replacing the Relay PCB (only for 3N~ 400V 50Hz)	304
	11.2.3.8 Replacing the noise filter (Inverter module - 1~ 230V 50Hz)	305
	11.2.3.9 Replacing the noise filter (Inverter module - 3N~ 400V 50Hz)	306
11.2.4 Repla	cing hydraulic components	307
	11.2.4.1 Replace water flow switch (WFS)	307
	11.2.4.2 Replace water pump (WP1)	308
	11.2.4.3 Replacement of the manometer	309
	11.2.4.4 Replacement of the safety valve	311
	11.2.4.5 Replacement of the air purger	312
	11.2.4.6 Replacement of the water strainer	313
	11.2.4.7 Replacement of the expansion vessel	315
	11.2.4.8 Replacement of the space heating pipes	317
	11.2.4.9 Replacement of the DHW pipes	319
	11.2.4.10 Replacement of the heating coil pipes (DHW tank over the indoor unit)	320
	11.2.4.11 Replacement of the heating coil pipes (DHW tank beside the indoor unit)	323
	11.2.4.12 Replacement of the flexible water pipes kit (ATW-FWP-01)	324
11.2.5 Repla	cing refrigerant parts	327
	11.2.5.1 Replace the R-134a compressor	327
	11.2.5.2 Replacement of R134a high pressure switch (PHS)	330
	11.2.5.3 Replacement of the R134a pressure sensors	331
	11.2.5.4 Replace the coils for R410A solenoid valves	332
	11.2.5.5 Replacement of R410A solenoid valves	334
	11.2.5.6 Replacement of R134a electronic expansion valve coil	335
	11.2.5.7 Replacement of R410A electronic expansion valve coil	336
	11.2.5.8 Replacement of R134a expansion valve	338
	11.2.5.9 Replace R410A expansion valve	338
	11.2.5.10 Replacement of R410A-R134a plate heat exchanger	339
	11.2.5.11 Replacement of R134a-water plate heat exchanger	341
	11.2.5.12 Replace R410A-water plate heat exchanger	343
DHW Tank .		345
11.3.1 Remo	ving service covers	345
	11.3.1.1 Removing the tank lower front cover	345
	11.3.1.2 Removing the tank upper front cover	345
	11.3.1.3 Removing the tank insulation protecting the thermostat	346

11.3

	11.3.2 Replacing electrical components	347
	11.3.2.1 Replace thermistor	347
	11.3.2.2 Replacement of the electric heater	348
	11.3.2.3 Replacement of the LCD controller	349
12.	Troubleshooting	351
12.1	Normal operation	352
	12.1.1 Normal operation display on PCB1	352
	12.1.2 Normal operation display on PCB3	353
	12.1.3 Normal operation display on LCD controller	353
12.2	Initial troubleshooting	354
	12.2.1 Unit and System controller - Power supply failure	354
	12.2.2 Abnormal operation of the devices	356
	12.2.3 DHW tank troubleshooting	361
12.3	Troubleshooting procedure by alarm code	362
	12.3.1 Alarm display	362
	12.3.2 Alarm codes	363
	12.3.3 Troubleshooting by alarm code	367
12.4	Troubleshooting in check mode	443
	12.4.1 Check mode display	443
	12.4.2 Troubleshooting using the 7 segment display (indoor unit)	443
	12.4.3 Troubleshooting using the 7 segment display (outdoor unit)	447
12.5	Checking procedure for main parts	453
	12.5.1 Procedure for checking the DIP-IPM inverter for indoor and outdoor units	453
	12.5.2 Procedure for checking the ISPM inverter for indoor and outdoor units	455
	12.5.3 Checking capacitors CB1 & CB2 (RAS-(4-6)HRNME-AF)	
	12.5.4 Fault diagnosis of DC fan motor.	
	12.5.5 Checking procedure for the electronic expansion valve for indoor and outdoor units	459
13.	Maintenance notes	461
13.1	General notes	462
	13.1.1 Checking the power source and the wiring connection	462
	13.1.2 Burnt-out compressor due to an insufficient refrigerant charge	462
13.2	Maintenance work	463
	13.2.1 Outdoor unit	463
	13.2.2 Indoor unit	464
	13.2.3 DHW Tank	467



13.3	Service and maintenance record	470
	13.3.1 Outdoor unit	470
	13.3.2 Indoor unit	471
	13.3.3 DHW Tank	472
13.4	Service and maintenance record using the 7-segment display	473
	13.4.1 Outdoor unit	473
	13.4.2 Indoor unit	474
13.5	Service and maintenance record by LCD	476
13.6	Checking procedure for the outdoor and indoor compressors	477
	13.6.1 Checking procedure for the outdoor compressor (R410A refrigerant)	477
	13.6.2 Checking procedure for the indoor compressor (R134a refrigerant)	478
	13.6.3 Additional Information for "CHECK LIST ON COMPRESSOR" (R410A and R134a)	479

# General information

# Index

1.1	Scope of this document	2
1.2	General information	
	1.2.1 General notes	2
	1.2.2 Introduction	2
	1.2.3 Environment-friendly units	3
1.3	Applied symbols	4
1.4	Product guide	5
	1.4.1 Classification of the units	5
	1.4.2 Product guide	6
	1.4.3 Accessory code list	8



## 1.1 Scope of this document



### IMPORTANT NOTE

The information in this document refers to units produced from November 2013, with a serial number starting from "4KE27700".

The information related with formerly produced units can be found in the document "SMGB0075 rev.1 - 12/2012".

Serial number	Related document	
Before 4KE27700	SMGB0075 rev.1 - 12/2012	
Starting from 4KE27700	SMGB0092 rev.0 - 11/2013	

### 1.2 General information

### 1.2.1 General notes

No part of this publication may be reproduced, copied, filed or transmitted in any shape or form without the permission of HITACHI Air Conditioning Products Europe, S.A.U.

Within the policy of continuous improvement of its products, HITACHI Air Conditioning Products Europe, S.A.U. reserves the right to make changes at any time without prior notification and without being compelled to introducing them into products subsequently sold. This document may therefore have been subject to amendments during the life of the product.

HITACHI makes every effort to offer correct, up-to-date documentation. Despite this, printing errors cannot be controlled by HITACHI and are not its responsibility.

As a result, some of the images or data used to illustrate this document may not refer to specific models. No claims will be accepted based on the data, illustrations and descriptions included in this manual.

No type of modification must be made to the equipment without prior, written authorization from the manufacturer.



### NOTE

This air conditioner has been designed for standard air conditioning for human beings. For use in other applications, please contact your HITACHI dealer or service contractor.



### CAUTION

This unit is designed for commercial and light industrial application. If installed in house hold appliance, it could cause electromagnetic interference.

### 1.2.2 Introduction

HITACHI is introducing another innovative heat pump to its award-winning YUTAKI range. The YUTAKI S80 will generate hot water up to 80°C; the hottest water temperature on the domestic heating market using renewable energy.

The YUTAKI air to water heat pump has a high COP, and this new innovation makes further strides in seasonal efficiency.

HITACHI's YUTAKI heat pumps produce sanitary hot water and heating like any oil or gas boiler but transforms renewable energy from the air outside into heat. Every 1kW of electricity used to power the heat pump can provide up to 4kW of energy for heating; this can reduce heating bills by up to 60% and cut CO<sub>2</sub> emissions by 50% compared to traditional boiler-led systems.

The extra innovation in the YUTAKI S80 is that it has two compressors, working in a smart cascade system, with two refrigerant cycles (R-410A and R-134a). To maximize seasonal efficiency, the second refrigerant cycle is only operated as a booster, when very high water temperature is required - the rest of the time, only one cycle is used.

The YUTAKI S80 will be ideal for existing properties, in particular older establishments where higher water supply temperatures may be required to keep the house warm – as well as for new builds. It is designed for boiler substitution, offering heating and sanitary hot water all year round, without boiler back-up.



The YUTAKI S80 is easy to install and operate; it's a split system, using HITACHI's IVX-AF outdoor unit with a brand new standalone indoor unit.

Six different models are available in single phase or three phase versions. The indoor unit is a standard width of <600 mm allowing seamless integration into kitchens and utility rooms.

For DHW operation (optional), HITACHI offers two DHW tanks (DHWS195S-2.0H1E and DHWS260S-2.0H1E) with the possibility to combine with the indoor unit as integrated over it or beside it, allowing the user to benefit from the heat pump's high efficiency and achieve hot water up to 75°C.

The DHW tank is made with high advanced technology using stainless steel chemically descaled and passivated materials. It has been designed to be high thermal efficient insulated with rigid, mould-injected, Neopor EPS.

The DHW Tank has been designed to have a compact size to reduce the installation space and to eliminate the cold zones at the bottom of the storage tank to prevent the risk of bacteria proliferation (e.g. Legionella).

The system is simple to control; its remote controller (PC-S80TE) is a variation of the well-received and successful design used with the existing YUTAKI S system, which includes a helpful LCD graphic display, one-touch holiday button, weekly timer and frost protection.

### Additional combinations

YUTAKI S80 system can be used for the following additional combinations:

### **Solar combination for DHW**

YUTAKI S80 allows the combination with solar panels for the Domestic Hot Water operation. The air to water heat pump will provide a part of the required heating, and the rest of required heating will be provided by the solar panel through an intermediate special heat exchanger (field supplied solar kit).



### NOTE

Not available when the HITACHI domestic hot water tank is integrated over the indoor unit.

### **Swimming pool operation**

YUTAKI S80 can also be used to heat up the swimming pool water temperature up to a value between 24 and 33°C.

### 1.2.3 Environment-friendly units

The new HITACHI's YUTAKI S80 series uses environmentally-friendly R410A / R134a gas refrigerants, and the RoHS and Green Dot regulations are applied throughout the manufacturing and installation process to reflect HITACHI's awareness of environmental respect and commitment.

R410A and R134a are totally environmentally-friendly since it does not contain any substances that damage the ozone layer:

ODP (ozone depleting potential) = 0.

HITACHI's YUTAKI S80 series are very efficient and allow significant energy savings compared with conventional systems. This energy efficiency means less production of CO<sub>2</sub>, which causes the greenhouse effect.





## 1.3 Applied symbols

During normal air conditioning system design work or unit installation, greater attention must be paid in certain situations requiring particular care in order to avoid damage to the unit, the installation or the building or property.

Situations that jeopardise the safety of those in the surrounding area or that put the unit itself at risk will be clearly indicated in this manual.

To indicate these situations, a series of special symbols will be used to clearly identify these situations.

Pay close attention to these symbols and to the messages following them, as your safety and that of others depends on it.



### DANGER

- The text following this symbol contains information and instructions relating directly to your safety and physical wellbeing.
- Not taking these instructions into account could lead to serious, very serious or even fatal injuries to you and others.

In the texts following the danger symbol you can also find information on safe procedures during unit installation.



- The text following this symbol contains information and instructions relating directly to your safety and physical wellbeing.
- Not taking these instructions into account could lead to minor injuries to you and others.
- Not taking these instructions into account could lead to unit damage.

In the texts following the caution symbol you can also find information on safe procedures during unit installation.



### NOTE

- The text following this symbol contains information or instructions that may be of use or that require a more thorough explanation.
- Instructions regarding inspections to be made on unit parts or systems may also be included.



# 1.4 Product guide

### 1.4.1 Classification of the units

### **♦** Outdoor unit

### **♦** Indoor unit

Unit type: indoor unit water module - high temperature

| Position-separating hyphen (fixed) |
| Compressor power (HP): 4.0, 5.0, 6.0. |
| System Free | V = Single phase unit (1~ 230V 50Hz) |
| - = Three phase unit (3N~ 400V 50Hz) |
| R-410A refrigerant |
| R-134a refrigerant |
| Made in Europe |
| RWH | - X.X | FS | (X) | N | F | E |

### **♦ Domestic Hot Water Tank accessory**

Unit type: YUTAKI S80 domestic hot water tank

Model: 195/260	Stainless	Position-separating hyphen (fixed)				
Electric heater of 2.0 kW	Series					
DHWS	XXX	S	-	2.0H	1	E

### **♦ LCD** user controller



## 1.4.2 Product guide

### **♦** Outdoor unit

Outdoor unit			
Single phase (1~ 230V 50Hz)		Three (3N~ 400	phase IV 50Hz)
Unit	Code	Unit	Code
RAS-4HVRNME-AF	7E300020	RAS-4HRNME-AF	7E300120
RAS-5HVRNME-AF	7E300021	RAS-5HRNME-AF	7E300121
RAS-6HVRNME-AF	7E300022	RAS-6HRNME-AF	7E300122

### **♦** Indoor unit





## ◆ Domestic hot water tank (DHWT)





(\*): Models with integrated LCD controller (PC-S80TE).

### **♦ LCD** controller





(\*): For indoor unit alone (without tank) or indoor unit with other tank (non HITACHI tank), the LCD controller is needed.



# 1.4.3 Accessory code list

## **♦** Room Thermostats

Accessory	Name	Code	Figure
ATW-RTU-01	ON/OFF Thermostat (Receiver + Room Thermostat)	7E543000	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ATW-RTU-02	"Intelligent" Thermostat (Receiver + Room Thermostat)	7E549900	
ATW-RTU-03	2nd temperature Thermostat (Only Room Thermostat) *Only for "Intelligent" Thermostat application	7E549901	PAS 2 K

# **♦** Other accessories

Accessory	Name	Code	Figure
ATW-FWP-01	Kit for installation with tank beside the indoor unit	7E549915	80
WEH-6E	Water electric heater	90500002 (WEH-6E)	
ATW-HSK-01	Hydraulic separator	7E549905	
ATW-3WV-01	3-way valve (Type 1) (Internal thread and spring return)	7E549906	
ATW-3WV-02	3-way valve (Type 2) (External thread and 2 points SPST)	7E549914	
ATW-AOS-01	Auxilliary output signal box (Relay board for additional output signals)	7E549910	
NEW ATW-2KT-02	2nd. temperature kit (*)	7E549917	



Accessory	Name	Code	Figure
ATW-MVM-01	Mixing valve motor	7E549912	
ATW-AQT-01	Aquastat	7E549907	
ATW-2OS-01	Ambient temperature sensor (2nd. outdoor temperature sensor)	7E549909	
ATW-SPS-01	Swimming pool sensor	7E549908	
ATW-WTS-02	Water temperature sensor (Second temperature control)	7E549911	
ATW-WTS-02Y	Universal water temperature sensor (DHW, boiler and electric heater combination)	9E500004	
ATW-WCV-01	Water check valve	9E500014	
DHWT-SWG-01	Security water valve for DHW tank	70544902	
ATW-KNX-01	YUTAKI S/S-80 KNX Interface	7E549913	A Manual Control of State of S
ATW-DPOV-01	Differential pressure overflow valve	7E549916	



### NOTE

(\*): The 2nd temperature kit (ATW-2KT-02) must be installed with the following accessories:

- Mixing valve motor (ATW-MVM-01)
- Water temperature sensor for second temperature control (ATW-WTS-02)
- Aquastat for heating floor protection (ATW-AQT-01)
  All these products are separately sold.



# 2. Unit installation

# Index

2.1.	Outdo	or unit ins	stallation	13
	2.1.1.	Initial che	eck	13
	2.1.2.	Transpor	tation of outdoor unit	14
	2.1.3.	Installatio	on space	15
	2.1.4.		on place provision	
	2.1.5.		parts and installation	
2.2.	Indooi	r unit insta	allation	25
	2.2.1.	Selecting	an installation configuration	25
		2.2.1.1.	Indoor unit and DHW tank configurations	
		2.2.1.2.	Dimensions	
		2.2.1.3.	Service space	
	2.2.2.		notes	
		2.2.2.1.	Reception	
		2.2.2.2.	Flexible water pipes considerations	
	2.2.3.	Removal	of parts during the installation process	
		2.2.3.1.	Removing the indoor unit covers	
		2.2.3.2.	Removing indoor unit electrical box	
	2.2.4.	Installatio	on of Indoor unit alone (Without tank)	
		2.2.4.1.	Water pipes connection to the indoor unit (Space heating pipes)	
		2.2.4.2.	Drain pipes connection	
		2.2.4.3.	Refrigerant piping connection and indoor unit's placing	35
		2.2.4.4.	Water pipes connection to the space heating (Space heating pipes)	
		2.2.4.5.	Power and transmission wiring connection	
		2.2.4.6.	LCD wiring connection	39
		2.2.4.7.	Levelling procedure	40
		2.2.4.8.	Test and check	40
		2.2.4.9.	Cover's assembly	40
2.3.	DHW	tank (optio	onal) installation	41
	2.3.1.	Selecting	g an installation configuration	41
		2.3.1.1.	DHW tank configurations	41
		2.3.1.2.	Dimensions	41
		2.3.1.3.	Service space	42
	2.3.2.	General i	notes	43
		2.3.2.1.	Reception	43
		2.3.2.2.	Flexible water pipes considerations	44
	2.3.3.	Removal	of parts during the installation process	45
		2.3.3.1.	Removing the domestic hot water tank covers	45



2.3.4. (Tank in		of Indoor unit with HITACHI tank rer the indoor unit)	46
•	2.3.4.1.	Water pipes connection to the indoor unit (Space heating pipes)	
	2.3.4.2.	Drain pipes connection	46
	2.3.4.3.	Water pipe connection to the indoor unit (Heating coil pipes)	46
	2.3.4.4.	Refrigerant piping connection and indoor unit's placing	49
	2.3.4.5.	Water pipes connection to the space heating (Space heating pipes)	49
	2.3.4.6.	Water pipes connection to the tank (DHW pipes)	49
	2.3.4.7.	Removing the mounting foot	51
	2.3.4.8.	Tank over the indoor unit assembly	51
	2.3.4.9.	Water pipes connection to the tank (heating coil pipes)	52
	2.3.4.10.	Water pipes connection to the DHW installation (DHW pipes)	52
	2.3.4.11.	Power wiring connection	53
	2.3.4.12.	Tank wiring connection	53
	2.3.4.13.	Levelling procedure	54
	2.3.4.14.	Tank's fixation to the wall	54
	2.3.4.15.	Test and check	54
	2.3.4.16.	Cover's assembly	54
2.3.5. (Tank be		of Indoor unit with HITACHI tank door unit)	55
	2.3.5.1.	Water pipes connection to the indoor unit (Space heating pipes)	
	2.3.5.2.	Drain pipes connection	
	2.3.5.3.	Water pipes connection to the indoor unit (Flexible water pipes kit (ATW-FWP-01))	
	2.3.5.4.	Refrigerant piping connection and indoor unit's placing	58
	2.3.5.5.	Water pipes connection to the space heating (Space heating pipes)	
	2.3.5.6.	Water pipes connection to the tank (DHW pipes)	59
	2.3.5.7.	Water pipes connection to the tank (heating coil pipes)	59
	2.3.5.8.	DHW tank's placing	60
	2.3.5.9.	Connection between the flexible water pipes kit (ATW-FWP-01) and the heating coil pipes a	61
	2.3.5.10.	Water pipes connection to the DHW installation (DHW pipes)	62
	2.3.5.11.	Power wiring connection	62
	2.3.5.12.	Tank wiring connections	62
	2.3.5.13.	Levelling procedure	64
	2.3.5.14.	DHW tank fixation to the wall	65
	2.3.5.15.	Test and check	65
	2.3.5.16.	Cover's assembly	65



### 2.1 Outdoor unit installation

### 2.1.1 Initial check



### CAUTION

- Install the outdoor unit with sufficient clearance around it for operation and maintenance as shown in the next pages.
- Install the outdoor unit where good ventilation is available.
- · Do not install the outdoor unit where exists a high level of oil mist, salty air or sulphurous atmosphere.
- Install the outdoor unit as far as practical (being at least 3 meters) from electromagnetic wave radiator, such as medical
  equipment.
- Keep clearance between units of more than 50 mm, and avoid obstacles that could hamper air intake, when installing
  more than one unit together.
- Install the outdoor unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.
- Do not install the outdoor unit in a place where a seasonal wind directly blows into the outdoor fan.
- For cleaning, use non-inflammable and nontoxic cleaning liquid. Use of inflammable agent may cause explosion or fire.
- Work with sufficient ventilation, for working in an enclosed space could cause oxygen deficiency. Toxic gas may be produced when cleaning agent is heated to high temperature by, e.g., being exposed to fire.
- · Cleaning liquid shall be collected after cleaning.
- · Pay attention not to clamp cables when attaching the service cover to avoid electric shock or fire.
- Check the foundation to be flat, levelled and strongly enough.
- Install the unit in a restricted area not accessible by the general public.
- Aluminium fins have very sharp edges. Pay attention to the fins in order to avoid injury.
- Do not install the indoor units in a flammable environment to avoid a fire or an explosion.
- Do not install the indoor units, outdoor unit, within approximately 3 meters from strong electromagnetic wave radiators, such as medical equipment.
- Do not install the indoor units in a machinery shop or kitchen, where vapour from oil or mist flows to the indoor units. In the worst case, the oil damages the plastic parts of the indoor unit.
- This appliance must be used only by adult and capable people, having received the technical information or instructions to handle this appliance properly and safely.
- Children should be supervised to ensure that they do not play with the appliance.
- Turn OFF all power switches before maintenance is performed.
- · Do not start the cleaning procedures before 5 minutes of the stop of the unit.



### 2.1.2 Transportation of outdoor unit




### DANGER

Do not put any foreign material into the outdoor unit and check to ensure that none exists in the outdoor unit before the installation and test run. Otherwise, a fire or failure will occur.

### **♦** Hanging method

When hanging the unit, ensure the balance of the unit, check safety and lift it up smoothly. Do not remove any packing materials and hang the unit under packing condition with two ropes, as shown in the figure.

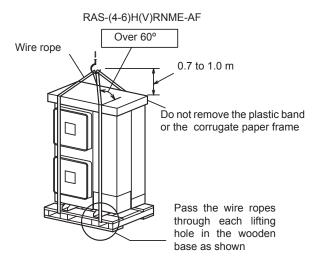




### CAUTION

- · Lift the outdoor unit in its factory packaging with 2 wire ropes.
- For safety reasons ensure that the outdoor unit is lifted smoothly and does not lean.
- Do not attach lifting equipment to the plastic band or the corrugated paper frame, because of the ropes will slip or break the materials.
- Ensure that the exterior of the unit is adequately protected with cloth or paper.

### **♦** Handling unit (center of gravity)

When the unit is lifted manually (using the handles), pay attention to the following points:

- 1 Do not remove the wooden base from the unit.
- 2 To prevent the unit from overturning, pay attention to the center of gravity as shown in the below figure:

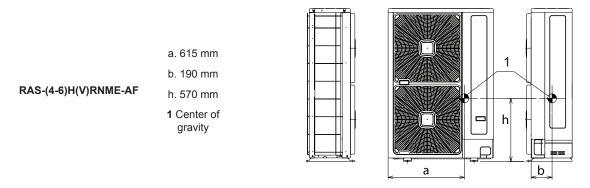

3 Two or more personnel should be used to move the unit.

Net weight (kg)			
RAS-4HVRNME-AF RAS-(5-6)HVRNME-AF RAS-4HRNME-AF RAS-(5-6)HRNME-AF			
103	104	107	108



# 2.1.3 Installation space

# - RAS-(4-6)H(V)RNME-AF

Blocked in Inlet Side		
Upper Side Open		
Single Installation	Multiple Installation (Two units or more)	
2300	2000	
100 mm or more of the side space is acceptable on the service cover side. 200 or more of the back space is acceptable when the right and left sides are open.	Allow 100 mm of space between units. Leave open both right and left sides.	
2050		
Be sure to use the fan direction guide. Leave open both right and left sides.	Be sure to use the fan direction guide. Allow 100 mm of space between units. Leave open both right and left sides.  When subject to direct sunlight on the back wall ensure the length marked with × be 500 or greater.	
Upper Sid	de Blocked	
Single Installation	Multiple Installation (Two units or more)	
2300		
100 mm or more of the side space is acceptable on the service cover side.	Allow 100 mm of space between units. Leave open both right and left sides.	
Z350	<b>A</b> 2350	
Be sure to use the fan direction guide.	Be sure to use the fan direction guide. Allow 100 mm of space between units. Leave open both right and left sides.	
Leave open both right and left sides.	Serial installation allowed up to two units.	

### **Blocked in Inlet Side**

The length A is as shown in the following table:


L	A
0 < L ≤ 1/2H	600 or greater
1/2H < L≤ H	1200 or greater

Be sure to use the fan direction guide. Allow 100 mm of space between units. Leave open both right and left sides. Serial installation allowed up to two units.

### Outlet Side Blocked


### Upper Side Open


Single Installation

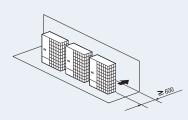

Multiple Installation (Two units or more)

Allow 100 mm of space between units. Both right and left sides shall be open.  $\,$ 

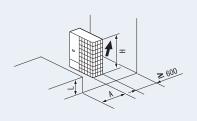

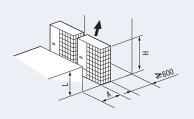

Be sure to use the fan direction guide. Leave open both right and left sides.

Be sure to use the fan direction guide. Allow 100 mm of space between units. Serial installation allowed up to two units. Leave open both right and left sides.

The length A is as shown in the following table:

L	A
0 < L ≤ 1/2H	≤ 200
1/2H < L≤ H	≤ 300

The length A is as shown in the following table:


L	A
0 < L ≤ 1/2H	≤ 250
1/2H < L≤ H	≤ 350


When L > H use a base for outdoor unit to make  $L \le H$ .

Close the base not to allow the outlet air bypassed.

When L > H use a base for outdoor unit to make  $L \le H$ . Close the base not to allow the outlet air bypassed.



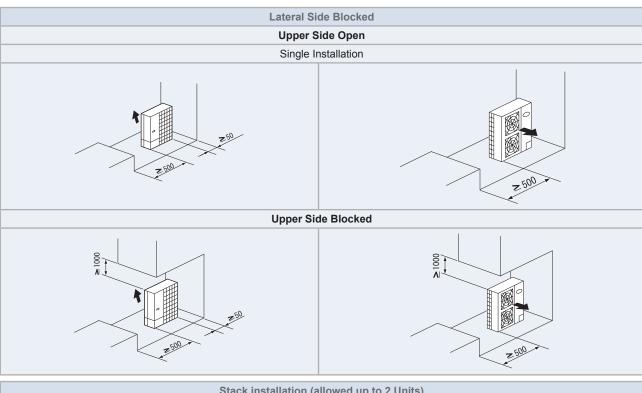

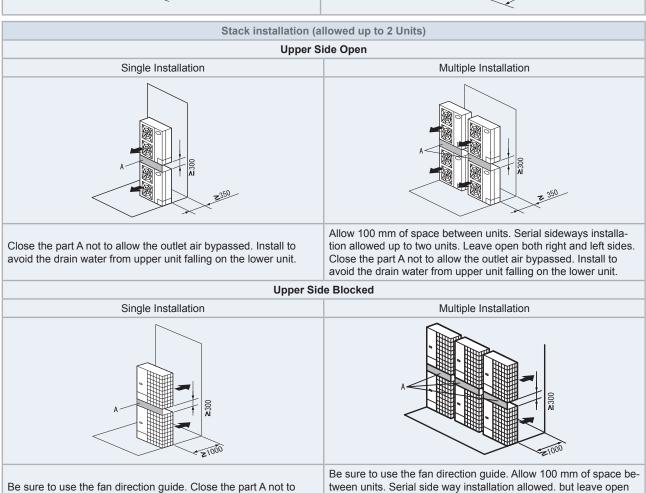

on the lower unit.


both right and left sides. Close the part A not to allow the outlet air

bypassed. Install to avoid the drain water from upper unit falling

upper unit falling on the lower unit.

allow the outlet air bypassed. Install to avoid the drain water from



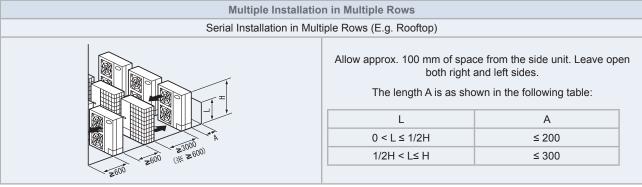




## NOTE

When L > H use a base for outdoor unit to make L = H. Close the base not to allow the outlet air bypassed. Be sure to use the fan direction guide in order to ensure the length marked with  $\times$ .

### 2.1.4 Installation place provision


### **♦** Concrete foundation

1 When installing the outdoor unit, fix the unit by anchor bolts.

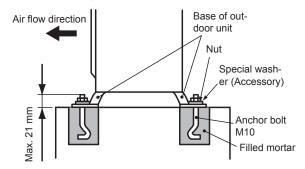

Fix the outdoor unit to the anchor bolts by special washer.

Please, refer to the following figure regarding the location of fixing holes:

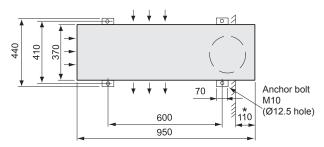





### NOTE

\*: Space for downward piping.

Example of fixing outdoor unit by anchor bolts.

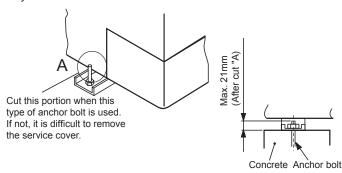

2 Fix the outdoor unit firmly so that declining, making noise, and falling down by strong wind or earthquake is avoided.

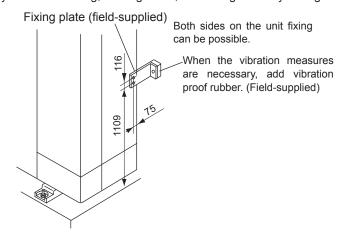


3 During the heating or defrosting operations, drain water is discharged from the unit.

When installing the unit, the location with good drainage should be selected, or establish the drainage.

It is recommended not to install the unit at high place such as on a roof or a veranda, because the water may drip from the unit.


If the unit installation at high place is not avoidable, the drain water should be treated surely by installing additional drain pan. (Especially in water, the drain water may be frozen and cause of injury by slipping.)


4 In case of the drain piping is necessary for the outdoor unit, use the drain-kit (DBS-26: Optional Part).

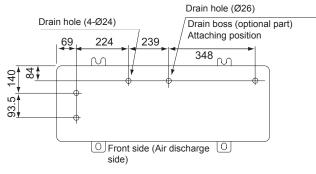

**5** The whole base of the outdoor unit should be installed on a foundation or frame. When using vibration-proof material, it should also be positioned in the same place.


When installing the outdoor unit on a field supplied frame, use metal plates to adjust the frame width for stable installation as shown in the figure below.

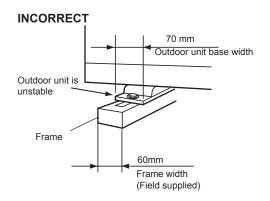

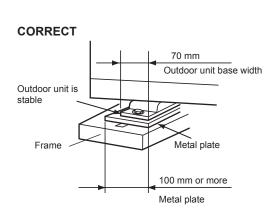


Recommended metal plate size (Field supplied)

- Material: Hot-rolled mild steel plate (SPHC)
- Plate thickness: 4.5 T

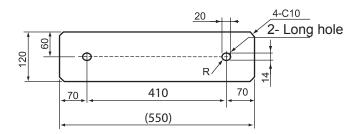

### **♦** Suspended unit

- 1 Suspend the unit as the drawing indicates.
- 2 Ensure that wall can resist the Outdoor unit weight indicated in specification label plate.
- 3 It is recommended to select each foot support to bear the full weight of the unit (in order to consider stress fatigue applied when unit is working too).

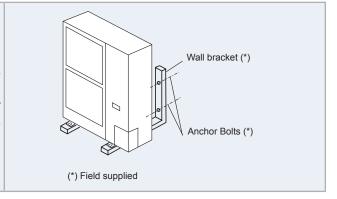



## CAUTION


Pay attention to the following for installation:

- Installation shall ensure that outdoor unit will not incline, vibrate, make noise or fall down by a blast of wind or in an earthquake. Calculate quake-resistance strength to ensure that installation is strong enough against falling. Fix the unit with wires (field supplied) when installing in a location without walls or windbreak and likely exposed to a blast of wind.
- To use a vibration-proof mat, fix four places to the front and back.

### ♦ Installing location where the unit will be exposed to strong wind.

Follow the instructions below to install on the rooftop or a location without surrounding buildings, where strong wind is expected against the product.

- 1 Choose a location where the outlet or inlet side of the product will not be exposed to strong wind.
- **2** When the outlet is exposed to strong wind: Direct strong wind may cause lack of air flow and adversely affect to the operation.

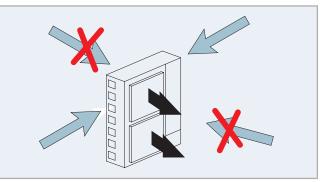



### CAUTION


Excessive strong wind against the outdoor unit outlet may cause inverse rotation and damage the fan and motor.



### 2.1.5 Optional parts and installation

### ◆ Air flow guide, wind guard and snow protection hood


Optional parts		Model	
Air flow guide		AG-335A x 2	
Wind guard		WSP-335A x 2	
Snow protection hood	Zinc plate	Air outlet	ASG-NP335F x 2
		Air inlet of rear side	ASG-NP280B
		Air inlet of side face	ASG-NP280L
	Stainless plate (NSSC 180)	Air outlet	ASG-NP335FS2 x 2
		Air inlet of rear side	ASG-NP280BS2
		Air inlet of side face	ASG-NP280LS2

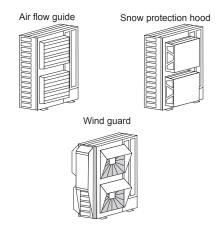

### Air flow guide

Specifications

Model	AG-335A
Quantity	2 per unit
Air discharge direction	Upward (downward), left & right
Material	Weather proof polypropylene resin
Color	Gray
Weight	1.9 kg
Accessories	Fixing screw x 4 [M5 (SUS) x 20]
	Installation manual
Installation restriction	"Wind Guard" or "Snow protection hood" is not available to install with air flow guide. ("Guard net" is avail- able to be installed together.)

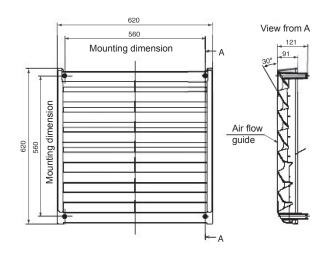


- Attaching example of air flow guide
  - Attach the air flow guide to the air discharge grille with four (4) screws (supplied).
  - The fixing holes are located at 4 positions on the grille. (Screw tightening torque 2.4~3.1N.m)
  - Do not remove the air discharge grille for air flow guide installation.

# $\triangle$

### CAUTION


If the air guide is installed without discharge grille, it may cause injury due to rotating fan.

- Two air flow guides installation

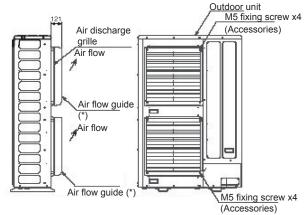

(\*) Air flow direction of both air flow guides should be the same


- Service space (In case of upward air discharge)
  - In case of right and left sides air discharge, enough space for air discharge is required.
  - The downward air discharge is also available. In such case, install the base under the unit to secure enough space for air discharge.
  - In case of serial units installation, air discharge should be upward.

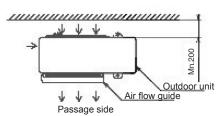

### Wind guard

- Specifications

Model	WSP-335A
Quantity	2 per unit
Material	Galvanized sheet metal + baked painting
Color	Gray (1.oY8.5/0.5)
Weight	5.5 kg
Accessories	Fixing screw x 4 [M5 (SUS) x 12]
	Installation manual
Installation restriction	"Guard net", "Air flow guide" or "Snow protection hood" is not available to install with Wind guard

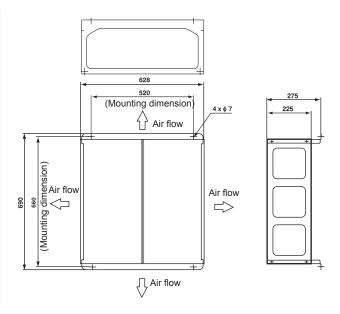


- Attaching example of wind guard
  - Attach the wind guard to the air discharge grille with four (4) screws (supplied).
  - The fixing holes are located at 4 positions on the grille (Screw tightening torque 2.4~3.1N.m).
  - Do not remove the air discharge grille for wind guard installation.




### CAUTION

If the wind guard is installed without discharge grille, it may cause injury due to rotating fan.

- Two windguard covers installation

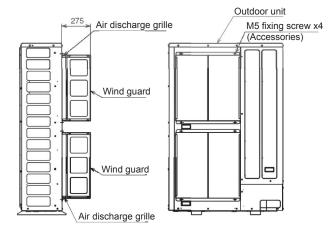


- Service space
  - Both sides of the outdoor unit should be open.
  - No obstacles should be placed in the air discharge side.

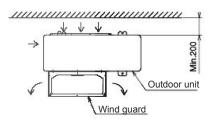


### **Snow protection hood**

- Air discharge hood


No.	Part name	Qty.
0	Right side plate	1
0	Left side plate	1
8	Front panel	1
4	Stay	4

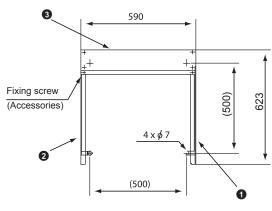

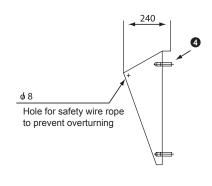


- Rear suction hood

No.	Part name	Qty.
0	Right side plate	1
2	Left side plate	1
3	Upper front panel (Upside)	1
4	Upper front panel (Downside)	1

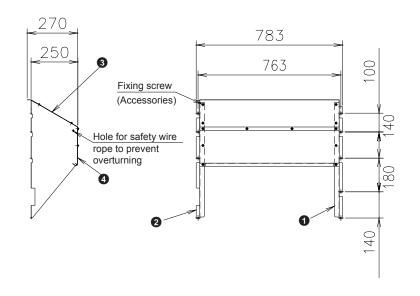


- Left suction hood


No.	Part name	Qty.
0	Right side plate	1
2	Left side plate	1
3	Front panel (Upside)	1
0	Front panel (Downside)	1

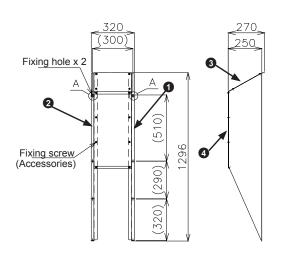

Enlarged view of A (Fixing hole)

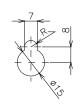

### - Attaching example of snow protection hood

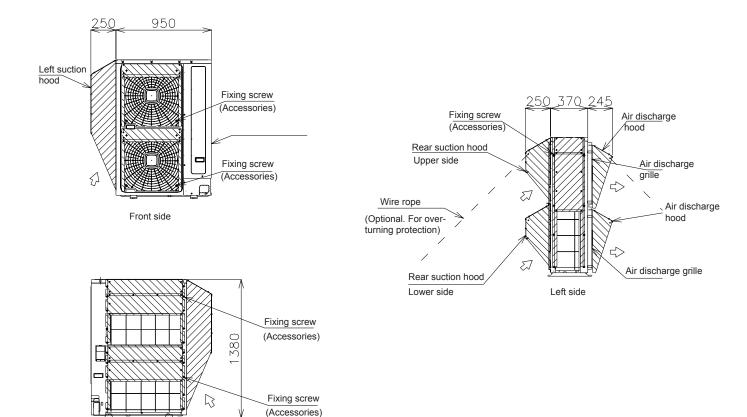

### - Specifications of snow protection hood

Rear side

Product	name	Air disch	arge hood	Rear suc	ction hood	Left suc	tion hood
Model		ASG-NP335F	ASG-NP335FS2	ASG-NP280B	ASG-NP280BS2	ASG-NP280L	ASG-NP280LS2
Quantity		2 pe	r unit		1 pe	r unit	
Material		Bonderized steel sheet	Stainless (NSSC 180)	Bonderized steel sheet Iron	Stainless (NSSC 180)	Bonderized steel sheet Iron	Stainless (NSSC 180)
Color		Gray (1.0Y8.5/0.5 or approximation)	-	Gray (1.0Y8.5/0.5 or approxima- tion)		Gray (1.0Y8.5/0.5 or approximation)	-
Weight		3	kg	14	4 kg	8	kg
Assembling			Kr	ockingdown parts	s (assembled at field	d)	
	Hood	Cor oir diook	orgo port v 1	For rear side	e air intake x 1	For left aids	air intake x 1
	пооц	FOI all disci	narge part x 1	(Upper side x	1, lowe side x 1)	For left side	all illiake x i
Components	Fixing screw	4 (M5x12 ta	pping screw)	11 (M5x14 tapping screw)		8 (M5x12 tapping screw)	
Fixing 6 (M5x14 tapping screw) 6 (M5x14)		24 (M5x14 tapping screw)	24 (M5x14)	12 (M5x12 tapping screw)	12 (M5x14)		
	-		Insta	allation manual			
Installation re	striction	guard" or "Air f	Guard net", "Wind low guide" is not ilable	Ins	stallation with "Guar	d net" is not avail	able
Safety wire ro overturning proposed (optional parts	revention			ASG-	SW20A		




### 2.2 Indoor unit installation

### 2.2.1 Selecting an installation configuration

### 2.2.1.1 Indoor unit and DHW tank configurations

YUTAKI S80 system can work for space heating only or for space heating + DHW. Depending on the desired working mode, the configuration possibilities are the following:

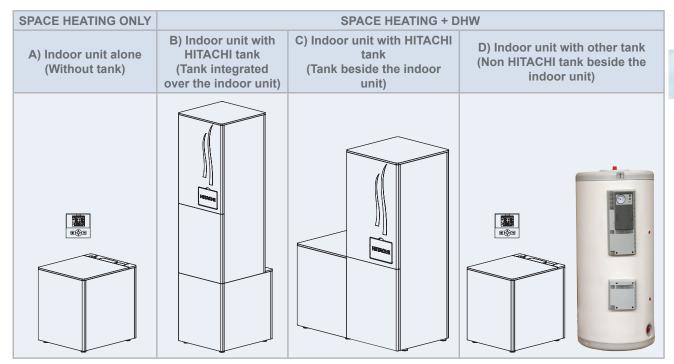



### **IMPORTANT NOTE**

- A) Indoor unit alone (Without tank):
   All the installation information is explained in this section 2.2 Indoor unit installation.
- B) and C) Indoor unit with HITACHI tank:

  The installation information about the appear

The installation information about the space heating connection and indoor unit refrigerant / wiring connection is explained in this section 2.2 Indoor unit installation. For the specific information about DHW connection, refer to the following section 2.3 DHW Tank (optional) installation.

• D) Indoor unit with other tank (Non HITACHI tank beside the indoor unit):

The installation information about the space heating connection and indoor unit refrigerant / wiring connection is explained in this section 2.2 Indoor unit installation. For the specific information about the non HITACHI tank, see its own technical documentation.

Depending on the configuration type, the installation procedure will be different.




### 2.2.1.2 Dimensions

### i NOTE


- Height dimensions are shown with the minimum mounting foot height. These values can be adjusted up to +30 mm.
- All dimension in mm.

### ♦ Indoor unit alone (Without tank)

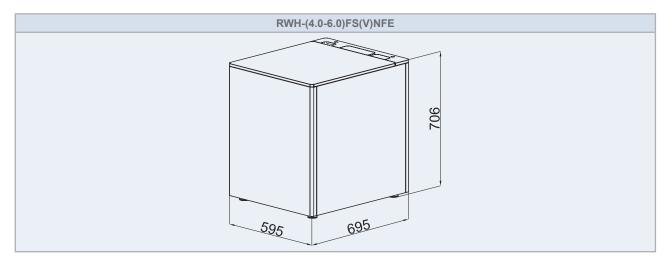

### 2.2.1.3 Service space

### ♦ Indoor unit alone (Without tank)

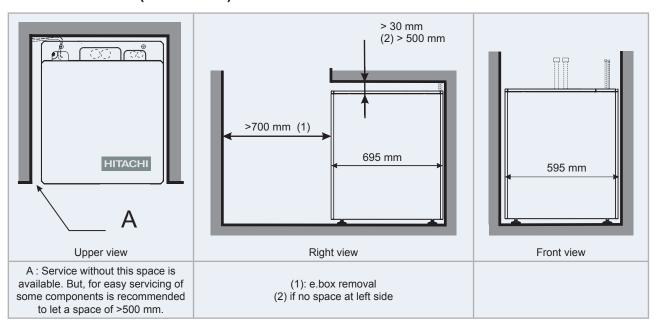



### 2.2.2 General notes

### 2.2.2.1 Reception

### **♦** Components at receipt





### NOTE

- For Indoor unit alone (Without tank) installation and Indoor unit with other tank (Non HITACHI tank beside the indoor unit), the LCD controller (PC-S80TE) is needed.
- For outdoor unit installation information, please refer to the outdoor unit Installation and operational manual.
- If the unit will be installed with the DHW HITACHI tank (optional), please refer to its Installation and operation manual.

### **♦** Selection of the installation location

The indoor unit of the split system with air to water heat pump must be installed following these basic requirements:


- The indoor unit is intended to be installed in an indoor place.
- The indoor unit is prepared to be floor mounted, so make sure that selected floor is flat and is made of a non-combustible surface, strong enough for supporting the indoor weight and also the DHW tank's weight completely water filled (in case of indoor unit with HITACHI tank integrated over the indoor unit).
- Be sure to maintain the recommended servicing space for future unit servicing and guarantee enough air circulation around the unit. (See Service space section)
- Take into account that two shut-off valves (field supplied) must be installed at the indoor unit inlet/outlet connections.
- Protect the indoor unit against the entry of small animals (like rats) which could making contact with the wires, the drain pipe, electrical parts and may damage unprotected parts, and at the worst, a fire will occur.
- · Install it in a no-frost environment.
- Do not install the indoor unit in a location with very high humidity.

- Do not install the indoor units where electromagnetic waves are directly radiated to the electrical box.
- Install the unit in a place where in case of water leakage, any damage to the installation space cannot be produced.
- If the selected configuration is Indoor unit alone (Without tank) and Indoor unit with other tank (Non HITACHI tank beside the indoor unit), it will be necessary a LCD controller installation place.
- Install noise filter when the power supply emits harmful noises
- To avoid fire or explosion, do not install the unit in a flammable environment.
- The air to water heat pump must be installed by a service technician. The installation must comply with local and European regulations.
- Try to avoid to put any objects or tools over the indoor unit.

### Unpacking

All units are supplied with a wooden base, packed by a cardboard box and plastic bag.

- 1 Firstly to unpack it, place the unit on the assembly area as close as possible to its final installation location, to avoid damages in transport. Two persons are required.
- 2 Cut the strapping bands and remove the tapes (in two corners of the packing).
- 3 Remove the carton casing band (wrapping and cap).
- **4** Remove the plastic bag covering the unit.
- 5 Remove the wooden base.

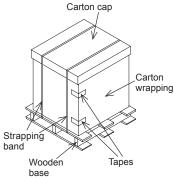



### NOTE

There are four adjustable mounting foot on the bottom of the unit. Each one can be adjusted up to 30 mm, but keep the mounting foot in the factory supplied position until the unit has been installed in its final position.

### **♦** Factory-supplied indoor unit components

Accessory	Image	Qty.	Purpose
Flexible water pipes (1")		2	Space heating pipes (For space heating connection)
Gaskets		4+1	Two gasket for each flexible water pipe. One additional as spare part.
Refrigerant liquid / gas piping ac- cessory		2	To make easy the connection to the installation refrigerant piping.  One for liquid connection and other for gas connection.
Installation manual		1	Installation and operation unit instructions
Declaration of conformity	-	1	-




#### NOTE

- The previous accessories are supplied inside the indoor unit, and are accessible removing the indoor unit upper cover.
- Additional refrigerant piping (field supplied) for connections to outdoor unit needs to be available.
- If some of these accessories are not packed with the unit or any damage to the unit is detected, please contact your dealer.

### ♦ Indoor unit main parts (Descriptions)


No.	Part			
1	Indoor unit front cover			
2	Indoor unit left cover			
3	Indoor unit right cover			
4	Indoor unit upper cover			
5	Indoor unit back cover			
6	Indoor unit cover for upper piping outlet			

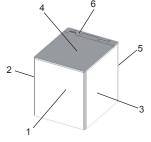

### 2.2.2.2 Flexible water pipes considerations

Process for water pipes connection (to avoid water leakage).

1 Put a gasket inside the nut.

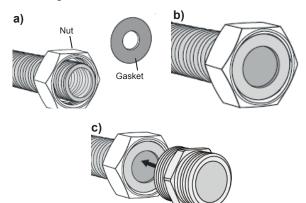

- 2 Check that the nut turn free.
- **3** Be sure that the tube is aligned with the connection.
- 4 IMPORTANT! Be sure that the gasket is in contact and is seating uniformly with the connection.
- **5** By hand rotates smoothly the nut and screw it into the connection. The screwing by hand not have to offer much resistance, so if this happen, loosens the nut and check that the water tube and the gasket position are correct and proceed again with point 3 and 4.
- **6** With a spanner finishes the screwing of the nut insuring the sealing but without damaging the gasket.



### NOTE

- There's one spare gasket for the space heating and one for the DHW (in case of installation with domestic hot water tank).
- Be careful with the flexible water pipes insulation protection. Sharp edges of the units could damage it when installing the pipes.



### CAUTION

Always bend the water tubes with a radius > 90 mm.



- The tube will not spring back.
- Don't install the stainless steel tube in a twisted position.
- Don't bend these stainless steel tube more often than required to avoid breaking it.





### 2.2.3 Removal of parts during the installation process

### 2.2.3.1 Removing the indoor unit covers



### NOTE

- Front cover need to be remove for any task inside the indoor unit.
- · Back cover no needs to be removed.

### Removing the indoor unit front cover

1 Remove the indoor unit front cover by pulling it, preferably by lower part of the front cover.



### **♦** Removing the indoor unit upper cover

- 1 Remove the indoor unit front cover
- 2 Unscrew the 2 front fixing screws.



**3** Pull the indoor unit upper cover forward and then remove it.



### **♦** Removing the indoor unit left cover

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 3 screws.



3 Remove the indoor unit left cover.





### NOTE

When reassembling, take into account that this cover is not symmetric. Upper and lower hooks are not at the same distance from the central hook.

### Removing the indoor unit right cover

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 3 screws.



3 Remove the indoor unit right cover.





### NOTE

When reassembling, take into account that this cover is not symmetric. Upper and lower hooks are not at the same distance from the central hook.

### **♦** Removing the auxiliary indoor unit covers

There are other indoor unit covers which its removing can ease the service work.

# Removing the indoor unit cover for upper piping outlet

1 Unscrew the 2 upper side fixing screws.



2 Pull the indoor unit cover for upper piping outlet backward and remove it.



# Removing the indoor unit cover's protection for the draining of the tank

- 1 Remove the indoor unit front cover.
- 2 Remove the indoor unit upper cover.
- 3 Unscrew the 2 wing screws.



4 Remove the indoor unit cover's protection.






### 2.2.3.2 Removing indoor unit electrical box



### DANGER

- Disconnect the unit from the power supply before touching any of the parts in order to avoid an electrical shock.
- Do not touch the switch for DHW tank heater operation when handling the electrical box. Keep the position of this switch in factory setting position ("Automatic" operation).

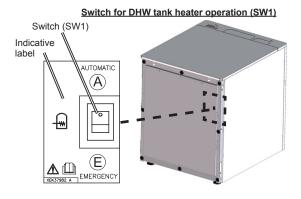


### Remove the electrical box

- Remove the indoor unit front cover.
- Unscrew the 4 front screws of the electrical box.



3 Undo the power wiring looping that must be done in the installation procedure before rotating/removing the electrical box.

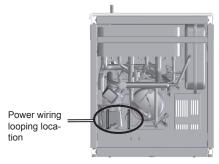

- Take out the electrical box from the indoor unit until it has passed the edge. Choose one of the following steps:
  - a. Electrical box can be rotated 90° approximately, making easy the indoor unit component's accessibility, without the necessity to remove all the electrical box.
  - **b.** If it is needed, the electrical box can be completely extracted by disconnecting all the necessary wiring. Please, refer to the Servicing chapter of the Service Manual for the specific instructions.





### Remove the internal electrical box covers




### CAUTION


When handling the internal electrical or inverter box, take care of components in order to avoid damaging it.

### Internal electrical box cover (Front cover)

Unscrew the 7 screws of the internal electrical box cover.

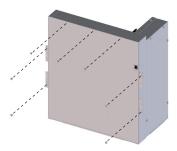


2 Remove the internal electrical box cover.

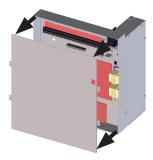


### Internal inverter box cover (Right cover)

1 Unscrew the 5 screws of the internal inverter box cover.

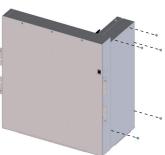

2 Remove the internal inverter box cover.

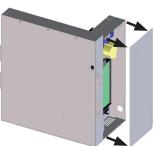




### 2.2.4 Installation of Indoor unit alone (Without tank)



### NOTE

Please, try to perform all this procedure following all the steps in the exact order which they are presented below.

Before connecting the flexible water piping, and the refrigerant liquid/gas piping it must be decided its outlet position.

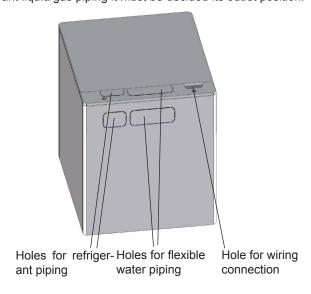



- When making the holes by cutting along the guideline of the cover, take care with the remaining parts and remember cutting it in order to avoid injuring.
- Do not make more holes than necessary to prevent small animals (like rats) from entering.
- If possible, try to insulate the part of the holes unoccupied by the pipes.
- Take care with the pipes insulation when taking the flexible water pipes through the holes as the structural beams are sharp and the pipes could be damaged.

### **Installation procedure**


- 1 Water pipes connection to the indoor unit (Space heating pipes).
- 2 Drain pipes connection.
- 3 Refrigerant piping connection and indoor unit's placing.
- **4** Water pipes connection to the space heating (Space heating pipes).
- **5** Power and transmission wiring connection.
- **6** LCD wiring connection.
- 7 Levelling procedure.
- 8 Test and check.
- 9 Cover's assembly.


### 2.2.4.1 Water pipes connection to the indoor unit (Space heating pipes)

Place the indoor unit in the available assembly space and follow these instructions:

### **♦** Flexible water pipes identification

Indoor unit is provided with two flexible water pipes (space heating pipes) for connection between the space heating and the indoor unit (to the T-branch and to the 3-way valve).

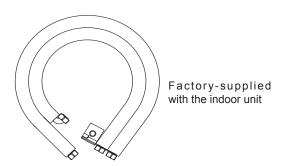

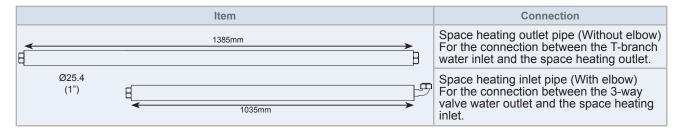




### **♦** Connection procedure


**1** Remove the indoor unit cover's protection to facilitate the connection procedure.




2 Remove the plastic plugs (space heating connections) from the 3-way valve and the T-branch. If necessary, disconnect the 3-way valve motor (upper part) to ease the installation procedure.

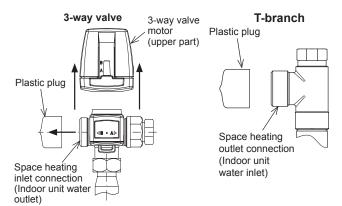


3-way valve connection for space heating inlet T-branch connection for space heating outlet

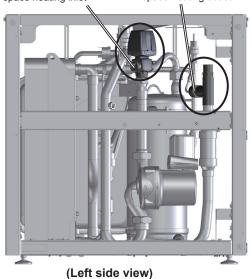


3 Introduce from outside of the unit the space heating inlet pipe (with elbow) (1") through the preferable outlet cover hole and connect the elbow end to the 3-way valve connection for space heating inlet.

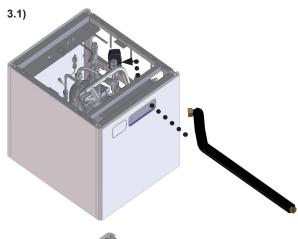

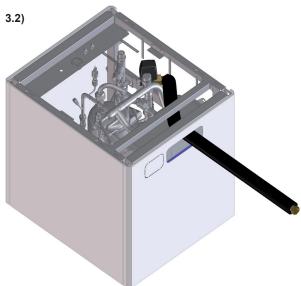



3-way valve connection for space heating inlet

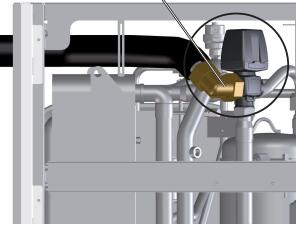


(Left side view)

4 Introduce from outside of the unit the space heating outlet pipe (without elbow) (1") through the preferable outlet cover hole and connect it to the T-branch connection for space heating outlet passing it under the suction compressor and air purger's pipes.

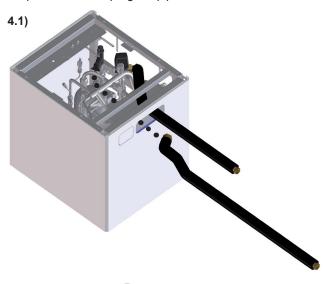


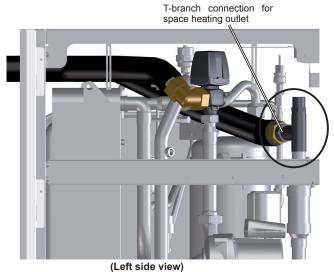



- **5** Reconnect the 3-way valve motor.
- **6** Reassembly the indoor unit cover's protection.

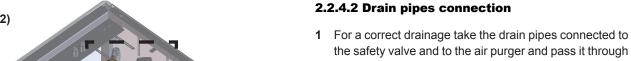

the safety valve and to the air purger and pass it through the base hole near the heat exchanger. In case of drain pipe for safety valve, place it as far as possible from the indoor unit (\*).

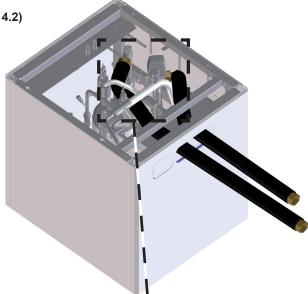

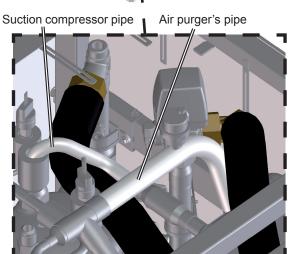


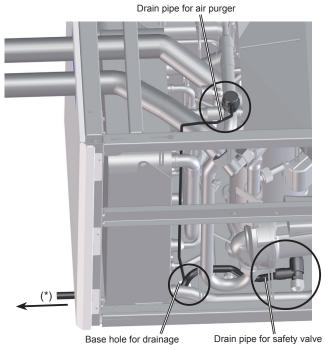

# 2.2.4.3 Refrigerant piping connection and indoor unit's placing

There are two options:

- A) Back refrigerant piping outlet
- B) Upper refrigerant piping outlet.

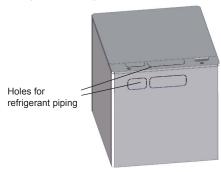



### NOTE

- Take into account the position where the LCD controller will be installed, because the wiring length of the LCD controller is only 4 meters approximately.
- Take into account the recommended service space.
- If the domestic hot water tank is integrated with the indoor unit, follow these steps before installing it.

### **♦** Refrigerant piping connection accessory

YUTAKI S80 is provided with an accessory for the liquid/gas refrigerant piping connection. This accessory assist in the refrigerant pipe connection, allowing an easy assembly in both outlet configurations (back or upper outlet).




### NOTE

- All the following instructions are for the use of annealed to half hard or hard AC/R copper tube (example in bar).
- The images of the accessories could be slightly different than real accessories.

### A) Piping connection - Back outlet

Step 0 - Identification

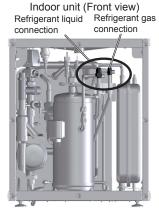






# i

### NOTE

(1): This accessory must be insulated before finishing the whole installation procedure, but in this section, some images are showing the accessory without insulation for more comprehensible image explanation.

### · Step 1 - Cut the accessory

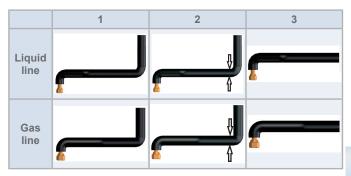






### NOTE

Cut as close as possible to the elbow as indicated in the figure.

Step 2 - Indoor unit, identify the position of connecting pipes.

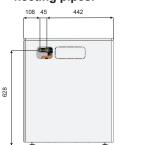


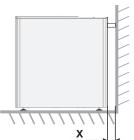

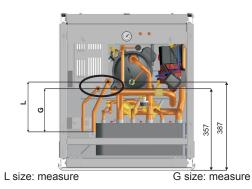

• Step 3 - Field installation, determinate the piping connection position.

A size (Gas line): 387 + 18 - G + X (1) B size (Liquid line): 357 + 10 - L + X (1)

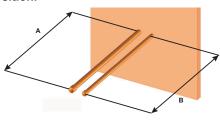




### NOTE

(1): 18/10 mm for A/B sizes respectively is the field piping length which is introduced into the accessory connection.

 Step 4 - Joint and brazing the accessory with the field refrigerant pipes.

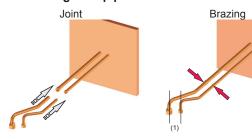



(1): Ensure that the nuts are in vertical position.

Step 5 - Positioning of the indoor unit and connection nut.

### Indoor unit movement

To introduce the refrigerant lines in the indoor unit through the back outlet window (1).





### NOTE

If the indoor unit back hole for refrigerant piping is not totally aligned with the refrigerant lines, the indoor unit's height can be modified by adjusting the height of the mounting foots. Please, refer to the **Levelling procedure** in this chapter for the detailed information about the mounting foots.

### Face the nuts

in the gas and liquid refrigerant pipe connection (2).



### Fix the nuts

according to the corresponding torque (3).





### NOTE


- Prior to cross the back outlet window, push the refrigerant pipes/lines in order to avoid to interfere with the back cover
- When the nuts connection are inside the indoor unit, push up the piping lines, approximately 15 mm, in order to avoid the interference with the expansion vessel tube.
- Use two spanners to perform the connections.
- Step 6 Final operation Insulations.

Insulate the field pipes



Step 0 - identification.

Indoor unit (Front view)
Refrigerant liquid Refrigerant gas connection connection

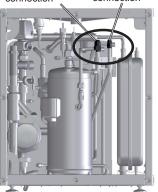



Accessory




### NOTE


(1): This accessory must be insulated before finishing the whole installation procedure, but in this section, some images are showing the accessory without insulation for more comprehensible image explanation.



### Step 1 - Assembly the accessory in the indoor unit.

From inside the indoor unit, go through the upper outlet window with the accessory tube connection.

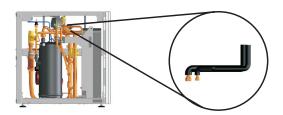

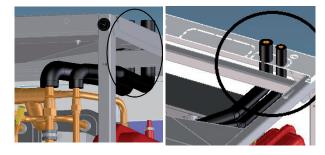

- Step 2 Positioning the accessory connection nut.
  - Gas refrigerant pipe connection (ø15.88)
  - Liquid refrigerant pipe connection (ø9.52)
  - Fix the nuts smoothly









### NOTE


Use two spanners to perform the connections.

Step 3 - Indoor unit, identify the position of connecting pipes.

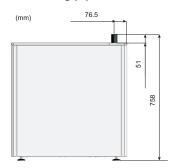

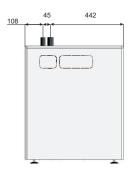

Step 4 - Field installation, determine the piping connection position.

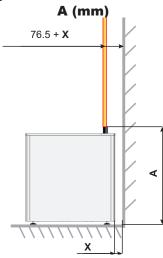


Liquid refrigerant pipe connection ( $\emptyset 9.52$ ) = 758 - 10 = 748Gas refrigerant pipe connection ( $\emptyset 15.88$ ) = 758 - 18 = 740




### NOTE

Size A is calculated with mounting foot at minimum height.

Step 5 - Positioning of the indoor unit.

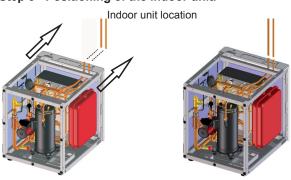

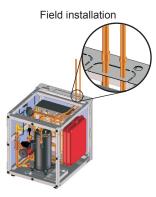




### NOTE


- In order to allow to connect the accessory pipe and field piping, slacken nuts, insert the field pipe inside the accessory pipe connection and tighten nuts.
- Use two spanners to perform the nuts connection.

If the refrigerant liquid/gas piping accessory is not totally aligned at the same height than the refrigerant lines, the indoor unit's height can be modified by adjusting the height of the mounting foots. Please, refer to the Levelling procedure in this chapter for the detailed information about the mounting foots.

### Step 6 - Piping braze and fixing nuts

Brazing the field tubes

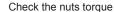

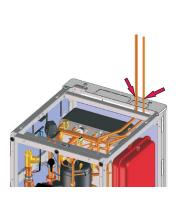







### NOTE

Use two spanners to perform the nuts connections.

### Step 7 - Final operations - Insulations.

If other operations are done (like water piping connections, electrical wiring, etc.) proceed with the following:

Insulate the field pipes



## 2.2.4.4 Water pipes connection to the space heating (Space heating pipes)

Connect the space heating pipes (one end already connected to the indoor unit) to the shut off valves of the space heating inlet and outlet (field supplied).

## 2.2.4.5 Power and transmission wiring connection

### Safety instructions



### NOTE

Check the requirements and recommendations in the chapter Electrical and control settings.




### **DANGER**

- Do not connect the power supply to the indoor unit and DHW tank prior to filling both circuits with water and checking water pressure and the total absence of any water leakage.
- Do not connect or adjust any wiring or connections unless the main power switch is OFF.
- When using more than one power source, check and ensure that all of them are turned OFF before operating the indoor unit.
- Wait for 3 minutes after switching off the power of the unit before any electrical work. This is necessary to ensure the discharge of internal capacitors in order to avoid electrical shock.
- Check to ensure that the indoor fan (inverter box) and the outdoor fan have stopped before electrical wiring work or periodical check is performed.
- Avoid wiring installation in contact with the refrigerant pipes, water pipes, edges of plates and electrical components inside the unit to prevent damage, which may cause electric shock or short circuit.



### CAUTION

- Use a dedicated power circuit for the indoor unit. Do not use a power circuit shared with the outdoor unit or any other appliance.
- Make sure that all wiring and protection devices are properly selected, connected, identified and fixed to the corresponding terminals of the unit, specially the protection (earth) and power wiring, taking into account the applicable national and local regulations.
- Protect the indoor unit against the entry of small animals (like rodents) which could damage the drain pipe and any internal wire or any other electrical part, leading to electric shock or short-circuit.
- Keep a distance between each wiring terminal and attach insulation tape or sleeve as shown in the figure.

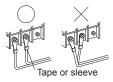


### **◆** Connection procedure


Access to the electrical box before performing the next steps:

1 Using the appropriate cable, connect the power circuit to the appropriate terminals as shown on the wiring label and the illustration below. Connect the power supply cables L1 and N (for 230V 50Hz) or L1, L2, L3 and N (for 400V 50Hz) to the terminal board (TB1), and the earth conductor to the earth screw in the electrical box base plate.


### TERMINAL BOARD 1 (TB1)

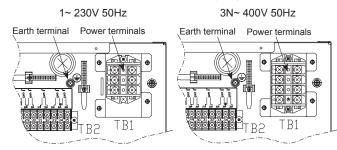

2 Connect the transmission wires between outdoor and indoor unit to the terminals 1 and 2 on the terminal board 2 (TB2).

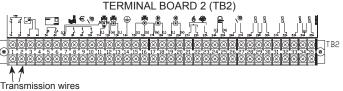

**3** Pass the electrical wiring through the clamps placed in the upper part of the indoor unit.

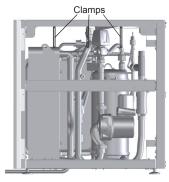


**4** Perform a looping in the wiring through the clamps placed below the indoor unit cover's protection.





### NOTE


This is done in order to ensure the electrical box removing without problems with the power wiring. In this case, undo the wiring looping before removing the electrical box. **5** Take out the electrical wiring by the hole for wiring connection placed on the back side of the unit.

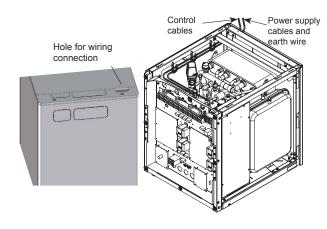


### 2.2.4.6 LCD wiring connection


For indoor unit alone (without tank), it must be used the HITACHI LCD user's interface (PC-S80TE) supplied as accessory with a connector cable. The installation must be as follows:

1 Connect the LCD connector cable (supplied with PC-S80TE) to the wire-to-wire connector in the electrical box back side (CN28).

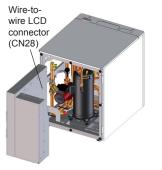

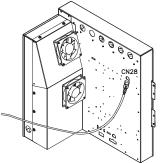


**2** Pass the connector cable through the clamps placed in the upper part of the indoor unit.

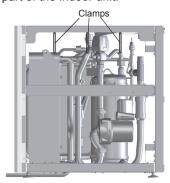

3 Take out the connector cable by the hole for wiring connection placed on the back side of the unit.



**4** Using a flat-head screwdriver, separate the control unit bracket from the front section as indicated.

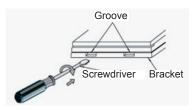

5 Connect the free end of the LCD connector cable (whose other end had been connected before to the electrical box) to the PCB of the LCD controller. Then, reassembly the LCD covers.





### CAUTION

Do not touch the micro and other components on LCD controller PCB. It is the malfunction protection by static electricity.

**6** Finally, fix the LCD controller back cover to the wall at an optimum height and close the LCD cover.

### 2.2.4.7 Levelling procedure

Once the indoor unit connections have finished, adjust the height of the mounting foot to align perfectly the refrigerant piping outlet to the installation connection.



### NOTE

- · Adjust only the necessary mounting foot of the unit.
- Start with all four feet screwed in as far as possible (factory supplied position).
- Two people are necessary for the levelling procedure.


Follow the process:

1 Turn the mounting foot to extend the height (use the hexagon or slot designed for this purpose in the shaft end).



### CAUTION

- Take care do not turn the weld nut when turning the mounting foot. Use an slot with a height profile lower than 5 mm.
- Never work over one foot at the same time. When finishing, all 4 locknuts must be tightened firmly.

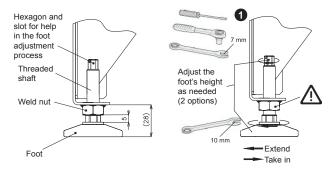

### 2.2.4.8 Test and check

Before assembling the covers, test and check the following items:

- Water leakage
- · Refrigerant leakage
- · Electrical connection
- •



### NOTE

Please refer in this document to chapter 3 Piping work and refrigerant charge for water filling and refrigerant charge of the indoor unit and chapter 8 Commissioning for the commissioning procedure of the indoor unit and refer to the Outdoor unit Installation and Operation manual for the specific details about refrigerant charge tasks if necessary.



### DANGER

DO NOT CONNECT THE POWER SUPPLY TO THE IN-DOOR UNIT AND DHW TANK PRIOR TO FILLING BOTH CIRCUITS WITH WATER AND CHECKING WATER PRESSURE AND THE TOTAL ABSENCE OF ANY WA-TER LEAKAGE.

### 2.2.4.9 Cover's assembly

Finally, reassembly all the cover's removed.




### 2.3 DHW tank (optional) installation

### 2.3.1 Selecting an installation configuration

### 2.3.1.1 DHW tank configurations

DHW tank has the following installation configuration possibilities with the YUTAKI S80 indoor unit:

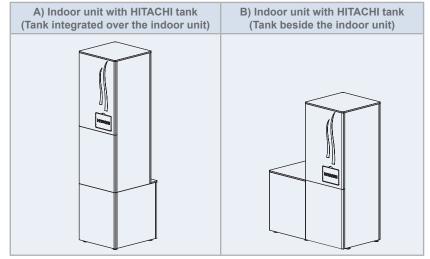



### IMPORTANT NOTE

All the installation information about DHW connection is explained in this section 2.3 DHW Tank (optional) installation.

The installation information about the space heating connection and indoor unit refrigerant / wiring connection is explained in section 2.2 Indoor unit installation.


Depending on the configuration type, the installation procedure will be different.

### 2.3.1.2 Dimensions


### i NOTE

- Height dimensions are shown with the minimum mounting foot height. These values can be adjusted up to +30 mm
- · All dimension in mm.

# ♦ Indoor unit with HITACHI tank (Tank integrated over the indoor unit)

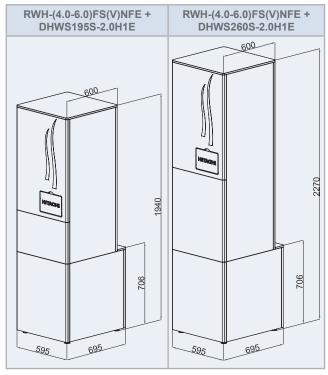


# ◆ Indoor unit with HITACHI tank (Tank beside the indoor unit)

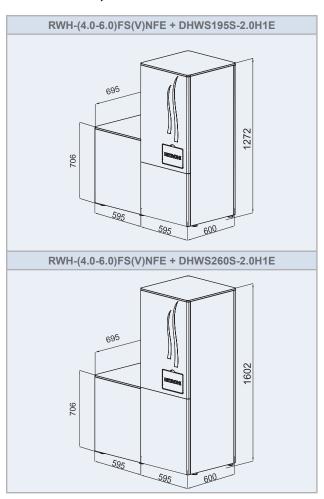


### 2.3.1.3 Service space

### ◆ Indoor unit with HITACHI tank (Tank integrated over the indoor unit)

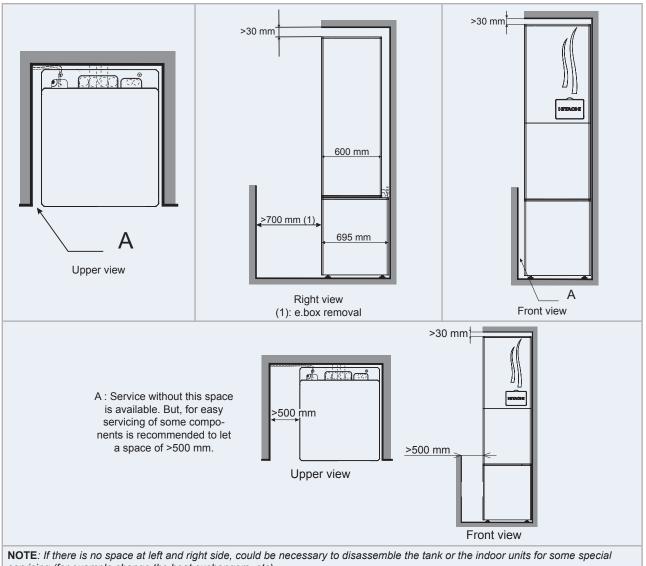

servicing (for example change the heat exchangers, etc)

### Indoor unit with HITACHI tank (Tank beside the indoor unit)

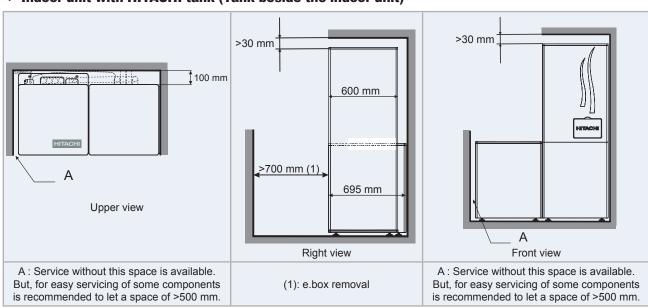



### 2.3.2 General notes

### 2.3.2.1 Reception

### **♦** Components at receipt





### NOTE

The LCD controller (PC-S80TE) is integrated on the DHW tank.

### Selection of the installation location

The domestic hot water tank must be installed following these basic requirements:

- The tank is intended to be installed in an indoor place.
- The tank is prepared to be integrated over the YUTAKI S80 indoor unit, so make sure that selected floor is flat and is made of a non-combustible surface, strong enough for supporting the indoor weight and also the DHW tank's weight completely water filled.
- The tank can be also floor mounted (Tank beside the indoor unit both left or right sides). In this case, try to keep an access point for the connection of the dedicated Flexible Water Pipes Kit (ATW-FWP-01).
- Be sure to maintain the recommended servicing space for future unit servicing. (See Service space section)
- It is necessary to plan a fixing point between the wall and the DHW tank (See factory supplied accessory intended for this purpose).
- Take into account the space needed to install the necessary security valve (DHWT-SWG-01 accessory), which must be installed at the DHW inlet connection of the tank (as close as possible to the tank). 1 shut-off valve (field supplied) must be also installed at the DHW outlet connection.



### NOTE

For more details, please refer to the section DHW hydraulic circuit.


- Protect the tank unit against the entry of small animals (like rats) which could making contact with the wires and electrical parts and may damage unprotected parts, and at the worst, a fire will occur.
- · Install the tank in a no-frost environment.

- Install the DHW tank as far as possible from all sources of electromagnetic wave radiation.
- Install the tank in a place where in case of water leakage, any damage to the installation space cannot be produced.
- To avoid fire or explosion, do not install the set in a flammable environment.
- The tank must be installed by a service technician.
   The installation must comply with local and European regulations.

### Unpacking

The DHW tank is supplied with a wooden base, packed by a cardboard box and plastic bag.

- 1 Firstly to unpack it, place the tank on the assembly area as close as possible to its final installation location, to avoid damages in transport. Two persons are required.
- 2 Cut the strapping bands and remove the tapes (in two corners of the packing).
- 3 Remove the carton casing (wrapping and cap). Strap band
- 4 Remove the plastic bag covering the unit.
- **5** Remove the wooden base.

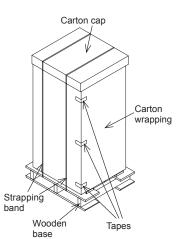



### NOTE

There are four adjustable mounting foot on the bottom of the domestic hot water tank. Each one can be adjusted up to 30 mm but keep them in the factory supplied position until the DHW tank has been installed in its final position.

# **♦** Factory-supplied domestic hot water tank components

Accessory	Image	Qty.	Purpose
Flexible water pipe (3/4")		2	Heating coil pipes (For connection between indoor unit and domestic hot water tank)
Flexible water pipe (3/4")		2	DHW pipes (For tank and DHW connection)
Bolts M10		4	For fixing between indoor unit and DHW tank
Gasket	0	8+1	Two gasket for each flexible water pipe.
			One additional as spare part
Wall fixing accessory	Ī	2	For fixing the DHW tank to the wall.
Installation manual		1	Installation and operation unit instructions
Declaration of conformity	-	1	-



### NOTE

- The previous accessories are supplied inside the DHW tank, and are accessible removing the tank lower front cover.
- If some of these accessories are not packed with the tank or any damage to the tank is detected, please contact your dealer.


### **♦ DHW tank main parts (Descriptions)**

No.	Part	.5
1	Tank upper front cover	
2	Tank lower front cover	
3	Tank left cover	3
4	Tank right cover	
5	Tank upper cover	1
6	Tank back cover	8 Prairie
7	User's interface service cover	0
8	LCD user's interface	2
9	Pressure gauge	

### 2.3.2.2 Flexible water pipes considerations

Process for water pipes connection (to avoid water leakage).

1 Put a gasket inside the nut.

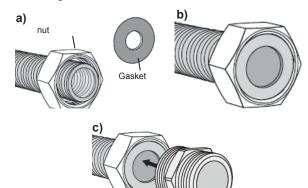

- 2 Check that the nut turn free.
- **3** Be sure that the tube is aligned with the connection.
- **4** IMPORTANT! Be sure that the gasket is in contact and is seating uniformly with the connection.
- 5 By hand rotates smoothly the nut and screw it into the connection. The screwing by hand not have to offer much resistance, so if this happen, loosens the nut and check that the water tube and the gasket position are correct and proceed again with point 3 and 4.
- **6** With a spanner finishes the screwing of the nut insuring the sealing but without damaging the gasket.




### NOTE

- There's one spare gasket for the DHW connections.
- Be careful with the flexible water pipes insulation protection. Sharp edges of the units could damage it when installing the pipes.



### CAUTION

Always bend the water tubes with a radius > 90 mm.

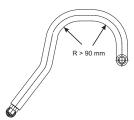

- The tube will not spring back.
- Don't install the stainless steel tube in a twisted position.
- Don't bend these stainless steel tube more often than required to avoid breaking it.





### 2.3.3 Removal of parts during the installation process

### 2.3.3.1 Removing the domestic hot water tank covers



### NOTE

Back cover, left cover, right cover and upper cover no need to be removed unless tank's insulation wants to be removed.


### **♦** Removing the tank lower front cover

1 Remove the tank lower front cover only by pulling it out. 1 Open the LCD user's interface service cover.




When reassembling, take into account that this cover is not symmetric. Upper and lower hooks are not at the same distance from the upper and lower cover edges.

### **♦** Removing the tank upper front cover

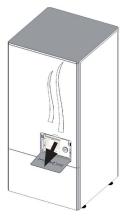

2 Unscrew the 2 screws with the nylon washers between the screw and the cover.

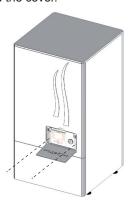

3 Remove the tank lower front cover only by pulling it out.





Take care, do not damage the LCD when removing the service cover.



# 2.3.4 Installation of Indoor unit with HITACHI tank (Tank integrated over the indoor unit)



### NOTE

Please, try to perform all this procedure following all the steps in the exact order which they are presented below.

### **Installation procedure**

- 1 Water pipes connection to the indoor unit (Space heating pipes).
- 2 Drain pipes connection.
- 3 Water pipe connection to the indoor unit (heating coil pipes).
- 4 Refrigerant piping connection and indoor unit's placing.
- **5** Water pipes connection to the space heating (Space heating pipes).
- 6 Water pipe connection to the tank (DHW pipes).

- **7** Removing the mounting foot.
- 8 Tank over the indoor unit assembly.
- **9** Water pipe connection to the tank (heating coil pipes).
- **10** Water pipe connections to the DHW (DHW pipes).
- **11** Power wiring connection.
- 12 Tank wiring connection.
- 13 Levelling procedure.
- 14 Tank's fixation to the wall.
- 15 Test and check.
- 16 Cover's assembly.

### 2.3.4.1 Water pipes connection to the indoor unit (Space heating pipes)

Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit.* 


### 2.3.4.2 Drain pipes connection


Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit*.


### 2.3.4.3 Water pipe connection to the indoor unit (Heating coil pipes)

### **♦** Flexible water pipes identification

The DHW tank is factory supplied with four water pipes: two water pipes (heating coil pipes) to connect with the indoor unit (to the T-branch and to the 3-way valve) and other two (DHW pipes) for connection with the DHW tank. It is necessary to identify which are the two pipes for connection to the indoor unit and which are the other two pipes for connection to the DHW tank.

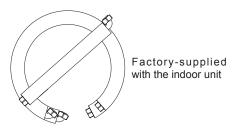

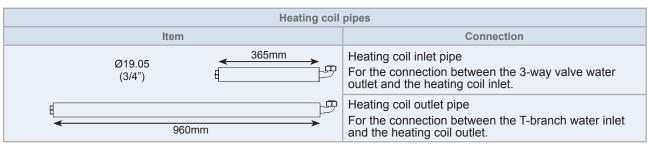

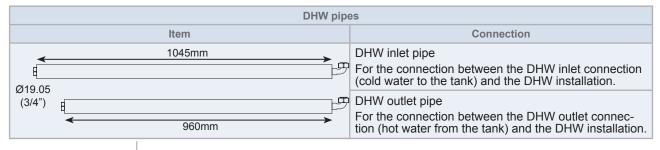




### **Connection procedure**

Perform the flexible water pipes connection between indoor unit and domestic hot water tank (Indoor unit water connections) as follows:

1 Remove the indoor unit cover's protection to facilitate the connection procedure.



2 Remove the metal plugs (Heating coil connections) from the 3-way valve and the T-branch. If necessary, disconnect the 3-way valve motor (upper part) to ease the installation procedure.

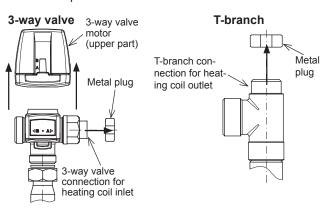


3-way valve connection for heating coil outlet heating coil inlet

T-branch connection for




3 Before performing the water pipe connections, bend the pipes approximately as in the following figures. By this way, the pipe end which will be connected to the tank's heating coil, will be placed closer to its final connection position.

### Recommended position of the heating coil inlet pipe (short pipe 365 mm tube length)

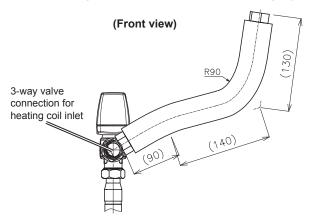


### Recommended position of the heating coil outlet pipe (long pipe 960 mm tube length)

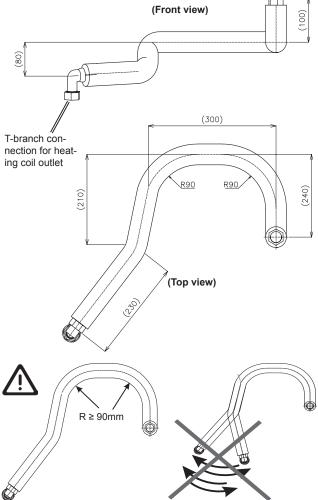

- 4 Connect the heating coil inlet pipe (short pipe 365 mm tube length) (3/4") by its elbow end to the 3-way valve connection for heating coil inlet.
- **5** Connect the heating coil outlet pipe (long pipe 960 mm tube length) (3/4") by its elbow end to the T-branch connection for heating coil outlet.

(Left side view)

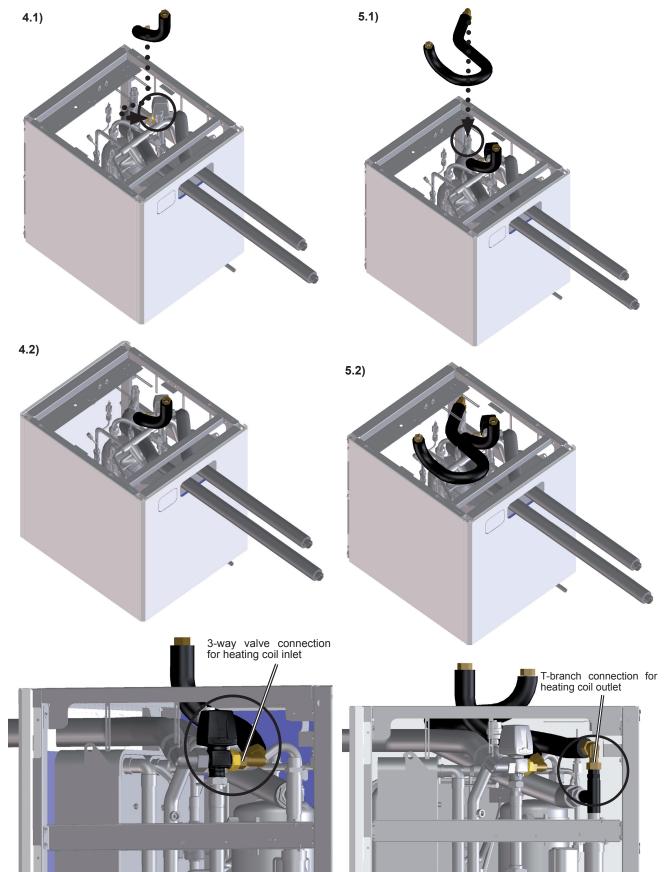

(Left side view)





### NOTE

 Be careful with the low pressure sensor on the suction pipe when connecting the flexible water pipes.



- Keep the flexible water pipes connected inside the indoor unit without overpassing the highest surface of it by the help of its internal elements until the DHW tank will be integrated on the indoor unit.
- 6 Reconnect the 3-way valve motor.
- 7 Reassembly the indoor unit cover's protection.



# 2.3.4.4 Refrigerant piping connection and indoor unit's placing

Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit.* 

# 2.3.4.5 Water pipes connection to the space heating (Space heating pipes)


Connect the space heating pipes (one end already connected to the indoor unit) to the shut off valves of the space heating inlet and outlet (field supplied).

# 2.3.4.6 Water pipes connection to the tank (DHW pipes)


Perform the flexible water pipes connection to the tank (pipes from tank to DHW installation) as follows:

### Connection procedure

Place the DHW tank into the assembly area and put beside it on the floor the packing material (carton casing and plastic bag), which will protect the tank when overturning it to proceed with the piping connections.

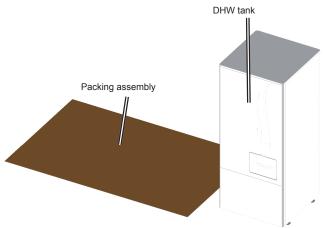



2 Overturn the DHW tank by one lateral side (left or right) protecting it with the packing material.

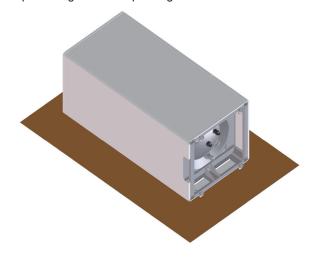


3 Connect the DHW outlet pipe (960 mm tube length) (3/4") by its elbow end to the DHW outlet connection (hot water from the tank). Take out the other end by the tank's hole at the back side.




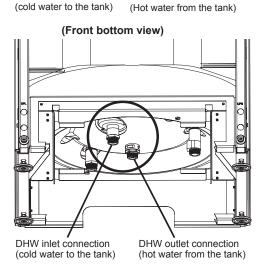


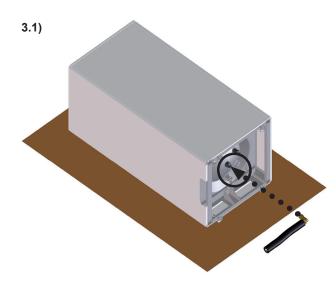

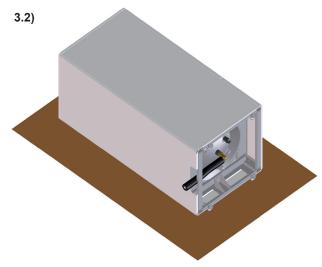


4 Connect the DHW inlet pipe (1045 mm tube length) (3/4") by its elbow end to the DHW outlet connection (cold water to the tank). Take out the other end by the tank's hole at the back side.

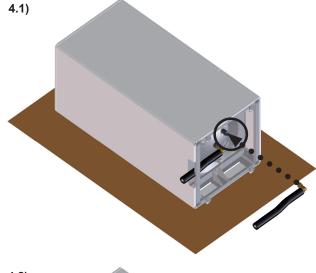

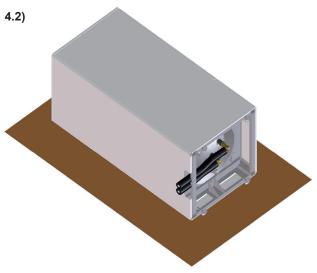

### 2.3.4.7 Removing the mounting foot

Unscrew the 4 mounting foot.

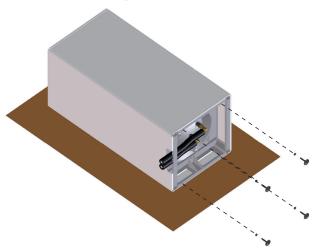


# $\Lambda$

### CAUTION


To remove the mounting foot, follow these instructions:

- 1 Loosen the locknut of the mounting foot (using a wrench).
- 2 Turn the mounting foot up to removing it (use the hexagon or slot designed for this purpose in the shaft end). Two options are possible: by the shaft base (preferable) and by the shaft end.
- **3** Remove the mounting foot. The locknut will be also removed jointly with the mounting foot.

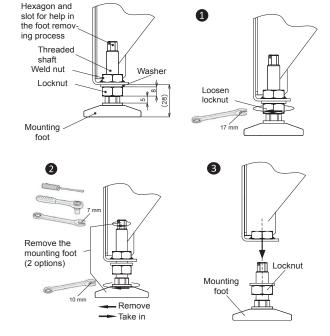

### 2.3.4.8 Tank over the indoor unit assembly

1 Remove the indoor unit front and upper covers.

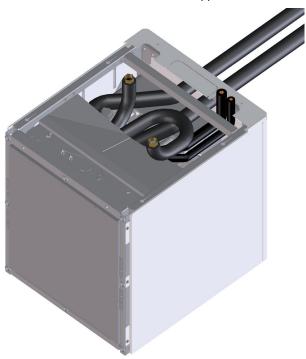




### NOTE


If necessary, remove also the indoor unit right and left covers to ease the installation work, but not forget reassembling when the installation procedure is finished.

2 Lift up the tank and place it exactly above the indoor unit.

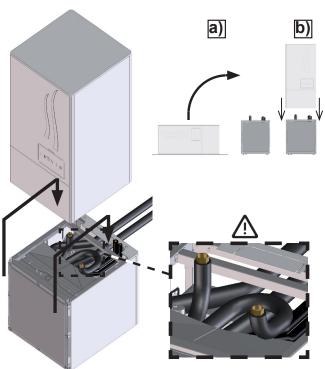

### A CAUTION

- Bear in mind that the tank is very heavy; therefore use at least two people when lifting it.
- Take care with the connected flexible water pipes (both indoor unit and tank connections) when placing the tank over the unit.
- 3 Fix the 4 bolts (factory supplied) between the indoor unit and tank (2 screws accessing from left side and the other 2 accessing from right side).

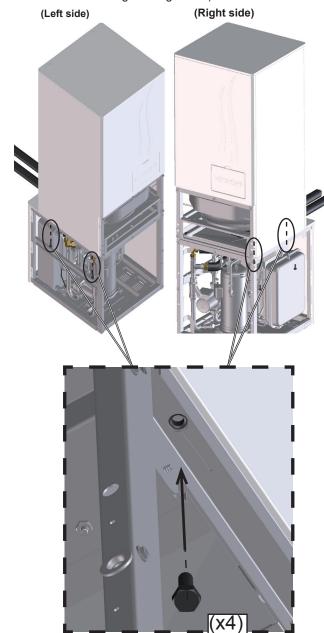

# 2.3.4.9 Water pipes connection to the tank (heating coil pipes)

Perform the flexible water pipes connection between indoor unit and domestic hot water tank (Tank connections) as follows:

### **♦** Connection procedure

The two heating coil pipes which had been connected to the indoor unit must be connected to the tank:

- 1 The pipe connected to the 3-way valve must be connected to the heating coil inlet connection of the tank.
- 2 The pipe connected to the T-branch must be connected to the heating coil outlet connection of the tank.



# 2.3.4.10 Water pipes connection to the DHW installation (DHW pipes)

The two flexible water pipes which had been connected to the tank (DHW inlet and outlet connections) must be connected to the DHW installation.



### **IMPORTANT NOTE**

- Do not forget installing the pressure and temperature relief valve accessory (DHWT-SWG-01) at the DHW inlet connection of the tank (as close as possible to the tank) to provide the following functions.
- Pressure protection
- Filling
- Non-return function
- Draining
- Shut-off valve
  - If not, an specific device for each function should be installed.
- Install also a shut-off valve (field supplied) in the DHW outlet connection, in order to make easier any maintenance work.
- For more details, refer to the section DHW hydraulic circuit in chapter Refrigerant and water piping.

# HITACHI Inspire the Next

### 2.3.4.11 Power wiring connection

Follow the same procedure explained in *Installation of in-door unit alone (Without tank)* on the *YUTAKI S80 indoor unit Installation and operation manual.* 



### NOTE

Check the requirements and recommendations in the chapter Electrical and control settings.



### DANGER

- Do not connect the power supply to the indoor unit and DHW tank prior to filling both circuits with water and checking water pressure and the total absence of any water leakage.
- Do not connect or adjust any wiring or connections unless the main power switch is OFF.
- When using more than one power source, check and ensure that all of them are turned OFF before operating the indoor unit.
- Wait for 3 minutes after switching off the power of the unit before any electrical work. This is necessary to ensure the discharge of internal capacitors in order to avoid electrical shock.
- Avoid wiring installation in contact with the refrigerant pipes, water pipes, edges of plates and electrical components inside the unit to prevent damage, which may cause electric shock or short circuit.



### CAUTION

- Make sure that all wiring and protection devices are properly selected, connected, identified and fixed to the corresponding terminals of the unit, specially the protection (earth) and power wiring, taking into account the applicable national and local regulations.
- Protect the DHW tank against the entry of small animals (like rodents) which could damage the drain pipe and any internal wire or any other electrical part, leading to electric shock or short-circuit.

### 2.3.4.12 Tank wiring connection


The three electrical wires are already connected to the DHW tank. They will be located at the bottom front side of the tank fastened with clamps. The LCD electrical cable at the right and the electric heater and thermistor cables at left.




Location of the electric heater and thermistor cables LCD cable

### **♦** Electric heater of the tank

The Electrical heater cable is the labelled one with the TB2 and 24/25/14 connectors legend.

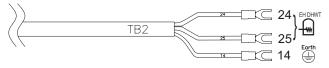

1 Take this electrical cable, pass it behind the partition plate and wire the cable to the two clamps located at the left side and upper part of the indoor unit.

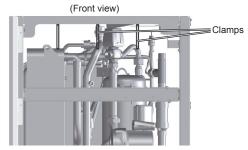


2 Take the cable to the Electrical Box 1 and pass it through one of the upper holes. Connect the earth wire to the 14th terminal and the other two wires to the 24 and 25 connections of the Terminal Board 2.





### NOTE

- Do not touch the Manual safety reset of the electrical heater
- Do not touch the temperature regulator unless the tank is working in "emergency" mode due to indoor unit or outdoor unit malfunction. In this case, refer to the section DHW tank troubleshooting in chapter Troubleshooting.

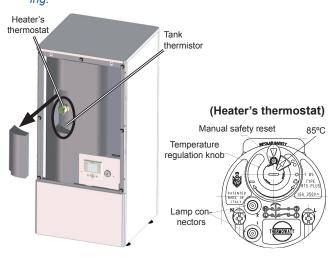


#### **♦** Tank thermistor

Follow the same procedure as for the electrical heater wire but connecting the Tank thermistor wires to the 28 and 29 connections of the Terminal Board 2.




### **♦ LCD** controller

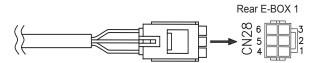

- 1 Take the LCD electrical cable, pass it behind the partition plate and wire it to the two clamps located at the right side and upper part of the indoor unit.
- 2 Connect the connector cable to the wire-to-wire connector in the Electrical Box 1 back side as shown in the figure.



Do not cut or extend the LCD electrical cable.

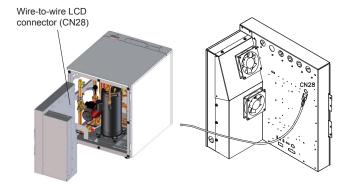

### 2.3.4.13 Levelling procedure

Follow the same procedure explained in *Installation of indoor unit alone* (without tank) in section 2.2 *Installation of indoor unit.* 

### 2.3.4.14 Tank's fixation to the wall

In case of indoor unit with integrated tank it is mandatory when there is not upper restriction fixing the domestic hot water tank to the wall in order to provide a higher stability (use the factory supplied accessory intended for this purpose).


1 Fix the accessory to the DHW tank on the upper cover through the holes with the bundled factory supplied screws.



### NOTE

Use the accessory slotted hole to fix the DHW tank to the wall at the desired distance.

2 Fix the accessory to the wall with field supplied screws.

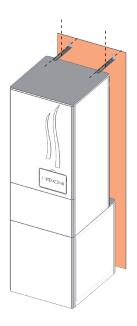



### NOTE

Check that the set (indoor unit with integrated DHW tank) is totally vertical installed.

### 2.3.4.15 Test and check

Before assembling the covers, test and check the following items:

- Water leakage
- · Refrigerant leakage
- · Electrical connection
- •



### NOTE

The following documents must be referred:

- Refer in this document to the chapter 3 Piping work and refrigerant charge for water filling of the tank and the indoor unit and for refrigerant charge of the indoor unit and chapter 8 Commissioning for the commissioning procedure of the tank and the indoor unit.
- For the specific details about refrigerant charge tasks refer the Outdoor unit Installation and Operation manual if necessary.



### DANGER

DO NOT CONNECT THE POWER SUPPLY TO THE IN-DOOR UNIT AND DHW TANK PRIOR TO FILLING BOTH CIRCUITS WITH WATER AND CHECKING WATER PRESSURE AND THE TOTAL ABSENCE OF ANY WA-TER LEAKAGE.

### 2.3.4.16 Cover's assembly

Finally, reassembly all the cover's removed performing the procedure in reverse.



# 2.3.5 Installation of Indoor unit with HITACHI tank (Tank beside the indoor unit)



### NOTE

Please, try to perform all this procedure following all the steps in the exact order which they are presented below.

### **Installation procedure**

- 1 Water pipes connection to the indoor unit (Space heating pipes).
- 2 Drain pipes connection.
- 3 Water pipes connection to the indoor unit (Flexible water pipes kit (ATW-FWP-01)).
- 4 Refrigerant piping connection and indoor unit's placing.
- **5** Water pipes connection to the space heating (Space heating pipes).
- **6** Water pipes connection to the tank (DHW pipes).
- 7 Water pipes connection to the tank (heating coil pipes).

- 8 Tank's placing.
- 9 Connection between the flexible water pipes kit (ATW-FWP-01) and the heating coil pipes.
- **10** Water pipes connection to the DHW installation (DHW pipes).
- **11** Power wiring connection.
- 12 Tank wiring connection.
- **13** Levelling procedure.
- 14 Tank's fixation to the wall.
- 15 Test and check.
- 16 Cover's assembly.

### 2.3.5.1 Water pipes connection to the indoor unit (Space heating pipes)

Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit.* 

### 2.3.5.2 Drain pipes connection


Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit* 

### 2.3.5.3 Water pipes connection to the indoor unit (Flexible water pipes kit (ATW-FWP-01))


### Flexible water pipes identification

For installing the tank beside the indoor unit (both left or right side) the dedicated kit for installation with tank beside the indoor unit (ATW-FWP-01) is required. This kit is provided with the following items:

- · 2 flexible water pipes
- 5 gaskets (4 gaskets for each flexible water pipe end and 1 spare gasket)
- 3 extension cables (1 for the tank's electric heater, 1 for the tank's thermistor and 1 for the LCD controller).

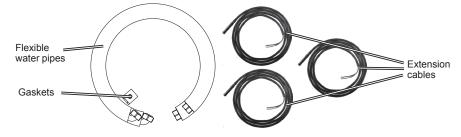

It is necessary to identify the function of each water pipe.

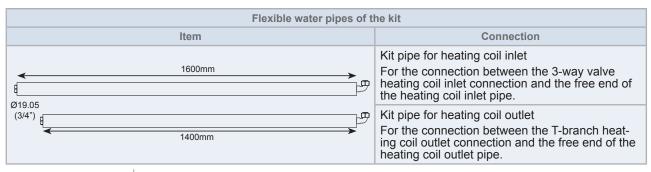



### **♦** Connection procedure

1 Remove the indoor unit cover's protection to facilitate the connection procedure.



2 Remove the metal plugs (Heating coil connections) from the 3-way valve and the T-branch. If necessary, disconnect the 3-way valve motor (upper part) to ease the installation procedure.

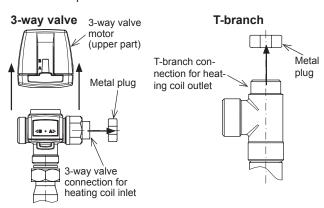

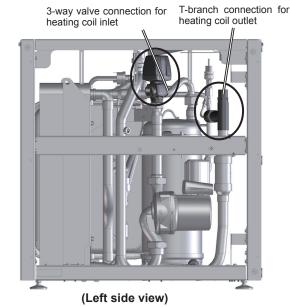

3 Select the preferable outlet position for the flexible water pipes.







### NOTE

- Depending on the selected outlet hole (upper side or rear side) the distance between the indoor unit and the tank may be different. This value may vary between 0 and 200mm, approximately.
- Refer to the next step Connection between the flexible water pipes kit (ATW-FWP-01) and the heating coil pipes for a good understanding.

Tank at the right side of the indoor unit (Recommended)

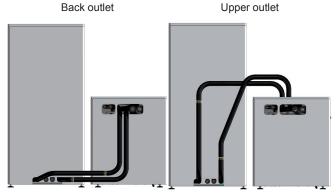



Tank at the left side of the indoor unit

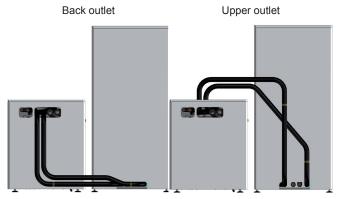






4 Introduce from outside of the unit the kit pipe for heating

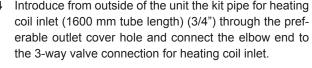


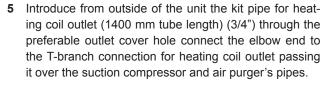

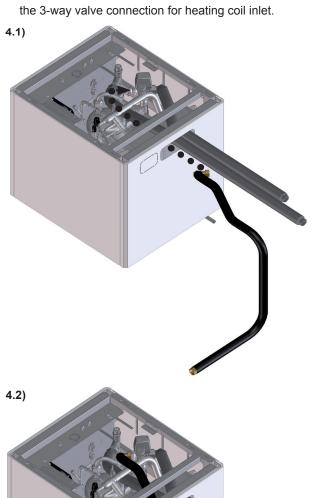


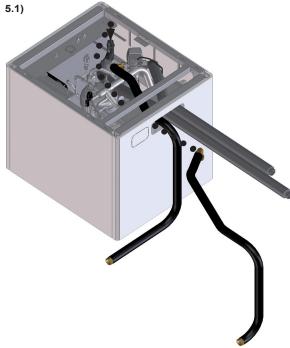

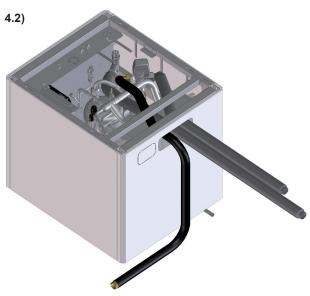

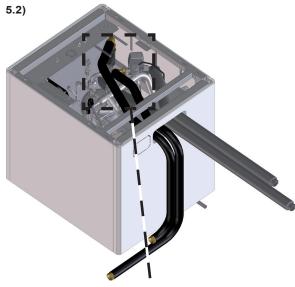


3-way valve connection for heating coil inlet

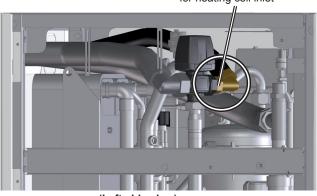


Air purger's pipe Suction compressor pipe

(Left side view)

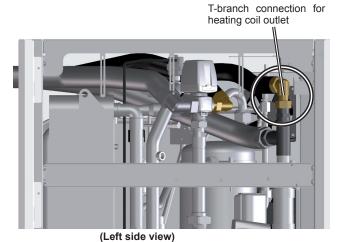




Be careful with the low pressure sensor on the suction pipe when connecting the flexible water pipes.

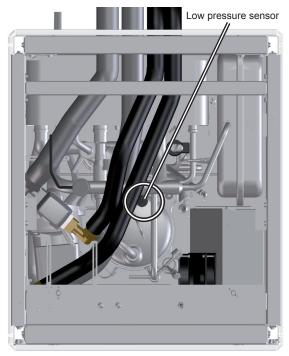

(Top view)

- 6 Reconnect the 3-way valve motor.
- **7** Reassembly the indoor unit cover's protection.

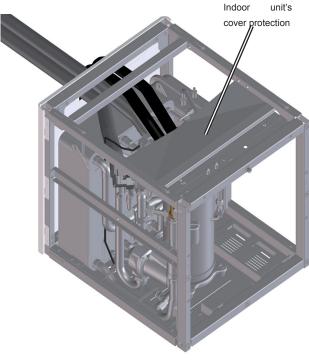

# 2.3.5.4 Refrigerant piping connection and indoor unit's placing

Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit.* 

# 2.3.5.5 Water pipes connection to the space heating (Space heating pipes)


Connect the space heating pipes (one end already connected to the indoor unit) to the shut off valves of the space heating inlet and outlet (field supplied).




#### 2.3.5.6 Water pipes connection to the tank (DHW pipes)

# **♦** Flexible water pipes identification

The DHW tank is factory supplied with four water pipes. In case of installation of the tank beside the indoor unit, the function of some pipes will be different than if the tank is installed integrated over the indoor unit. It is necessary to identify what is the function of each water pipe.

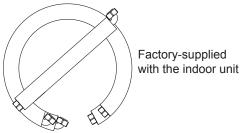

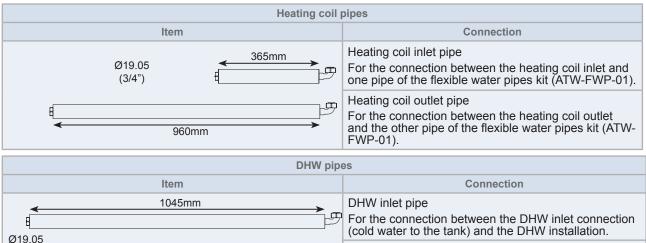

# Connection procedure

(3/4")


Follow the same procedure explained in the same step "Water pipes connection to the tank (DHW pipes)" in section Installation of indoor unit with HITACHI tank (tank integrated over the indoor unit).


DHW outlet pipe

## 2.3.5.7 Water pipes connection to the tank (heating coil pipes)

960mm


1 Introduce the heating coil inlet pipe (short pipe 365 mm tube length) (3/4") from outside of the tank (through the rear hole of the tank) and connect the elbow end to the heating coil inlet connection.

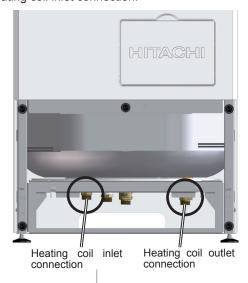


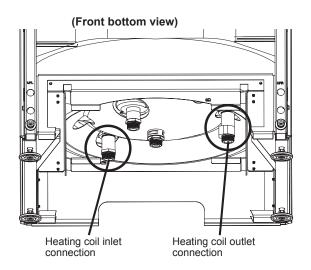

For the connection between the DHW outlet connec-

tion (hot water from the tank) and the DHW installation.

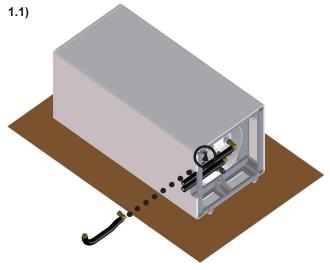


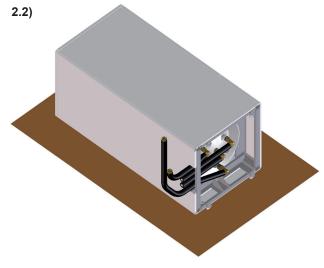


# 1.2)


# 2.3.5.8 DHW tank's placing

1 Lift up the tank and place it again in vertical position just beside the indoor unit (at its right or left side).

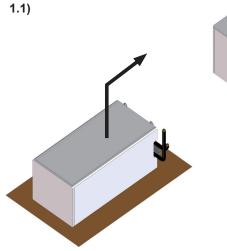

2 Introduce the heating coil outlet pipe (960 mm tube length) (3/4") from outside of the tank (through the rear hole of the tank) and connect the elbow end to the heating coil outlet connection.

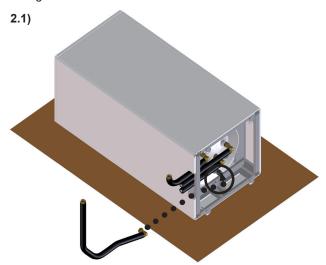

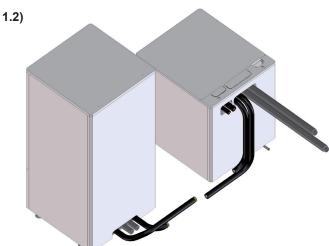



1.1)

# CAUTION

- It is recommended to place the tank at indoor unit's right side in order to keep a certain space at the indoor unit's left side (looking from the front) for easy servicing. Refer to the Service space section for more information.
- Bear in mind that the tank is very heavy; therefore use at least two people when lifting it.
- Take care with the connected flexible water pipes and with the tank cutting parts.


# 2.3.5.9 Connection between the flexible water pipes kit (ATW-FWP-01) and the heating coil pipes

1 Connect the flexible water pipes of the kit (connected to the heating coil inlet and outlet of the tank) with the heating coil pipes (connected to the 3-way valve and Tbranch in the indoor unit).

These are examples of the piping connection position depending on the tank's position and the selected outlet hole for the flexible water piping.

Tank at the right side of the indoor unit Back outlet Upper outlet


Tank at the left side of the indoor unit Back outlet Upper outlet

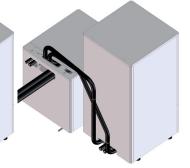





# **IMPORTANT NOTE**

It is recommended to install two shut-off valves with a drain valve between the flexible water pipes of the kit and the heating coil pipes, in order to make easier the service works and draining procedure.

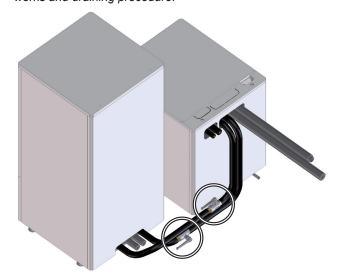

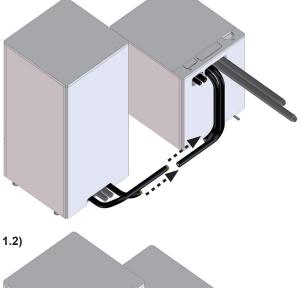


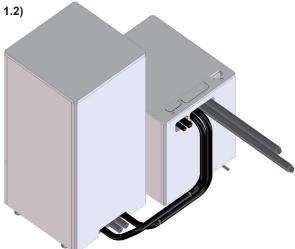



For more distance between the indoor unit and the DHW tank, it is necessary to provide extra flexible water pipes (field supplied). In this case, take into account the maximum electrical wiring length. If electrical wiring length needs to be increased consult your HITACHI dealer.

2 Align the front side of the tank with the front side of the indoor unit.

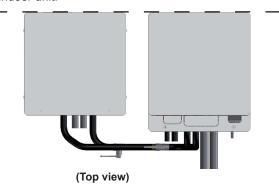

# 2.3.5.10 Water pipes connection to the DHW installation (DHW pipes)

The two flexible water pipes which had been connected to the tank (DHW inlet and outlet connections) must be connected to the DHW installation.



## **IMPORTANT NOTE**

- Do not forget installing the pressure and temperature relief valve accessory (DHWT-SWG-01) at the DHW inlet connection of the tank (as close as possible to the tank) to provide the following functions.
  - Pressure protection
- Filling
- Non-return function
- Draining
- Shut-off valve

If not, an specific device for each function should be installed.

 Install also a shut-off valve (field supplied) in the DHW outlet connection, in order to make easier any maintenance work.

For more details, refer to the section DHW hydraulic circuit in chapter Refrigerant and water piping .

# 2.3.5.11 Power wiring connection

Follow the same procedure explained in *Installation of indoor unit alone (Without tank)* on the *YUTAKI S80 indoor unit Installation and operation manual.* 



#### NOTE

Check the requirements and recommendations in the chapter Electrical and control settings.



#### DANGER

- Do not connect the power supply to the indoor unit and DHW tank prior to filling both circuits with water and checking water pressure and the total absence of any water leakage.
- Do not connect or adjust any wiring or connections unless the main power switch is OFF.
- When using more than one power source, check and ensure that all of them are turned OFF before operating the indoor unit.

- Wait for 3 minutes after switching off the power of the unit before any electrical work. This is necessary to ensure the discharge of internal capacitors in order to avoid electrical shock.
- Avoid wiring installation in contact with the refrigerant pipes, water pipes, edges of plates and electrical components inside the unit to prevent damage, which may cause electric shock or short circuit.



- Make sure that all wiring and protection devices are properly selected, connected, identified and fixed to the corresponding terminals of the unit, specially the protection (earth) and power wiring, taking into account the applicable national and local regulations.
- Protect the DHW tank against the entry of small animals (like rodents) which could damage the drain pipe and any internal wire or any other electrical part, leading to electric shock or short-circuit.


#### 2.3.5.12 Tank wiring connections

#### Cables identification

#### **Factory supplied cables**

The three electrical wires are already connected to the DHW tank. They will be located at the bottom front side of the tank fastened with clamps. The LCD electrical cable at the right and the electric heater and thermistor cables at left.




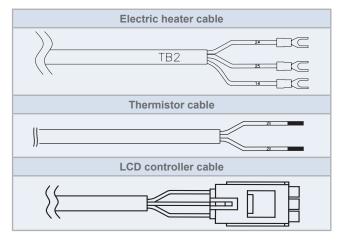



# Extension cables (supplied with the ATW-FWP-01 accessory)


When the domestic hot water tank is installed beside the indoor unit, it is needed to extend the cables up to the terminal board 2 (TB2) of the indoor unit, which is place at certain distance from the tank. These cables are the following:

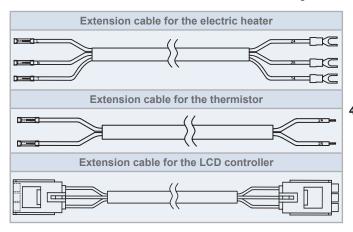


#### **♦** Cables connection

#### **Electric heater of the tank**

1 Cut and strip the free end of the 3 wires of the factory supplied electric heater cable.

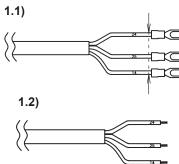


**2** Connect the extension cable to the factory supplied cable.

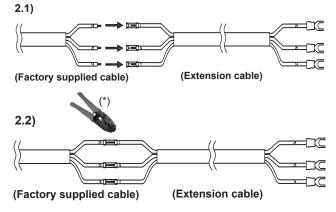


(\*): Use a crimping tool to crimp the cables.

Take this extension cable, pass it behind the partition plate and wire the cable to the two clamps located at the left side and upper part of the indoor unit.

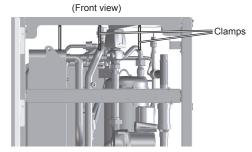

Take the extension cable to the Electrical Box 1 and pass it through one of the upper holes. Connect the earth wire to the 14th terminal and the other two wires to the 24 and 25 connections of the Terminal Board 2.

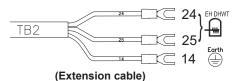







# NOTE

- Do not touch the Manual safety reset of the electrical heater.
- Do not touch the temperature regulator unless the tank is working in "emergency" mode due to indoor unit or outdoor unit malfunction. In this case, refer to the section DHW tank troubleshooting in chapter Troubleshooting.

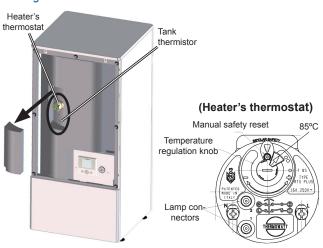


#### **Tank thermistor**

 Connect the extension cable to the factory supplied cable.

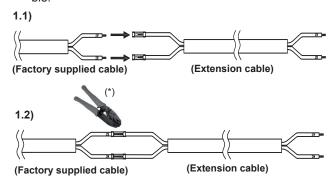


(\*): Use a crimping tool to crimp the cables.

**2** Follow the same procedure as for the electrical heater wire but connecting the Tank thermistor wires to the 28 and 29 connections of the Terminal Board 2.

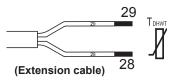


#### **LCD** controller

 Connect the extension cable to the factory supplied cable.

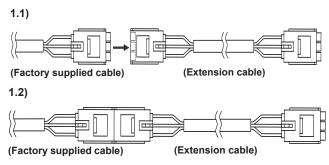

2 Follow the same procedure as for the electrical heater wire but connecting the extension cable to the wire-to-wire connector in the Electrical Box 1 back side as shown in the figure.

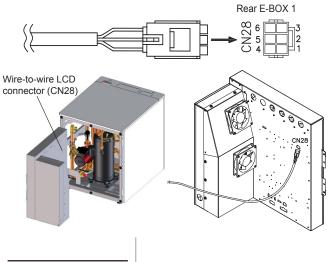

#### 2.3.5.13 Levelling procedure

#### **♦** Indoor unit

Follow the same procedure explained in *Installation of indoor unit alone (without tank)* in section 2.2 *Installation of indoor unit.* 

#### **♦ Domestic hot water tank**

If it is necessary, adjust the height of the mounting foot as follows:



#### NOTE


- All the procedure must be done before filling the water tank.
- Adjust only the necessary mounting foot of the DHW tank with the foot locknuts and when the tank is in the final position (moving the DHWT after levelling can make it uneven again).
- Start with all four feet screwed in as far as possible (factory supplied position).
- Use two or more people for levelling procedure.

Follow the process:

Hexagon and

- 1 Loosen the locknut of the mounting feet which needs to be extended (using a wrench).
- 2 Turn the mounting foot to extend the height (use the hexagon or slot designed for this purpose in the shaft end).
- When the mounting foot is in his end position, lock the locknut. It may be necessary holding the foot to keep it from turning while tightening the locknut. Use for this purpose the hexagon or slot in the shaft end.

If it is needed to proceed with the levelling procedure with a second foot (process 1 to 3), never work over one foot at same time. When finish, all 4 locknut must be tightened firmly.

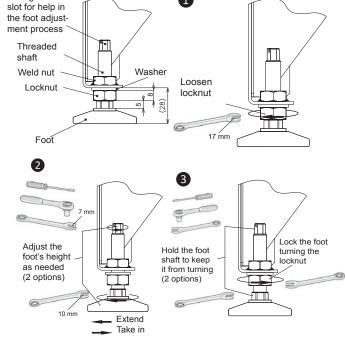



# 2.3.5.14 DHW tank fixation to the wall

Fix the domestic hot water tank to the wall in order to provide a higher stability (use the factory supplied accessory intended for this purpose).


1 Fix the accessory to the DHW tank on the upper cover through the hoses with the bundled factory supplied screws.



## NOTE

Use the accessory slotted hole to fix the DHW tank to the wall at the desired distance.

2 Fix the accessory to the wall with field supplied screws.

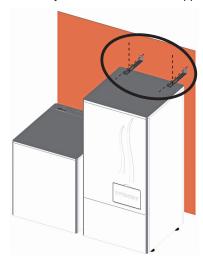



#### NOTE

Check that the tank is installed totally vertical.

#### 2.3.5.15 Test and check

Before assembling the covers, test and check the following items:

- Water leakage
- · Refrigerant leakage
- · Electrical connection
- .



#### NOTE

The following documents must be referred:

- Refer in this document to the chapter 3 Refrigerant and water for water filling of the tank and the indoor unit and for refrigerant charge of the indoor unit and chapter 8 Commissioning for the commissioning procedure of the tank and the indoor unit.
- For the specific details about refrigerant charge tasks refer the Outdoor unit Installation and Operation manual if necessary.



# DANGER

DO NOT CONNECT THE POWER SUPPLY TO THE IN-DOOR UNIT AND DHW TANK PRIOR TO FILLING BOTH CIRCUITS WITH WATER AND CHECKING WATER PRESSURE AND THE TOTAL ABSENCE OF ANY WA-TER LEAKAGE.

#### 2.3.5.16 Cover's assembly

Finally, reassembly all the cover's removed.



# 3. Refrigerant and water piping

# Index

3.1.	Gener	ral notes before performing pipe work	68
	3.1.1.	General notes	68
	3.1.2.	Suspension of refrigerant and water pipes	69
	3.1.3.	Brazing work	69
3.2.	Refrig	perant circuit	70
	3.2.1.	Refrigerant piping	70
	3.2.2.	Piping connections	71
	3.2.3.	Refrigerant charge	74
	3.2.4.	Precautions in the event of gas refrigerant leaks	76
	3.2.5.	Pump down of refrigerant	77
	3.2.6.	Refrigerant check joints	78
3.3.	Drain	discharging boss of the outdoor unit	79
3.4.	Space	e heating hydraulic circuit	80
	3.4.1.	Hydraulic circuit	81
	3.4.2.	Water piping	82
	3.4.3.	Water quality	83
	3.4.4.	Water filling	83
	3.4.5.	Water flow adjustment	84
	3.4.6.	Pressure charts	86
3.5.	DHW	hydraulic circuit (Optional)	87
	3.5.1.	Hydraulic circuit	88
	3.5.2.	Water piping	90
	3.5.3.	Water quality	93
	351	Water filling	02



# 3.1 General notes before performing pipe work

#### 3.1.1 General notes

- 1 Prepare locally-supplied copper pipes.
- 2 Select the piping size with the correct thickness and correct material able to withstand sufficient pressure.
- 3 Select clean copper pipes. Make sure that there is no dust or moisture inside the pipes. Blow the inside of the pipes with oxygen free nitrogen to remove any dust and foreign materials before connecting them.




### NOTE

A system with no moisture or oil contamination will give maximum performance and lifecycle compared to that of a poorly prepared system. Take particular care to ensure that all copper piping is clean and dry internally.



# CAUTION

- Cap the end of the pipe when pipe is to be inserted through a wall hole.
- Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe.

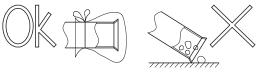


- If piping installation is not completed until next day or over a longer period of time, braze off the ends of the piping and charge with oxygen free nitrogen through a Schrader valve type access fitting to prevent moisture and particle contamination.
- Do not use insulation material that contains NH3, as it can damage copper pipe material and become a source of future leakage.
- Insulate the unions and flare-nuts at the piping connection part completely.
- Completely insulate both refrigerant gas and liquid piping between the indoor unit and the outdoor unit to avoid a decrease of performance; if not, dew will occur on the piping surface.
- Refrigerant circuit and Water circuit must be performed and inspected by a licensed technician and must comply with all relevant European and national regulations.



# 3.1.2 Suspension of refrigerant and water pipes

Suspend the refrigerant and water piping at certain points and prevent the refrigerant and water piping from being in direct contact with the building: walls, ceilings, etc..

If there is direct contact between pipes, abnormal sound may occur due to the vibration of the piping. Pay special attention in cases of short piping lengths.

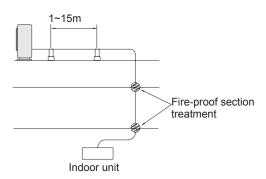

Do not fix the refrigerant and water pipes directly with the metal fittings (refrigerant piping may expand and contract).

Some examples for suspension method are shown below.

For suspending heavies For piping along the wall For instant installation work







#### 3.1.3 Brazing work



# CAUTION

- Use nitrogen gas for blowing during pipe brazing. If oxygen, acetylene or fluorocarbon gas is used, it will cause an explosion or poisonous gas.
- A rust coating will appear inside of tubes if no nitrogen gas blowing is performed during brazing work. This film will be
  flecked off after operation and will circulate in the circuit, resulting in clogged expansion valves, etc, and the compressor will be affected.
- Use a reducer valve when nitrogen gas blowing is performed during brazing. The gas pressure should be maintained within 0.03 to 0.05 MPa. If excessively high pressure is applied to a pipe, it will cause an explosion.




# 3.2 Refrigerant circuit

# 3.2.1 Refrigerant piping

# ◆ Refrigerant piping length between indoor unit and outdoor unit

The refrigerant piping length between indoor unit and outdoor unit should be designed using the following chart.

Keep the design point within the area of the chart, which is showing the applicable height difference according to piping length.

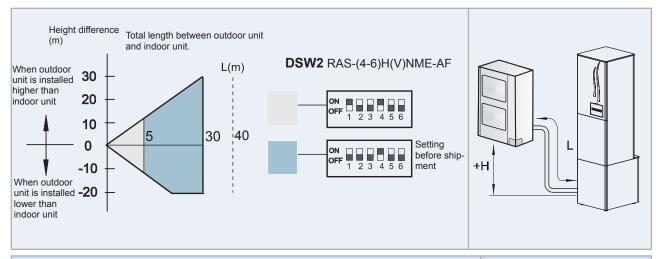

Item		(4-6)HP
Maximum piping length between outdoor unit and	Actual piping length	30 m
indoor unit (Lmax)	Equivalent piping length	40 m
Minimum piping length between outdoor unit and indoor unit (Lmin)	Actual piping length	5 m
Maximum height difference between indoor and	Outdoor unit higher than indoor unit	30 m
outdoor unit (H)	Indoor unit higher than outdoor unit	20 m

# **♦ Refrigerant piping size**

Piping connection size of outdoor unit & indoor unit

Outdoor unit	Pipe size		Indoor Unit	Pipe size (*)	
Outdoor unit	Gas pipe	Liquid pipe	indoor Onit	Gas pipe	Liquid pipe
RAS-4H(V)RNME-AF	Ø 15.88 (5/8")	Ø 9.52 (3/8")	RWH-4.0FS(V)NFE	Ø 15.88 (5/8")	Ø 9.52 (3/8")
RAS-5H(V)RNME-AF	Ø 15.88 (5/8")	Ø 9.52 (3/8")	RWH-5.0FS(V)NFE	Ø 15.88 (5/8")	Ø 9.52 (3/8")
RAS-6H(V)RNME-AF	Ø 15.88 (5/8")	Ø 9.52 (3/8")	RWH-6.0FS(V)NFE	Ø 15.88 (5/8")	Ø 9.52 (3/8")



(\*) Refrigerant liquid / gas piping accessory is factory supplied.




# 3.2.2 Piping connections


#### **♦** Outdoor unit


1 The pipes can be connected from any of the following four directions: front, rear, bottom or right side, when facing the outdoor unit.

No.	Part
1	Rear side piping cover
2	Rear side piping work (Knock-out hole)
3	Right side piping work (Knock-out hole)
4	Bottom side piping work (Piping cover)
5	Front side piping work (Knock-out hole)
6	Front side piping cover

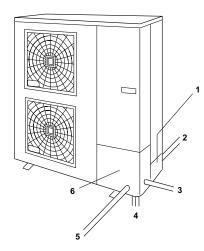

No.	Part	
Α	Push down the cover slowly	
В	Rear cover	
С	Front side piping cover	
D	Rear side piping cover	

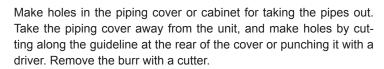

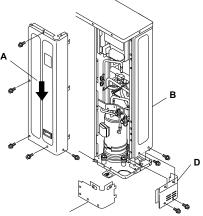




#### NOTE

Hold the cover with a hand at the same time while removing the screws as the cover may fall down.

# For the front and side piping

No.	Part
1	Front piping hole
2	Side piping hole

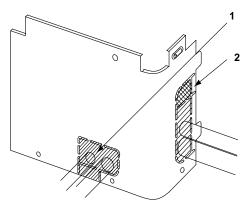

To use racking or conduit tubes, check the size and remove the striped parts, following the slit.




# NOTE

Place insulation (field supplied) to protect cables and pipes from being damaged by plate edges.

# 2 Operation of stop valve should be performed according to the figure.

No.	Description	Remarks
1	Сар	_
2	Allen wrench	Hex 4/5/10 mm
3	Refrigerant Piping	Field supplied
4	Сар	_
5	Refrigerant Pressure	To outdoor unit
6	Seat Surface	Fully closed position
7	Check Joint	Only the charging those can be connected
8	Сар	_
9	O-Ring	Rubber
10	Snindle velve	Open – Counterclockwise
10	Spindle valve	Close – Clockwise

# Closed before shipment

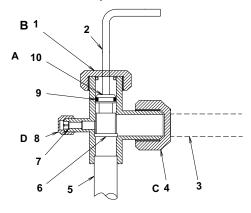

Tighten torque (Nm)				
Valve type A B C D				
Liquid valve	7-9	34-42	34-42	14-18
Gas valve	9-11	34-42	68-82	14-18


# · Outdoor unit stop valve

No.	Part	
1	Stop valve	
2	Flare nut	
Do not apply two spanners at this position.		
A	If applied, leakage will occur	



# CAUTION

- At the test run, fully open the spindle. If not fully opened, the devices will be damaged.
- Do not attempt to turn service valve rod beyond its stop.
- Do not loosen the stop ring. If the stop ring is loosened, it is dangerous since the spindle will hop out.
- Do not apply force to the spindle valve at the end of opening (5 Nm or smaller). The back seat construction.

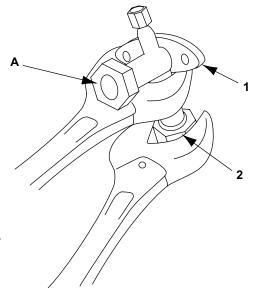




#### **♦** Indoor unit

## Refrigerant gas and liquid pipe indoor unit connection

Refrigerant gas/liquid connection (R410A) of indoor unit are located where it is visible in the following images:

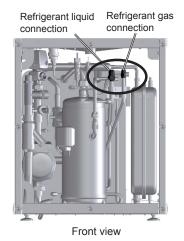





# NOTE

The refrigerant gas/liquid connection (R410A) of indoor unit is a flare nut connection but after installing the piping accessories the connection is done by brazing.

# Refrigerant liquid/gas piping connection accessories

An accessory is provided for the connection between the field refrigerant pipes (outdoor unit) and the indoor unit.





#### NOTE


Refer to section Installation of indoor unit alone (without tank) in chapter 2 Unit installation for the accessory installation.



## 3.2.3 Refrigerant charge

The YUTAKI S80 has two refrigerant circuits. The R410A circuit (1st cycle) works with this refrigerant while the indoor circuit (2nd cycle) works with R134a refrigerant. Piping connections must be performed in the R410A cycle between the outdoor unit and the indoor unit.

#### **♦** Refrigerant charge amount

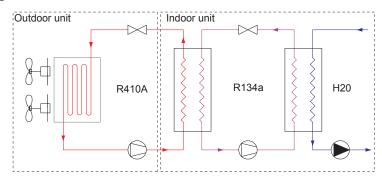

- The 1st cycle (R410A) is factory charged with a refrigerant charge amount for 30m of piping length. The maximum refrigerant piping length is 30m so it is not required an additional refrigerant charge.
- The 2nd cycle (R134a) connections are factory installed and refrigerant charged so no piping work or refrigerant charge is needed.

#### Refrigerant charge before shipment (W<sub>o</sub> (kg))

Unit type	Unit model	W₀ (kg) R410A	W₀ (kg) R134a
Outdoorunit	RAS-4H(V)RNME-AF	3.9	-
Outdoor unit	RAS-(5/6)H(V)RNME-AF	4.0	-
Indoor unit	RWH-(4-6)FS(V)NFE	-	2.5

#### ◆ R410A refrigerant charge and vacuum procedure




- Do not charge OXYGEN, ACETYLENE, or other flammable and poisonous gases into the refrigerant, as an explosion could occur. It is recommended that oxygen free nitrogen be charged for these types of test cycles when performing a leakage test or an airtight test. These types of gases are extremely dangerous.
- Insulate the unions and flare-nuts at the piping connection part completely.
- Insulate the liquid piping completely to avoid a decreased performance; if not, it will cause sweating on the surface of the pipe.
- Charge refrigerant correctly following the procedures of the manuals. Overcharging or insufficient charging could cause a compressor failure.

Follow the next procedure to charge the R410A refrigerant inside the indoor unit:

- 1 Connect the gauge manifold using charging hoses with a nitrogen cylinder to the outdoor unit check joints of the liquid line and the gas line stop valves.
- 2 Supply power to the indoor unit and switch the DSW1-2 ON of its PCB1. Thereby, solenoid valves SV1 and SV2 of the indoor unit will open to allow the operation of vacuum and refrigerant charge inside the indoor unit. It is very important to remind to switch the DSW1-2 OFF when finishing the whole procedure.
- 3 Check for any gas leakage at the flare nut connection by using nitrogen gas inside of the field-supplied piping to increase the pressure at 4.15 MPa.
- 4 Connect the vacuum pump to the gauge manifold and operate it for 1 to 2 hours until the pressure decreases lower than a pressure of 756 mm Hg in vacuum.
- **5** Fully open the outdoor unit gas and liquid stop valves.



**6** Operate the outdoor unit in cooling operation for more than 10 minutes to circulate the refrigerant through the whole circuit.

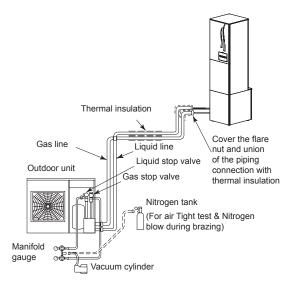



#### NOTE

In case the installer should fill the refrigerant circuit with more refrigerant due to its loss, follow the next procedure after doing vacuum to the installation:

- 1 After vacuum, for charging refrigerant, connect the gauge manifold using charging hoses with a refrigerant charging cylinder to the check joint of the liquid line stop valve.
- 2 Charge the proper quantity of refrigerant according to the piping length (Calculate the quantity of the refrigerant charge).
- 3 Fully open the gas line stop valve, and slightly open the liquid line stop valve.
- 4 Charge refrigerant by opening the gauge manifold valve.
- 5 Charge the required refrigerant within the difference range of ±0.5kg by operating the system in cooling.
- 6 Fully open the liquid line stop valve after completing refrigerant charge.
- 7 Continue cooling operation for more than 10 minutes to circulate the refrigerant.
- 8 Remind to switch the indoor unit PCB1 DSW1-2 OFF when finishing the whole procedure.



# 3.2.4 Precautions in the event of gas refrigerant leaks

The installers and those responsible for drafting the specifications are obliged to comply with local safety codes and regulations in the case of refrigerant leakage.



- Check for refrigerant leakage in detail. If a large refrigerant leakage occurred, it would cause difficulty with breathing or harmful gases would occur if a fire were in the room.
- If the flare nut is tightened too hard, it may crack over time and cause refrigerant leakage.

#### **♦** Maximum permitted concentration of HFCs

The refrigerant R410A, charged in the outdoor unit, and the refrigerant R134a, charged in the indoor unit, are incombustible and non-toxic gases. However, if leakage occurs and gas fills a room, it may cause suffocation.


The maximum permissible concentration of HFC gas according to EN378-1 is:

Refrigerant	Maximum permissible concentration (kg/m³)	
R410A	0.44	
R134a	0.25	

The minimum volume of a closed room where the indoor unit is installed to avoid suffocation in case of leakage is:

Minimum volume  $V > 10 \text{ m}^3$ 

If the room volume is below the minimum value, some effective measure must be taken account after installing to prevent suffocation in case of leakage.

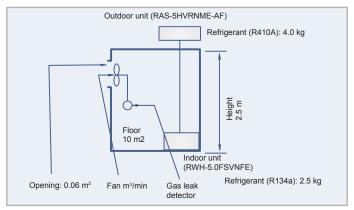

#### Countermeasure in the event of possible refrigerant leakage

The room must have the following features to prevent suffocation in case a refrigerant leakage occurs:

- 1 Provide a shutterless opening which will allow fresh air to circulate into the room.
- 2 Provide a doorless opening of 0.15% or more size to the floor area.
- 3 There must be a ventilator fan connected to a gas leak detector, with a ventilator capacity of 0.4 m³/min or higher per Japanese refrigeration ton (= compressor displacement volume / (5.7 m³/h (R410A) or 14.4 m³/h (R134a)) of the air conditioning system using the refrigerant.

R410A		
Outdoor unit model	Tonnes	
RAS-4H(V)RNME-AF	1.35	
RAS-(5/6)H(V)RNME-AF	1.84	

R134a			
Indoor unit model	Tonnes		
RWH-(4.0-6.0)FS(V)NFE	1.61		



#### NOTE

Always take the maximum value between the R410A and R134a.

**4** Pay special attention to the place, such as a basement, etc., where the refrigerant can stay, since refrigerant is heavier than air.

# 3.2.5 Pump down of refrigerant


# ♦ 1st cycle (R410A)

When the refrigerant should be collected into the outdoor unit due to indoor/outdoor unit relocation, collect the refrigerant as follows:

- 1 Attach the manifold gauge to the gas and the liquid stop valves.
- 2 Turn ON the outdoor unit and the indoor unit power sources.
- 3 Set the DSW1-1 pin of the outdoor unit PCB at the "ON" side for pump down operation (test run cooling). Close the liquid stop valve to retain all the refrigerant inside the outdoor unit.
- **4** When the pressure at lower pressure side (gas stop valve) indicates -0.01 MPa (-100 mmHg), perform the following procedures immediately.
  - a. Close the gas stop valve.
  - **b.** Set the outdoor unit DSW1-1 pin at the "OFF" side (To stop the unit operation).
- 5 Turn OFF the outdoor unit power source.



- Be careful that refrigerant and oil do not splash to the electrical parts at removing the charge hoses.
- Measure the low pressure by the pressure gauge and keep it not to decrease than -0.01 MPa. If the pressure does not decrease to -0.01 MPa, the compressor may be faulty.

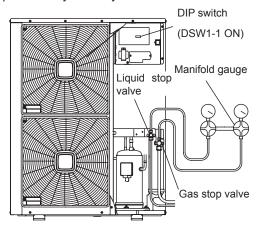



# **IMPORTANT NOTE**

Supply power to the indoor unit and switch the DSW1-2 ON of its PCB1. Thereby, solenoid valves SV1 and SV2 of the indoor unit will open to allow the operation of vacuum and refrigerant charge inside the indoor unit. It is very important to remind to switch the DSW1-2 OFF when finishing the whole procedure.

#### **♦** 2nd cycle (R134a)

The 2nd cycle (R134a) connections are factory installed and refrigerant charged so no vacuum or pumping down work is needed. But, in case of replacing refrigerant parts, R134a refrigerant should be collected into a refrigerant charging cylinder as follows:

- 1 Use a refrigerant recovery system machine to pump down the R134a refrigerant attaching the manifold gauge to the check joint for piping "B" (see *Refrigerant check joints* next section).
- 2 Connect the refrigerant recovery system machine to the desirable field supplied deposit to collect the refrigerant.
- 3 Turn ON the refrigerant recovery system machine.
- 4 Follow the machine instructions to correctly perform the procedure.
- 5 Turn OFF the refrigerant recovery system machine when finishing recovering.





Measure the refrigerant pressure through the check joints "A" and "C" (see Refrigerant check joints next section).

2



# 3.2.6 Refrigerant check joints

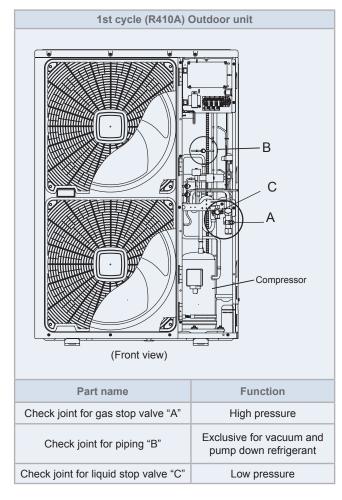

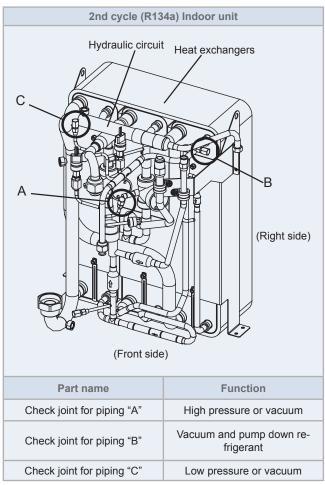



Be careful that refrigerant and oil do not splash to the electrical parts at removing the charge hoses.



# 3.3 Drain discharging boss of the outdoor unit

When the base of the outdoor unit is temporarily used as a drain receiver and the drain water in it is discharged, this drain boss is used to connect the drain piping.

Model	Applicable Model
DBS-26	RAS-(4-6)H(V)RNME-AF

# **♦** Connection procedure

- 1 Insert the rubber cap into the drain boss up to the extruded portions.
- 2 Insert the boss into the unit base and turn approximately 40 degree counterclockwise.
- 3 The outer diameter section of the drain boss is 32 mm.
- 4 A drain pipe should be field-supplied.




#### NOTE

- Do not use this drain boss set in a cold area, because the drain water may freeze.
- This drain boss may not be sufficient to collect drain water. If collecting a big amount of drain water should be necessary, provide a drain-pan bigger than the unit base supplied one, and install it under the unit with drainage.

#### Bottom base view

No.	Description
1	Drain pipe
2	Extruded portion
3	Drain boss
4	Rubber cap
5	Drain hole of base

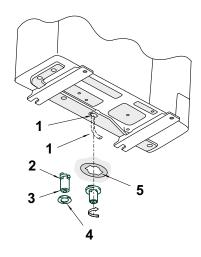



# 3.4 Space heating hydraulic circuit



## **DANGER**

Do not connect the power supply to the indoor unit and DHW tank prior to filling both circuits with water and checking water pressure and the total absence of any water leakage.




## NOTE

- · Proper Water pipe inspection should be performed after piping work to assure there is no water leakage in the circuit.
- The Indoor Unit is equipped with an air purger (factory supplied) at the highest location of the Indoor Unit. If this location
  is not the highest of the water installation, air might be trapped inside the water pipes, which could cause system malfunction. In that case additional air purgers (field supplied) should be installed to ensure no air enters the water circuit.
- When the unit is stopped during shutdown periods and the ambient temperature is very low, the water in the pipes and the circulating pump may freeze, thus damaging the pipes and the water pump. In order to prevent this, the unit has a self-protection mechanism which should be activated (refer to Optional functions chapter).
- The maximum piping length depends on the maximum pressure availability in the water outlet pipe. Please check the pressure charts.



# 3.4.1 Hydraulic circuit

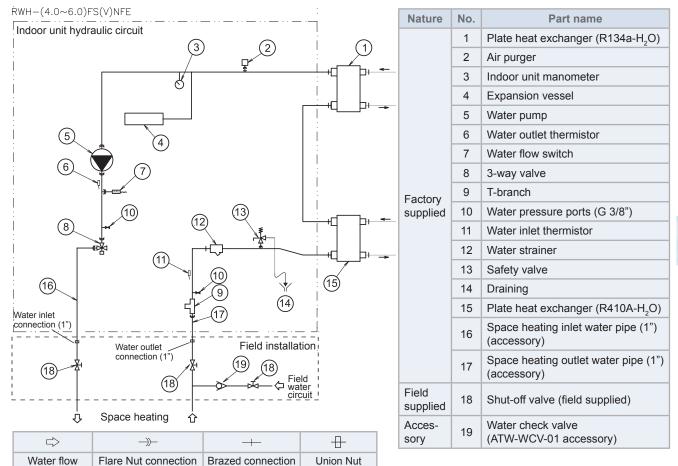

# **♦** Additional hydraulic necessary elements

The following hydraulic elements are necessary to correctly perform the space heating water circuit:

- 2 shut-off valves (field supplied) must be installed in the indoor unit. One at the water inlet connection and the other at the water outlet connection in order to make easier any maintenance work.
- 1 water check valve (ATW-WCV-01 accessory) with 1 shut-off valve (field supplied) must be connected to the water filling point when filling the indoor unit. The Check valve acts as a safety device to protect the installation against back pressure, back flow and back syphon of non-potable water into drinking water supply net.




An additional special water filter is highly recommended to be installed on the space heating (field installation), in order to remove possible particles remaining from brazing which cannot be removed by the indoor unit water strainer.




# 3.4.2 Water piping

# **♦** Water pipes connection

Space heating water connection of indoor unit are located where it is visible in the following images:

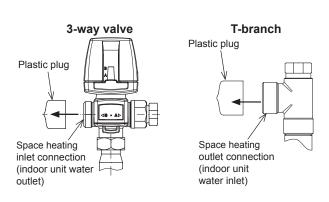

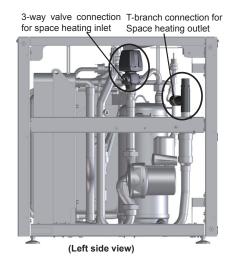


# **Piping size**

(mm (inches))

	Space heating	
	3-way valve connection	T-branch connection
RWH-(4.0-6.0)FS(V)NFE	Ø25.4 (1")	Ø25.4 (1")

# ◆ Space heating pipes (factory supplied)

Indoor unit is provided with two flexible water pipes (space heating pipes) for connection between the space heating and the indoor unit (to the T-branch and to the 3-way valve).

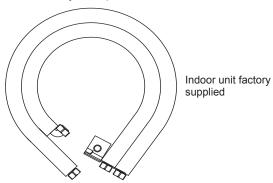





# 3.4.3 Water quality



# CAUTION

- Water quality must be according to EU council directive 98/83 EC.
- Water should be subjected to filtration or to a softening treatment with chemicals before application as treated water.
- It is also necessary to analyse the quality of water by checking pH, electrical conductivity, ammonia ion content, sulphur content, and others. Should the results of the analysis be not good, the use of industrial water would be recommended.
- It is mandatory to do not add any kind of antifreeze product to the water circuit.
- To avoid deposits of scale on the heat exchangers surface it is mandatory to ensure a high water quality with low levels
  of CaCO<sub>2</sub>.

#### 3.4.4 Water filling


- 1 Check that a water check valve (ATW-WCV-01 accessory) with a shut-off valve (field supplied) is connected to the water filling point for filling the space heating hydraulic circuit (see *Hydraulic circuit*).
- 2 Make sure all the valves are open.
- 3 Check that the drain pipes connected to the safety valve and to the air purger are driven to the base hole near the heat exchanger. In case of the drain pipe for safety valve, place it as far as possible from the indoor unit (see *Installation procedure*). The excessive water will be expelled by it.
- 4 Fill the space heating circuit with water. Stop filling when the pressure reaches approximately 1.8 bar.
- **5** Remove as much air inside the water circuit as possible through the indoor air purger and other air purgers from the installation (fan coils, radiators...).



## CAUTION

It is also necessary to remove the air inside the water pump, so the following steps must be followed:

- a. Remove the air vent screw.
- b. Turn shaft counterclockwise.
- c. Screw on the air vent screw.

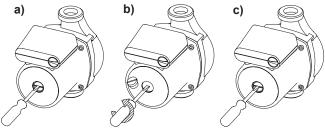

6 Additional water should be filled after removing air until it reaches approximately 1.8 bar.



#### NOTE

- During filling, the air in the circuit may not be able to be removed. Additional air purger in the installation should be installed
- The maximum water pressure is 3 bar (safety valve nominal opening pressure).
- For heating floor system, the air should be purged by means of an external pump and an open circuit to avoid air bags.
- Make sure that all field supplied components installed in the piping circuit can withstand the water pressure.
- The unit is only to be used in a closed water circuit.
- The internal air pressure of the expansion vessel tank will be adapted to the water volume of the final installation (factory supplied with 0.8 bar. of internal air pressure).



# 3.4.5 Water flow adjustment


In every installation the circuit's water flow must be adjusted according to its particular internal Water pressure lost. In addition to this, the circuit should be set according to the Space heating (Heating Floor, Radiators, Fan Coils) and its corresponding water outlet temperature. The procedure for adjusting the water flow is described below:

- Pressure lost calculation
- 2 Check the pump performance curves
- 3 Selection of the pump speed
- 4 Water flow adjustment

#### Procedure:

# 1 Pressure lost calculation

The indoor unit is factory supplied with two water pressure ports placed in the upper front support. The object of these water pressure ports, is to offer the installer a quick connection to read the lost pressure in the circuit when commissioning.

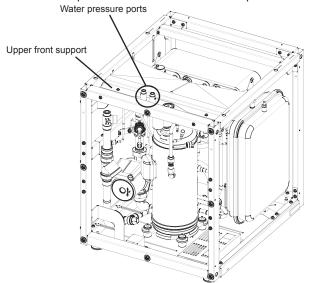

Plug in a differential manometer to the pressure ports and open the inlet / outlet ports (1\*).

The pressure lost is calculated from the pressure difference between the value of the inlet and the outlet water pressure.



## NOTE

(1°) If there is no having a Differential Manometer, it is possible to do this operation with just one std. Manometer (it is advisable to use the same manometer in order to avoid reading mistakes from different devices because of different tolerances or adjustment).


#### 2 Check the pump performance curves

Refer to the pump performance curves (see next chapter pressure charts) to calculate the circuit's water flow depending on the actual pressure drop and the space heating type (Heating Floor, Radiators, Fan Coils).

# 2

# 3 Selection of the pump speed

The indoor unit pump should be adjusted according to pressure lost of the circuits and the calculated water flow. The pump speed selector switch is located on the pump's terminal box.

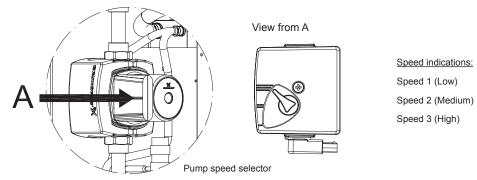



The pumps are factory supplied on speed 3 (High)

## 4 Water flow adjustment


The water flow should be adjusted by closing one of the main shut-off valves (field supplied) of the space heating installation until the pressure matches the pump performance curves.


Finally, the differential manometer should be removed once the water pressure ports are closed.




# 3.4.6 Pressure charts

# **♦ RWH-(4.0-6.0)FS(V)NFE**

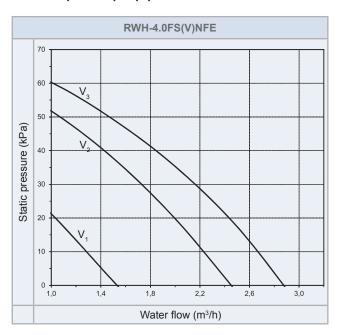

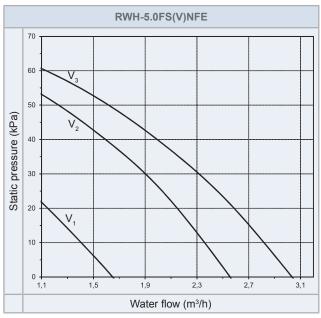

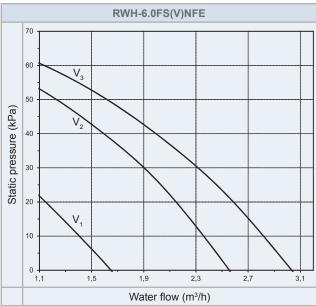



V: Pump motor speed ( $V_1$ : Low,  $V_2$ : Medium,  $V_3$ : High)



# 3.5 DHW hydraulic circuit (Optional)



#### DANGER


Do not connect the power supply to the indoor unit and DHW tank prior to filling both circuits with water and checking water pressure and the total absence of any water leakage.



## NOTE

- · Connect all pipes as close as possible to the unit, so that disconnection can be easily performed when required.
- It is recommended to use flexible joints for the water piping inlet and outlet in order to avoid vibration transmission.
- Apply thermal insulation on the hydraulic system pipes in order to avoid accidental injure due to excessive heat on piping surfaces and also to avoid heat losses.
- Proper water pipe inspection should be performed after piping work to assure there is no water leakage in the circuit by completely opening the DHW inlet and outlet shut-off valves.
- The heating coil of the tank is placed in a highest position than the indoor unit air purger. Then, to totally purge the space heating circuit, it is very important that the heating coil of the tank will be fully air purged.
- The indoor unit is equipped with an air purger (factory supplied) at the highest location of the indoor unit. If this location is not the highest of the water installation, air might be trapped inside the water pipes, which could cause system malfunction. In that case additional air purgers (field supplied) should be installed to ensure no air enters the water circuit.
- When the unit is stopped during shutdown periods and the ambient temperature is very low, the water in the pipes and
  the circulating pump may freeze, thus damaging the pipes and the water pump. In order to prevent this, the unit has a
  self-protection mechanism which should be activated (refer to Optional functions chapter).
- Fresh water must circulate inside the DHW tank water circuit at least one time per day during the first days after the installation has been performed.
- The storage capacity of the tank has to meet with the daily consumption in order to avoid stagnation of water.
- Try to avoid long runs of water piping between the tank and the DHW installation in order to decrease possible temperature losses.
- Insure that the installation, testing and applied materials comply with applicable legislation.

# 3.5.1 Hydraulic circuit

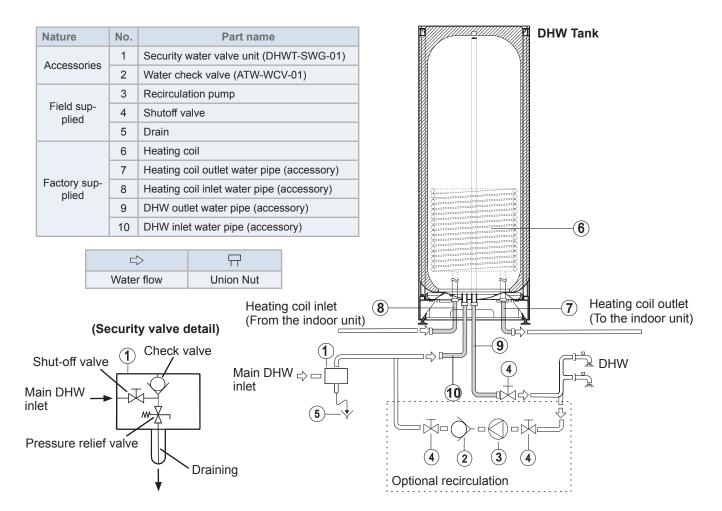




## **♦** Hydraulic necessary elements

The next hydraulic elements are necessary to correctly perform the domestic hot water circuit:

- 1 Security water valve (DHWT-SWG-01 accessory): this Hitachi accessory (1) is a pressure and temperature relief
  valve that must be installed as near as possible at the DHW inlet connection before the DHW inlet water pipe factory
  supplied (10) (pressure setting 7 bar). The security water valve provides:
  - Pressure protection
  - Non-return function
  - Shut-off valve
  - Filling
  - Draining

# Security water valve (DHWT-SWG-01)

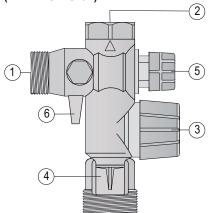

Ref.	Name
1	Main inlet water (DHW inlet)
2	Connection to the DHW inlet water pipe
3	Pressure relief valve and manual empty
4	Emptying connection (drain pipe)
5	Water check valve (non return)
6	Shut-off valve



#### NOTE

The discharge pipe should be always open to the atmosphere, free of frost and in continuous slope to the down side in case water leakage exists.

• 1 Shut-off valve (field supplied): one (4) must be connected after the DHW outlet water pipe factory supplied (9) in order to make easier any maintenance work.

#### **♦** Hydraulic optional elements

In case of a recirculation circuit for the DHW circuit:

- · 1 Recirculation pump (field supplied): this pump (3) will help to correctly recirculate the hot water to the DHW inlet.
- 1 Water check valve (ATW-WCV-01 accessory): this Hitachi accessory (2) is connected after the pump (3) in order to ensure the non-return of water.
- 2 Shut-off valves (field supplied): one (4) before the pump (3) and one (4) after the check valve (2) in Shut-off valve (field supplied).



### NOTE


If the domestic cold water entry pressure is higher than the equipment's design pressure (6 bar), a pressure reducer must be fitted with a nominal value of 7 bar.


# 3.5.2 Water piping

# **♦** Water pipes connection

#### **Indoor unit connections**


The DHW connections of the indoor unit are located where it is visible in the following images:

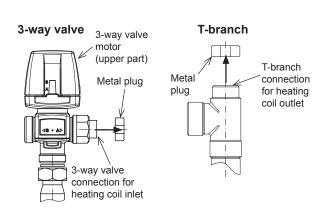

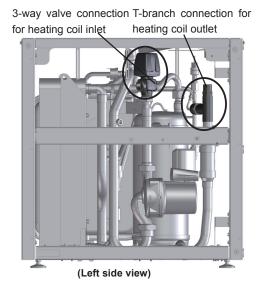

## **Tank connections**

The domestic hot water connections of the tank are located where it is visible in the following images:

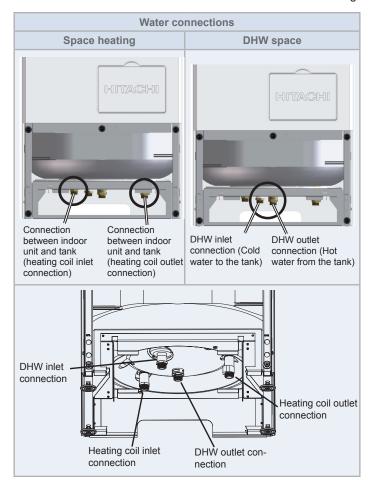




## **Piping size**


(mm (inches))


	Heating coil		DHW	
	From indoor unit	To indoor unit	From DHW installation	To DHW installation
DHWS-(195/260)S-2.0H1E	Ø19.05 (3/4")	Ø19.05 (3/4")	Ø19.05 (3/4")	Ø19.05 (3/4")

# Heating coil and DHW pipes (factory supplied)

The DHW tank is factory supplied with two water pipes (heating coil pipes) to connect with the indoor unit (to the T-branch and to the 3-way valve) and other two (DHW pipes) for connection with the DHW installation. It is necessary to identify which are the two pipes for connection to the indoor unit and which are the other two pipes for connection to the DHW tank.

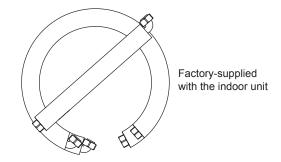

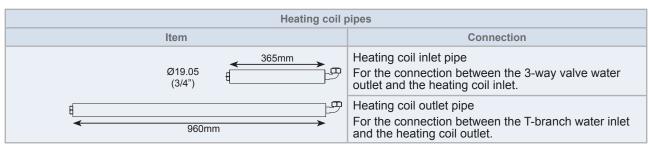

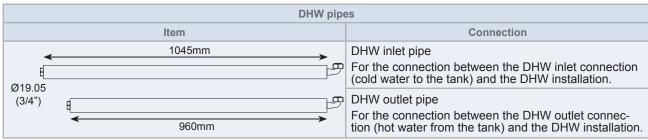





## ◆ Flexible water pipes kit ATW-FWP-01 (for installation of indoor unit beside HITACHI tank)

For installing the tank beside the indoor unit (both left or right side) the dedicated kit for installation with tank beside the indoor unit (ATW-FWP-01) is required. This kit is provided with the following items:

- · 2 flexible water pipes
- 5 gaskets (4 gaskets for each flexible water pipe end and 1 spare gasket)
- 3 extension cables (1 for the tank's electric heater, 1 for the tank's thermistor and 1 for the LCD controller).

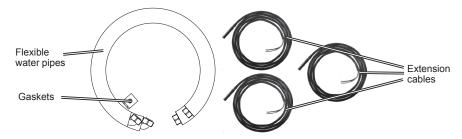

It is necessary to identify the function of each water pipe.

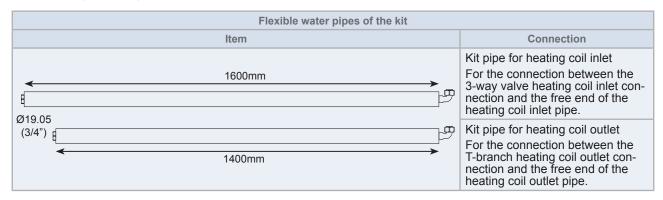



For the Flexible water pipes kit ATW-FWP-01 installation, please refer to the section Installation of Indoor unit with HITACHI tank (tank beside the indoor unit) in chapter Unit installation.

# 3.5.3 Water quality

# ♦ Heating coil and DHW circuit



# $oldsymbol{\lambda}$ CAUTION

- Water quality must be according to EU council directive 98/83 EC.
- Water should be subjected to filtration or to a softening treatment with chemicals before application as treated water.
- It is mandatory to do not add any kind of antifreeze product to the water circuit.
- To avoid deposits of scale on the heating coil surface it is mandatory to ensure a high water quality with low levels of CaCO<sub>2</sub>.
- It is also necessary to analyse the quality of water by checking pH, electrical conductivity, ammonia ion content, sulphur
  content, and others. Should the results of the analysis be not good, the use of industrial water would be recommended
  for the heating coil circuit.

#### Recommendations for the DHW circuit

The following is the recommended standard water quality.

	' '		
Item	DHW space	Tendency (1)	
	Water supplied (3)	Corrosion	Deposits of scales
Electrical Conductivity (mS/m) (25°C) {µS/cm} (25 °C) (2)	100~2000	•	•
Chlorine Ion (mg Cl <sup>-</sup> /l)	max. 250	•	
Sulphate (mg/l)	max. 250	•	
Combination of chloride and sulphate (mg/l)	max. 300	•	•
Total Hardness (mg CaCO <sub>3</sub> /I)	60~150		•



# NOTE

- (1): The mark "o" in the table means the factor concerned with the tendency of corrosion or deposits of scales.
- (2): The value showed in "??" are for reference only according to the former unit.
- (3): Water range will be according s/UNE 112076:2004 IN.

#### 3.5.4 Water filling

# ♦ Heating coil circuit

Fill the DHW tank heating coil from the space heating circuit filling in point. Follow the instructions explained in the *Space heating hydraulic circuit* chapter to correctly perform the operation.



# CAUTION

- Check that the heating coil pipes are correctly connected between indoor unit and tank before filling the tank's heating
  coil.
- Ensure the correct water quality of the indoor unit water circuit.

## **♦** Domestic hot water tank and circuit

- 1 Open all the outlet water taps of the DHW installation to eject all the air inside the water circuit.
- 2 Open the main DHW inlet valve (shut-off valve of the security water valve accessory DHWT-SWG-01) to fill of water the tank.
- 3 When water begins to leave by the outlet water taps of the DHW installation, close all these taps.
- 4 Finally, close the main DHW inlet valve when the pressure reaches approximately 6 bars.



# CAUTION

- Check carefully for leaks in the water circuit, connections and circuit elements.
- Check that the water pressure in the circuit is lower than 7 bars.
- Make sure that all field supplied components installed in the piping circuit can withstand the water pressure.
- Check that water flows free through the discharge pipe of the security water valve accessory (pressure relief valve) (DHWT-SWG-01).

3

# 4. Electrical and control settings

## Index

4.1.	General check	94
4.2.	System wiring diagram	95
4.3.	Electrical connection	96
	4.3.1. Wiring size	96
	4.3.2. Minimum requirements of the protection devices	97
4.4.	Transmission wiring between outdoor and indoor unit	98
4.5.	Electrical wiring connection between indoor unit and optional DHW tank	99
4.6.	Optional indoor unit wiring (accessories)	100
	4.6.1. Summary of the terminal board connections	100
	4.6.2. Terminal board detailed connections	101
4.7.	Printed circuit board (PCB)	107
	4.7.1. Outdoor unit	107
	4.7.2. Indoor unit	108
4.8.	Setting of DIP switches and RSW switches	110
	4.8.1. Outdoor unit	110
	4.8.2. Indoor unit	113
4.9.	Electrical wiring diagrams	118
	4.9.1. Electrical wiring diagram for outdoor unit	118
	4.9.2. Electrical wiring diagram for indoor unit	120



#### 4.1 General check

- Make sure that the following conditions related to power supply installation are satisfied:
  - The power capacity of the electrical installation is large enough to support the power demand of the YUTAKI S80 system (outdoor unit + indoor unit + optional DHW tank).
  - The power supply voltage is within ±10% of the rated voltage.
  - The impedance of the power supply line is low enough to avoid any voltage drop of more than 15% of the rated voltage.
- Following the Council Directive 2004/108/EC, relating to electromagnetic compatibility, the table below indicates the Maximum permitted system impedance Zmax at the interface point of the user's supply, in accordance with EN61000-3-11.

Outdoor unit	Z <sub>max</sub> (Ω) (*)
RAS-4HVRNME-AF	0.41
RAS-5HVRNME-AF	0.32
RAS-6HVRNME-AF	0.32
RAS-4HRNME-AF	-
RAS-5HRNME-AF	-
RAS-6HRNME-AF	-

	$Z_{ ext{max}}(\Omega)$				
Indoor unit	Indoor unit alone (Without tank)	Indoor unit with HITACHI tank			
RWH-4.0FSVNFE	0.31	0.19			
RWH-5.0FSVNFE	0.27	0.19			
RWH-6.0FSVNFE	0.24	0.19			
RWH-4.0FSNFE	-	0.37			
RWH-5.0FSNFE	-	0.37			
RWH-6.0FSNFE	-	0.37			



(\*) In case of outdoor unit three phases connection,  $Z_{max}$  is not considered.


• The status of Harmonics for each model, regarding compliance with IEC 61000-3-2 and IEC 61000-3-12, is as follows:

Status regarding compliance with IEC 61000-3-2 and IEC 61000-3-12	Models
Equipment complying with IEC 61000-3-12	RAS-4HVRNME-AF RAS-5HVRNME-AF RAS-6HVRNME-AF RWH-4.0FSVNFE RWH-5.0FSVNFE RWH-6.0FSVNFE
Equipment complying with IEC 61000-3-2 (professional use)	RAS-4HRNME-AF RAS-5HRNME-AF RAS-6HRNME-AF RWH-4.0FSNFE RWH-5.0FSNFE RWH-6.0FSNFE

- Check to ensure that existing installation (mains power switches, circuit breakers, wires, connectors and wire terminals) already complies with the national and local regulations.
- In case of indoor unit with HITACHI tank: The use of the DHW tank heater is disabled as factory setting. If it is desired to enable the DHW tank heater operation during normal indoor unit operation, adjust the DSW4 pin 1 of the PCB1 to the ON position and use these protections: CB=40A for single phase (1~) or CB=25A for three phase (3N~).

## 4.2 System wiring diagram

Connect the units (indoor, outdoor and the optional DHW tank) according to the following electric diagram:

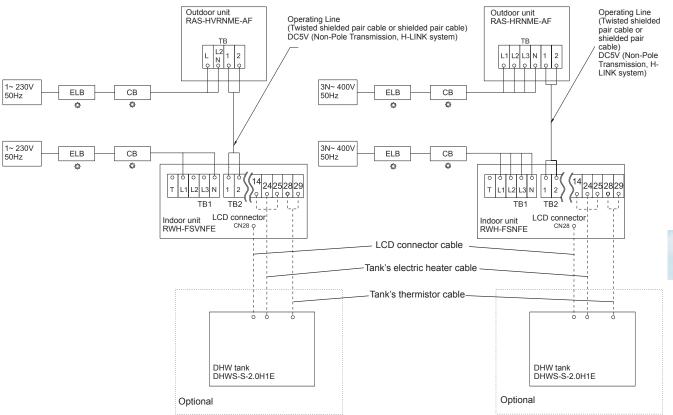

TB : Terminal board CB : Circuit breaker

ELB : Earth leakage breaker

: Internal wiring
: Field wiring
: Field-supplied

1,2 : Outdoor-Indoor connection

4



#### 4.3 Electrical connection



## CAUTION

- Check to ensure that the field supplied electrical components (mains power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated on this chapter and they comply with national and local codes. If it is necessary, contact with your local authority in regards to standards, rules, regulations, etc.
- Use a dedicated power circuit for the indoor unit. Do not use a power circuit shared with the outdoor unit or any other appliance.

#### 4.3.1 Wiring size

Use wires which are not lighter than the polychloroprene sheathed flexible cord (code designation 60245 IEC 57).

#### **Outdoor unit**

Model	Dower ounnly	Max. Current	Power supply cables	Transmiting cables	Actuator cables
Model	Power supply	(A)	EN60335-1	EN60335-1	EN60335-1
RAS-4HVRNME-AF		18.0	2 x 4.0 mm <sup>2</sup> + GND		2 x 0.75 mm <sup>2</sup> + GND
RAS-5HVRNME-AF	1~ 230V 50Hz	23.0	2 x 6.0 mm <sup>2</sup> + GND	2 x 0.75 mm <sup>2</sup>	
RAS-6HVRNME-AF		23.0	2 x 6.0 mm <sup>2</sup> + GND		
RAS-4HRNME-AF		7.0	4 x 2.5 mm <sup>2</sup> + GND	(*Shielded cable)	
RAS-5HRNME-AF	3N~ 400V 50 Hz	11.0	4 x 4.0 mm <sup>2</sup> + GND		
RAS-6HRNME-AF		13.0	4 x 4.0 mm <sup>2</sup> + GND		

#### Indoor unit alone (without tank)

Model	Power cumply	Max. current	Power supply cables	Transmiting cables	Actuator cables	
Model	Power supply	(A)	EN60335-1	EN60335-1	EN60335-1	
RWH-4.0FSVNFE		24.0				
RWH-5.0FSVNFE	1~ 230V 50Hz	28.0	2 x 6.0mm <sup>2</sup> + GND	2 x 0.75mm <sup>2</sup>	2 v 0 75 mm² + CND	
RWH-6.0FSVNFE		31.0				
RWH-4.0FSNFE		15.0		(*Shielded cable)	2 x 0.75mm <sup>2</sup> + GND	
RWH-5.0FSNFE	3N~ 400V 50Hz	15.0	4 x 2.5mm <sup>2</sup> + GND			
RWH-6.0FSNFE		15.0				

#### **Indoor unit with HITACHI tank**

Model	Indoor unit Model	Operation mode (*1)	Power supply	Max.	Power supply cables	Transmit- ing cables	Actuator cables
				(A)	EN60335-1	EN60335-1	EN60335-1
	RWH-4.0FSVNFE	Cton doud on oution		24.0	0 0 0		
	RWH-5.0FSVNFE	Standard operation (By default)	1~ 230V 50Hz	28.0	2 x 6.0mm <sup>2</sup> + GND 2 x 10.0mm <sup>2</sup> + GND		
RWH-(4.0-6.0)FSVNFE	RWH-6.0FSVNFE	(by deladit)		31.0			
+ DHWS-(195/260)S-2.0H1E	RWH-4.0FSVNFE	Indoor unit + DHW		33.0			
D1100-(133/200)0-2.0111E	RWH-5.0FSVNFE	tank heater combi-		37.0			
	RWH-6.0FSVNFE	nation		40.0		2 x 0.75mm <sup>2</sup>	2 x 0.75mm <sup>2</sup>
	RWH-4.0FSNFE	04		15.0	4 0 5 2	(*Shielded cable)	+ GND
	RWH-5.0FSNFE	Standard operation (By default)		15.0	4 x 2.5mm <sup>2</sup> + GND	Cabicy	
RWH-(4.0-6.0)FSNFE	RWH-6.0FSNFE	(by deladit)	3N~ 400V	15.0	1 GIVD		
+ DHWS-(195/260)S-2.0H1E	RWH-4.0FSNFE	Indoor unit + DHW	50Hz	25.0			
D1100-(193/200)3-2.0111L	RWH-5.0FSNFE	tank heater combi-		25.0	4 x 4.0mm <sup>2</sup> + GND		
	RWH-6.0FSNFE	nation		25.0	0.10		



(\*1): The DHW tank heater is intended to be used in case that indoor and/or outdoor unit are out of order. If the heater operation of the DHW tank is enabled during the indoor unit operation, the indoor unit CB and ELB could be switched off. If it is desired to enable the DHW tank heater operation during normal indoor unit operation, adjust the DSW4 pin 1 of the PCB1 to the ON position and consider the protections as indicated in "Indoor unit + DHW tank heater combination" on the previous table.



#### 4.3.2 Minimum requirements of the protection devices



#### CAUTION

- Ensure specifically that there is an Earth Leakage Breaker (ELB) installed for the units (indoor, outdoor and the optional DHW tank).
- If the installation is already equipped with an Earth Leakage Breaker (ELB), ensure that its rated current is large enough to hold the current of the units (indoor, outdoor and the optional DHW tank).



- Electric fuses can be used instead of magnetic Circuit Breakers (CB). In that case, select fuses with similar rated values as the CB.
- The Earth Leakage Breaker (ELB) mentioned on this manual is also commonly known as Residual Current Device (RCD) or Residual Current Circuit Breaker (RCCB).
- The Circuit Breakers (CB) are also known as Thermal-Magnetic Circuit Breakers or just Magnetic Circuit Breakers (MCB).

#### **Outdoor unit**

Model	Bower ounnly	Applicable voltage		MC	СВ	ELB	
Woder	Power supply	U max. (V)	U min. (V)	(A)	(A)	(no. of poles/A/mA)	
RAS-4HVRNME-AF		253	207	18.0	20		
RAS-5HVRNME-AF	1~230V 50Hz			23.0	25	2/40/30	
RAS-6HVRNME-AF				23.0	25		
RAS-4HRNME-AF		z 440		7.0	15		
RAS-5HRNME-AF	3N~ 400V 50 Hz		360	11.0	20	4/40/30	
RAS-6HRNME-AF				13.0	20		
MC: Maximum current; CB: Circuit breaker; ELB: Earth leakage breaker							

#### Indoor unit alone (without tank)

Model	Dawar aummly	Applicab	Applicable voltage		СВ	ELB	
Wodei	Power supply	U max. (V)	U min. (V)	(A)	(A)	(nº poles/A/mA)	
RWH-4.0FSVNFE		253	207	24.0	32		
RWH-5.0FSVNFE	1~ 230V 50Hz			28.0	32	2/40/30	
RWH-6.0FSVNFE				31.0	32		
RWH-4.0FSNFE				15.0	15		
RWH-5.0FSNFE	3N~ 400V 50Hz	440	360	15.0	15	4/40/30	
RWH-6.0FSNFE				15.0	15		
MC: Maximum current; CB: Circuit breaker; ELB: Earth leakage breaker							

#### Indoor unit with HITACHI tank


Model	Indoor Unit Model	Operation mode (*1)	Power supply	Applica ag U max. (V)	ble volt- ge U min. (V)	MC (A)	CB (A)	ELB (nº poles/A/ mA)
	RWH-4.0FSVNFE			, ,		24.0	32	
	RWH-5.0FSVNFE	Standard operation (By default)	1~ 230V 50Hz	253		28.0	32	2/40/30
RWH-(4.0-6.0)FSVNFE	RWH-6.0FSVNFE	(by delauit)			207	31.0	32	
+ DHWS-(195/260)S-2.0H1E	RWH-4.0FSVNFE	Indoor unit + DHW tank heater combi-				33.0	40	2/63/30
, ,	RWH-5.0FSVNFE					37.0	40	
	RWH-6.0FSVNFE	nation				40.0	40	
	RWH-4.0FSNFE				000	15.0	15	
	RWH-5.0FSNFE	Standard operation (By default)				15.0	15	
RWH-(4.0-6.0)FSNFE	RWH-6.0FSNFE	(By deladit)	3N~ 400V			15.0	15	
DHWS-(195/260)S-2.0H1E	RWH-4.0FSNFE	Indoor unit + DHW	50Hz	440	360	25.0	25	
, ,	RWH-5.0FSNFE	tank heater combi-				25.0	25	4/40/30
	RWH-6.0FSNFE	nation				25.0	25	
MC: Maximum current; CB: 0	Circuit breaker; ELB:	Earth leakage breake	r					

i NOTE

(\*1): The DHW tank heater is intended to be used in case that indoor and/or outdoor unit are out of order. If the heater operation of the DHW tank is enabled during the indoor unit operation, the indoor unit CB and ELB could be switched off. If it is desired to enable the DHW tank heater operation during normal indoor unit operation, adjust the DSW4 pin 1 of the PCB1 to the ON position and consider the protections as indicated in "Indoor unit + DHW tank heater combination" on the previous table.

#### 4.4 Transmission wiring between outdoor and indoor unit

- The transmission is wired to terminals 1-2.
- . The H-LINK II wiring system requires only two transmission cables that connect the indoor unit and the outdoor unit.

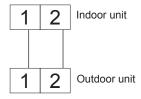

- Use twist pair wires (0.75 mm²) for operation wiring between outdoor unit and indoor unit. The wiring must consist of 2-core wires (Do not use wire with more than 3 cores).
- Use shielded wires for intermediate wiring to protect the units from noise interference, with a length of less than 300m and a size in compliance with local codes.
- · In the event that a conduit tube for field-wiring is not used, fix rubber bushes to the panel with adhesive.




Ensure that the transmission wiring is not wrongly connected to any live part that could be damaged the PCB.

### 4.5 Electrical wiring connection between indoor unit and optional DHW tank

#### **♦** Factory supplied cables


The supplied wires for the connection between the DHW tank and the indoor unit are already connected to the DHW tank. They are located at the bottom front side of the tank fastened with clamps. The LCD electrical cable at the right and the electric heater and thermistor cables at left.

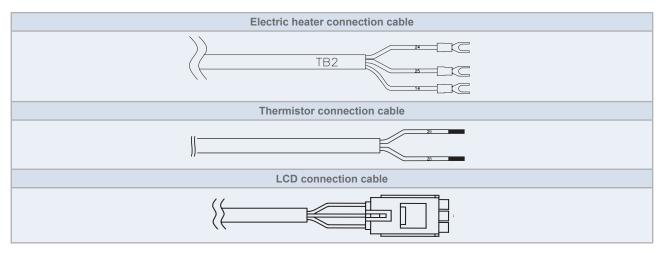

Model	Power supply	Maximum current (A)	LCD connection cable size	Electric heater con- nection cable size	Thermistor connection cable size	
			EN60335-1	EN60335-1	EN60335-1	
DHWS195S-2.0H1E	4 000// 5011-	0.7	C v O 2 may 2 v 4 0 ma	2 4 0	0 0 5	
DHWS260S-2.0H1E	1~ 230V 50Hz	8.7	6 x 0.3 mm² x 1.8m	3 x 1.0 mm² x 1.8m	2 x 0.5 mm² x 2.0m	

# **◆** Extension cables (supplied with the ATW-FWP-01 accessory. Only for installation of the DHW tank beside the indoor unit)

When the domestic hot water tank is installed beside the indoor unit, it is needed to extend the cables up to the terminal board 2 (TB2) of the indoor unit, which is placed at certain distance from the tank. These cables are the following:

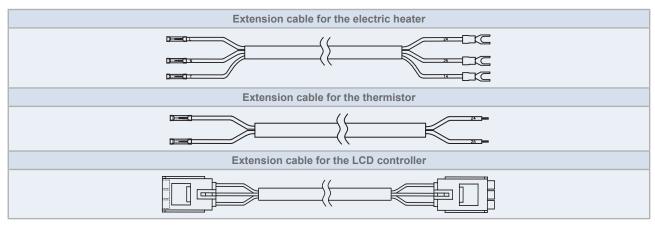


Model	Power supply	Maximum current (A)	LCD extension cable size	Electric heater ex- tension cable size	Thermistor extension cable size	
			EN60335-1	EN60335-1	EN60335-1	
DHWS195S-2.0H1E	4 2201/ 5011-	0.7	C v O 2 mana2 v 2 Fma	2 4 0 2 5	2 0 5 5	
DHWS260S-2.0H1E	1~ 230V 50Hz	8.7	6 x 0.3 mm² x 3.5m	3 x 1.0 mm² x 3.5m	2 x 0.5 mm² x 3.5m	

4



## 4.6 Optional indoor unit wiring (accessories)

## 4.6.1 Summary of the terminal board connections

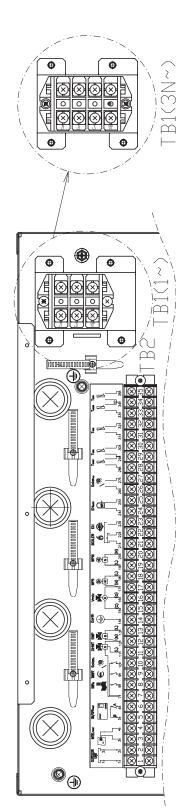

Mark	Part name		Description				
			TERMINAL BOARD 1 (TB1)				
N	1~ 230V						
L1	50Hz	3N~					
L2		400V 50Hz	-				
L3	-	30HZ					
	TERMINAL BOARD 2 (TB2)						
1	Indoor/Outdoo	Indoor/Outdoor commu- The H-LINK transmission between outdoor unit and indoor unit is w					
2	tation ca	bles	terminals 1-2.				
3	Opentherm co		Only for Intelligent Room thermostat accessory: The receiver is connected				
4	tion cab	oies 	to the polarity-free terminals A/B.				
6	Optional ON/C	OFF Room stat	The air to water heat pump system is designed to allow the connection of a remote thermostat to effectively control your home's temperature. Depending on the room temperature, the thermostat will turn the air to water heat pump system ON and OFF.				
7	L Comn	non	Terminal Line common for swimming pool, tariff switch, solar input and DHW Valve accessory.				
8	Swimming p	ool input	Only for swimming pool installations: It is necessary to connect an external input to the heat pump to provide signal when water pump of swimming pool is ON.				
9	Tariff switch	h input	If a tariff–switching device is provided by the electricity utility, it can be use to prevent the heat pump switching ON.				
10	Solar in	put	Available input for Solar combination with Domestic Hot Water Tank.				
11	Domestic Hot Water valve		The air to water heat pump can be used to heat DHW. This output will be ON when DHW is activated.				
12	N common		Neutral terminal common for accessory devices.				
13	Swimming pool valve		The air to water heat pump can be used to heat Swimming pool. This output will be ON when Swimming pool is activated.				
14	Earth Conr	nection	Terminal earth connection for accessories.				
15	Mixing valv	e close	When a mixing existent is required for a second temperature central, these				
16	Mixing valve open  N Common		When a mixing system is required for a second temperature control, the two outputs are necessary to control the mixing valve.				
17							
18	Water Pump	2 (WP2)	When there is a second temperature application, a secondary pump is the circulating pump for the secondary heating loop.				
19	Water Pump 3 (WP3)		When there is a hydraulic separator or buffer tank, additional Water pump (WP3) is needed.				
21	Common boi electric h		Terminal line common for combination with boiler or water electric heater				
22	Boiler/Water heater step		The boiler can be used to alternate with the heat pump when the heat pump cannot achieve the required temperature by itself.				
23	Water electri step 2 ou		A water electric heater (as accessory) can be used to provide the addition heating required on the coldest days of the year.				
24 25	Electrical Hea		If DHW Storage tank contains an electric heater, the air to water heat pum can enable it if the heat pump cannot achieve the required DHW tempera ture itself.				
26 27	Solar ou	itput	Output for solar combination with Domestic Hot Water Tank.				
28	DHW then	mistor	The DHW sensor is used to control the domestic hot water storage tank.				
29	Common the		Common terminal for thermistor.				
30	Water outlet b mistor (TH	oiler ther-	Water sensor for boiler combination.				
31	Water outlet C	2 thermis-	The sensor is used for the second temperature control and should be				
32	tor (THM		positioned after the mixing valve and the circulation pump.				
33	Second amb		The sensor is used for the second ambient temperature control and shoul be positioned outside.				
34(+)	Common the	ermistor	Common therminal for second ambient and swimming pool thermistor (+12Vcc).				
35	Swimming p misto		The sensor is used for the swiming pool temperature control and should be positioned inside plate HEX of swimming pool.				

#### 4.6.2 Terminal board detailed connections


#### **Room thermostat configuration**

There are two different room thermostat types (as accessory):

#### Optional intelligent room thermostat (TB2) (ATW-RTU-02)

Only for Intelligent Room thermostat accessory: The receiver is connected to the polarity-free terminals 3/4.

The Room Unit and RF Receiver are already configured to communicate with each other. If the Room Unit or RF Receiver is replaced or added additional second temperature circuit thermostat, it is necessary to use the RF binding procedure.

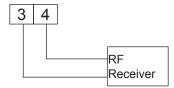

#### · Optional ON/OFF room thermostat (TB2) (ATW-RTU-01)

The heat pump system has been designed to allow the connection of a remote ON/OFF thermostat to effectively control your home's temperature. Depending on the room temperature, the thermostat will turn the unit system ON or OFF.


- If no thermostat is installed: Terminals 5 and 6 of the Board terminal are jumped. If no remote thermostat is installed, the operating condition for the unit (Thermo ON/OFF) will be controlled by the "water calculation" control system.



- Installation of the AF-RTU-01 Thermostat:

Remove jumper between terminals 5 and 6 of the Terminal Board 2 and connect the thermostat receiver as shown in the following image:



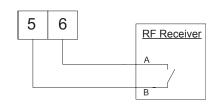

Thermostat requirements:

- Power supply: 230V AC.

Contact voltage: 230V.




#### NOTE

- If intelligent room thermostat is selected, optional ON/OFF thermostat has no effect.
- Set the configuration in the user control. See LCD user's interface configuration for more information.

4


#### **Swimming pool input (TB2)**

It is necessary to connect an external input to the heat pump to provide a signal when swimming pool's water pump is ON.

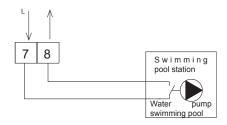

#### Tariff switch input (TB2)


If a tariff-switching device (load shedding management) is provided by the electricity utility, it can be used to prevent the heat pump switching ON.

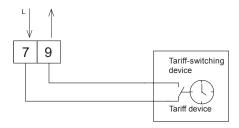

#### Solar input (TB2)


The solar pump station will have an auxiliary contact that closes when the solar pump station's pump contact is operated.

This contact will provide 230 V to the input of the indoor unit, and prevent domestic water heating by the heat pump and/ or booster heater during solar heating.

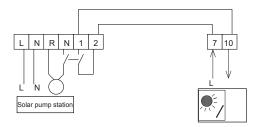

#### **Domestic hot water valve (TB2)**

The unit can be used to heat DHW. The signal is used for the 3-way motorized diverting valve and provide position control of supplied water flow (flow for space heating when no signal, and flow for DHW when signal is ON).

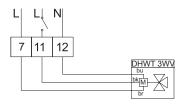

Using the appropriate cable, connect valve cable as shown in previous diagram.

Valve requirements:

- Power supply: 230V AC 50Hz.
- Maximum running current: 100mA.




#### CAUTION

Only 3-way type valve can be connected:

Spring return 2-wire type 3-way valve: The 3-way valve should be fitted when normally working (not power into the valve).
If using SPST 3-wire valve, HITACHI is not responsible for its operation.

#### **Swimming pool valve (TB2)**

The unit can be used to heat Swimming pool. The signal is used for the 3-way motorized diverting valve and to provide position control of supplied water flow (flow for space heating when no signal, and flow for swimming pool when signal is ON).

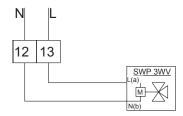

Using the appropriate cable, connect valve cable as shown in previous diagram.

Valve requirements:

- Power supply: 230V AC 50Hz.Maximum running current: 100mA

#### CAUTION

Only 3-way type valve can be connected:


- Spring return 2-wire type 3-way valve: the 3-way valve should be fitted when normally working (not power into the valve).
- If using SPST 3-wire valve, HITACHI is not responsible for its operation.

#### Earth connection (TB2)

An extra terminal is provided in the terminal board (TB2) for earth connection of the accessories (Terminal 14).

#### Mixing valve for 2<sup>nd</sup> circuit control (TB2)

In a mixing system (for second temperature level), the mixing valve is controlled to maintain the required supplied temperature.

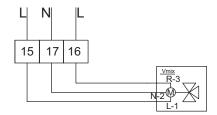

Item	Name	Description
15	Left	Closed
17	Neutral	Neutral
16	Right	Open

Using the appropriate cable, connect valve cable as shown in previous diagram.

Valve requirements:


- Power supply: 230V AC 50Hz.
- Maximum running current: 100mA

Λ



#### Water pump 2 for 2nd circuit control (TB2)

In case of second circuit installation (second temperature level), the secondary pump is the circulating pump for the second heating circuit.

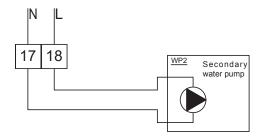


Using the appropriate cable, connect pump cable as shown in previous diagram.

Pump requirements:

- Power supply 230V AC 50Hz.
- Maximum running current: 500mA (In case of high water pump consumption, install an auxiliary relay).

#### Water pump 3 for hydraulic separator system (TB2)

When the boiler is configured with the heat pump or needs an additional pump for the system, a hydraulic separator or buffer tank must be used to ensure proper hydraulic balancing. Additional Water pump (WP3) is needed.

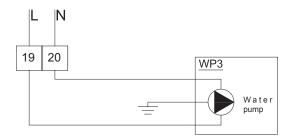

Using the appropriate cable, connect pump cable as shown in previous diagram.

Pump requirements:

- Power supply. 230Vac 50Hz.
- Maximum running current: 500mA (In case of high water pump consumption, install an auxiliary relay).

#### **Boiler or Water electric heater output (TB2)**



#### NOTE

For the coldest days of the year the YUTAKI S80 can combine with water electric heater or boiler, but not with both simultaneously.


#### · For water electric heater combination

The desired heating supplied can be more exactly provided by means of the 3 steps electric heater control. When a contactor receives the signal and close it, an electrical resistance is activated, resulting in one step heater power.

The following table shows the state of each step:

Step	Total input power (kW)	
	RWH-(4.0-6.0)FS(V)NFE	
1	2.0 (*)	
2	4.0 (*)	
3	6.0 (*)	

Perform the following connections depending on the desired input power:

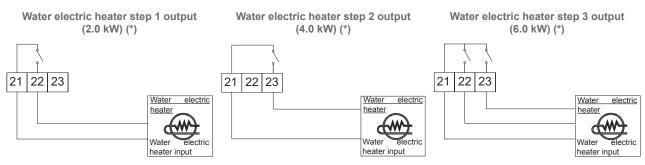




#### NOTE

(\*): The input power values shown previously are explained as example for water electric heater supplied for HITACHI as accessory (WEH-6E), with a total input power of 6.0 kW. For water electric heaters of other total input power, the input power for each step will be different.

#### · For boiler combination

The boiler output is activated when boiler demands it, in order to provide the required heating capacity when YUTAKI S80 is not able to provide by itself. Perform the connection as follows:

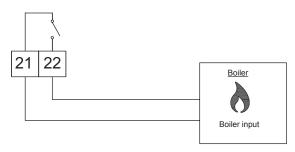


4



#### **Electrical heater DHW output (TB2)**


The air to water heat pump can enable the DHW tank's heater if the heat pump cannot achieve the required DHW temperature itself.

Don not forget connecting also the earth wire to the terminal 14.

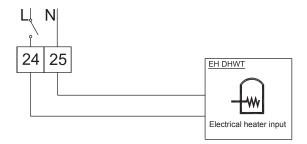


#### Solar output (TB2)

When solar mode is enabled by the heat pump and the temperature in the solar panel rises above the water temperature in the domestic hot water tank, Heat pump outputs will be switched ON.

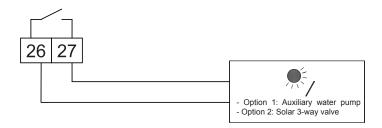

#### **Thermistors**

- The DHW sensor (THM<sub>DHWT</sub>) is used to control the domestic hot water storage tank.
- Water sensor (THM<sub>wo3</sub>) for hydraulic separator or buffer tank and boiler combination.
- The mixed supply sensor (THM<sub>WO2</sub>) is used in systems with a mixing valve and should be positioned after the mixing valve and the circulation pump on the second circuit.
- 2nd ambient sensor (THM<sub>AMB2</sub>) is used when the heat pump is located in a position not suitable for this measurement
- Swimming pool sensor (THM<sub>SWP</sub>) is used for the swimming pool-temperature control and should be positioned inside plate HEX of swimming pool.

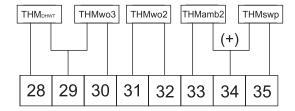




2nd Ambient sensor and swimming pool temperature uses a sensor with 4-20mA transceiver. The 4-20mA signal is polarity-sensitive. You must connect the wires as shown.



## 4.7 Printed circuit board (PCB)

#### 4.7.1 Outdoor unit

#### **♦** RAS-(4-6)H(V)RNME-AF

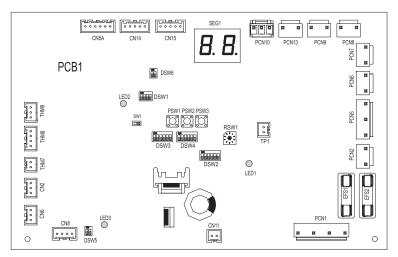


Connector indication			
PCN1	Power supply		
PCN2	PCB1 connection from outdoor to indoor unit		
PCN5	Crankcase heater of compressor (oil)		
PCN6	Output optional function		
PCN7	Output optional function		
PCN8	Pressure switch protection		
PCN9	Compressor contactor		
PCN13	Pressure switch control		
THM7	Outdoor air temperature thermistor		
THM8	Pipe evaporation temperature thermistor		
THM9	Compressor discharge temperature thermistor		
CN2	Current transformer		
CN5A	Micro electronic expansion valve		
CN8	Transmission from outdoor to indoor unit		
CN14	Transmission between PCB1 and ISPM		
EFS1, 2	Power protection		


Switch indication			
DSW1 (PCB1)	Test run		
DSW2	Piping length and selection function		
DSW3	Capacity code		
DSW4/ RSW1	Refrigerant cycle number		
DSW5	End terminal resistor		
DSW6	Power source setting		

LED indication			
LED1	Red	This LED indicates the transmission status between the indoor unit and the RCS	
LED2	Yellow	This LED indicates the transmission status between the indoor unit and the outdoor unit	
LED3	Green	Power source for the PCB	


#### 4.7.2 Indoor unit

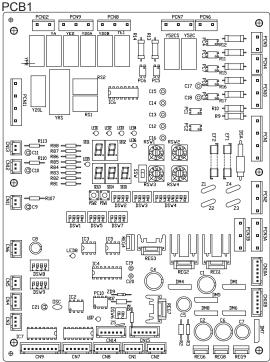


PCB1	Switch indication			
PODI	Name	Connector No.		
	Additional setting	DSW1		
	Capacity Setting	DSW2		
	Optional functions	DSW3		
	Optional functions	DSW4		
	Additional setting	DSW5		
	H-link (transmission)	DSW6		
	Not used	DSW7		
Operation	Not used	DSW8		
/ Display	Not used	DSW9		
	Defries went weit edduces	RSW1		
	Refrigerant unit address	RSW2		
	Indoor unit address	RSW3		
		RSW4		
	Checking Mode (Forward)	PSW1		
	Checking Mode (Back)	PSW2		
PCB1	LED indication			
ГОВТ	Name	Connector No.		
	7-segment	SEG1,2,3,4,5		
	Water Pump operation	LED1		
	Heater or Boiler operation	LED2		
	DHW Heater operation	LED3		
LEDS	Heat pump operation (compressor 1)	LED4		
	Power supply in the unit	LED5		
	Alarm (Flickering with 1 sec interval)	LED6		
	Not used	LED7		
	H-Link transmission	LED8		

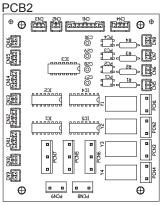

	BNOd		
PCB1	Connector Indications		
PCBT	Name	Connector No	
	Power supply	PCN1	
	Devices power supply	PCN2	
Power	Input transformer power supply (230V)	PCN3A,B	
	Ouput transformer power supply (24V)	CN10A,B	
	LCD Power supply	CN15	
Protection Device	Low Water Pressure & Water Flow control	PCN10-1	
Transmis-	H-Link communication	CN1	
sion	PCB1-PCB2 communication	CN2,5,6,9	
	Swimming pool temp. thermistor ( $THM_{SWP}$ )	CN3	
	2nd ambient temp. thermistor (THM <sub>AMB2</sub> )	CN4	
	R410A expansion valve (MV1)	CN7A	
	THMswp/amb2 power supply	CN14	
	Room thermostat (ON/OFF)	PCN6-1	
	Water pump 1	PCN7-5	
External	3-way valve swimming pool output	PCN8-1	
Input /	3-way valve DHW output	PCN8-3	
Output	Mixing valve second temperature left	PCN9-5	
Ì	Secondary pump output (WP2)	PCN9-3	
	Secondary pump output (WP3)	PCN9-1	
	Swimming pool input	PCN10-5	
	Electrical Tariff input	PCN10-3	
	Solar input	PCN7-1	
	Mixing valve second temperature right	PCN12-3	
	Connector Indications		
PCB2	Name	Connector Nº	
	Boiler signal / Heater signal	PCN1	
	Boiler signal / Heater signal	PCN2	
Actuator	DHW tank heater signal	PCN3	
	Solar signal	PCN4	
Transmis- sion	Transmis- PCB1-PCB2 communication		
	Water inlet thermistor (THM <sub>WI</sub> )	CN9	
	Water sanitary tank thermistor (THM <sub>DHW</sub> )	CN10	
	Liquid 410A Thermistor (THM <sub>L</sub> )	CN11	
A/D Input	Gas 410A Thermistor (THM <sub>G</sub> )	CN12	
	Water outlet Thermistor (THM <sub>wo</sub> )	CN13	
	Boiler / heater Thermistor (THM <sub>wo3</sub> )	CN14	
	Circuit 2 Thermistor (THM <sub>WO2</sub> )	CN16	

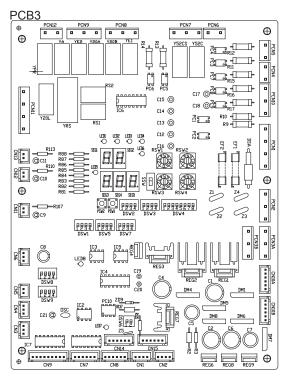

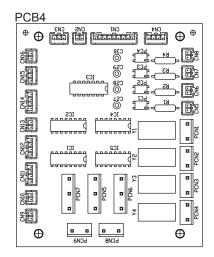

PCB3	Switch indication		
PCB3	Name	Connector No.	
	Not used	DSW1	
	Capacity Setting	DSW2	
	Not used	DSW3	
	Additional setting	DSW4	
	Power source setting	DSW5	
	H-link (transmission)	DSW6	
	Unit control configuration	DSW7	
Operation	Pressure device setting 1	DSW8	
/ Display	Pressure device setting 2	DSW9	
		RSW1	
	Natural	RSW2	
	Not used	RSW3	
		RSW4	
	Checking Mode (Forward)	PSW1	
	Checking Mode (Back)	PSW2	
DODA	LED indication		
PCB3	Name	Connector No.	
	7-segment	SEG1,2,3,4,5	
	Power supply indication	LED1	
	Not used	LED2	
	Not used	LED3	
LEDS	Heat pump operation (compressor 2)	LED4	
	Alarm (flickering with 1 sec interval)	LED5	
	Not used	LED6	
	Not used	LED7	

PCB3	Connector Indications			
1 000	Name	Connector Nº		
	Power supply	PCN1		
Power	Devices power supply	PCN2		
Power	Input transformer power supply (230V)	PCN3A,B		
	Output transformer power supply (24V)	CN10A,B		
Protec- tion Device	High pressure protection (t-out)	PCN5		
_	H-Link communication	CN1		
Trans- mission	PCB1-PCB2 communication	CN2,5,6,9		
1111331011	Inverter communication	CN8		
	Pressure sensor (suction) (R134a)	CN3		
	Pressure sensor (discharge) (R134a)	CN4		
	R134a expansion valve (MV2)	CN7A		
External Input /	Inverter communication	CN8		
Output	CMC Compressor (52C)	PCN7-3		
	Solenoid valve 1 (SV1)	PCN9-5		
	Solenoid valve 2 (SV2)	PCN9-3		
	Cranksheater (CHn)	PCN12-3		
PCB4	Connector Indications			
РСБ4	Name	Connector Nº		
Trans- mission	PCR3-PCR4 communication			
	Inverter EBOX ambient temperature Thermistor (THM $_{\rm EBOX}$ )	CN10		
A/D Input	R134a Suction Thermistor (THM <sub>s</sub> )	CN11		
	R134a Discharge Thermistor (THM <sub>D</sub> )	CN15		




#### 4.8 Setting of DIP switches and RSW switches

#### 4.8.1 Outdoor unit

#### ◆ Location of DIP switches and RSW switches

The PCB in the outdoor unit is operated with different dip switches, rotary switches and push switches.

Position switches at the PCB:

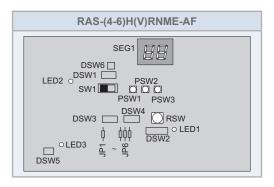

#### **♦** Function of the of DIP switches and RSW switches



#### NOTE


- The mark "■" indicates the position of dips switches.
- No mark "■" indicates pin position is not affecting.
- The figures show the settings before shipment or after selection.



#### CAUTION

Before setting dips switches, first turn the power source off and then set the position of the dips switches. In case of setting the switches without turning the power source off, the contents of the setting are invalid.

#### **DSW1: Test run**

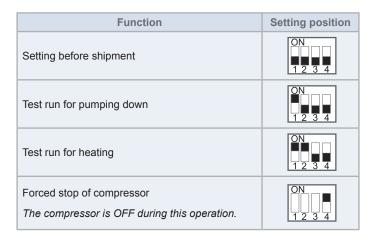



#### NOTE

- This operation is reset once the compressor is in Thermo-ON mode.
- During the test run operation the units will operate continuously during 2 hours without Thermo-OFF and the 3 minutes guard for compressor protection will be effective.



#### **DSW2: Piping length/selection function**

	Setting position	
Setting before shipment	ON 1 2 3 4 5 6	
Piping length	5 m < Lt	ON 1 2 3 4 5 6
r iping iengui	5 m < Lt < 30 m	ON 1 2 3 4 5 6
Cancellation of outdoor hot start control.  (Not recommended, only available for special testing cases)		ON 1 2 3 4 5 6
Cancellation of outdoor air temperature control. (No change)		ON 1 2 3 4 5 6
Optional function selection setting (set by PSW)		ON 1 2 3 4 5 6
External input/output selection signals (set by PSW)		ON 1 2 3 4 5 6



#### CAUTION


It is possible to select the cancellation of the outdoor hot start control by pushing both PSW1 & PSW3 simultaneously during 3 seconds. The cancellation of the outdoor hot start control configuration could damage the compressor if it is usually used. In that case the unit warranty will be voided.

#### **DSW3: Capacity setting**

Unit	Setting position	Unit	Setting position
RAS-4HVRNME -AF	ON 1 2 3 4 5 6	RAS-4HRNME-AF	ON 1 2 3 4 5 6
RAS-5HVRNME -AF	ON 1 2 3 4 5 6	RAS-5HRNME -AF	ON 1 2 3 4 5 6
RAS-6HVRNME-AF	ON 1 2 3 4 5 6	RAS-6HRNME -AF	ON 1 2 3 4 5 6



#### DSW4/RSW1: Refrigerant cycle setting (Do not change)

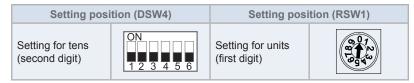

Rotary switches' positions (RSW1) are set by inserting a screw driver into the groove.

#### **DSW5:** Transmission setting of end terminal resistance

Before shipment, No. 1 pin of DSW5 is set at ON.

Function	Setting position
Setting before shipment	ON 1 2

#### **DSW6: Power source setting/individual operation**

Function	Setting position
	(4/5/6)HP
230V	ON
(setting before shipment)	12
400V	ON
(setting before shipment)	12

#### **♦** Jumpers

#### Jumper lead setting (JP1~6)

Setting before shipment:

JP1	JP2	JP3	JP4	JP5	JP6
1	0	0	1	1	1


0 = Open; 1 = Short circuit

#### **♦ LED's indication**

LED Indication		
LED1	Red	This LED indicates the transmission status between the indoor unit and the RCS
LED2	Yellow	This LED indicates the transmission status between the indoor unit and the outdoor unit
LED3	Green	Power source for the PCB

#### 4.8.2 Indoor unit

#### **♦ Location of DIP switches and RSW switches**

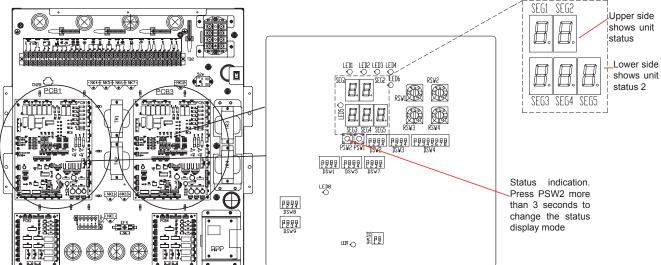

#### **♦** Functions of dip switches and rotary switches



#### NOTE

- The mark "■" indicates the dip switches positions.
- No mark "■" indicates pin position is not affected.
- The figures show the settings before shipment or after selection.
- "Not used" means that the pin must not be changed. A malfunction might occur if changed.



#### CAUTION

Before setting dip switches, first turn the power supply OFF and then set the position of dip switches. If the switches are set without turning the power supply OFF, the contents of the setting are invalid.

#### **♦** PCB1

#### **DSW1: Additional setting 1**

Factory setting	1234
Open SV1/2 for vacuum and refrigerant R410A recover function	1234

#### **DSW2: Capacity setting**

No setting is required.

RWH-4.0FS(V)NFE	ON 1 2 3 4
RWH-5.0FS(V)NFE	ON 12 3 4
RWH-6.0FS(V)NFE	1 2 3 4

#### **DSW3: Optional functions 1**

Factory setting	0N 1 2 3 4
1 step heater for 3 phase unit	ON 1 2 3 4

#### **DSW4: Optional functions 2**

ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8
ON 1 2 3 4 5 6 7 8



#### CAUTION

Never turn all DSW4 dip switch pins ON. If this happens, the software of the unit will be removed.

Never activate Heater Forced OFF and Emergency operation heater at the same time.



#### **DSW5: Additional setting 2**


In the cases where the outdoor unit is installed into a location where its own outdoor ambient temperature sensor can not give a suitable temperature measurement to the system, it is available the 2nd outdoor ambient temperature sensor as accessory.

By means of DSW setting, it can be selected the preferable sensor for each circuit.



#### NOTE

Switch ON the DSW4-2 to enable this additional setting.

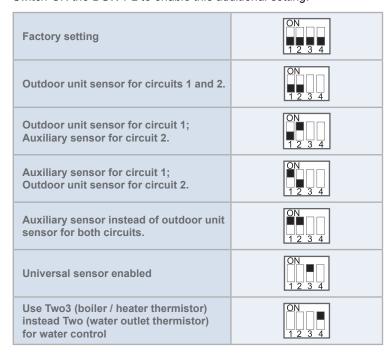

#### **DSW6: Not used**

Factory setting (Do not change)	ON 1 2
---------------------------------	--------

#### **DSW7: Capacity control function**

This function allows the capacity control by modifying the start and stop conditions of the second cycle, depending on the heat load of the installation when the water temperature is low.

Factory setting	ON 1 2 3 4
Power start  Medium heat load at low water temperature.	ON 12 3 4
High power start High heat load at low water temperature.	ON 12 3 4
Low power start  Low heat load at low water temperature.	ON 1 2 3 4

DSW8: Not used DSW9: Not used



#### **RSW1 & RSW2: Refrigerant system setting**

RSW1: Ten digits RSW2: Unit digits





#### **RSW3 & RSW4: Indoor unit address setting**

RSW3: Ten digits RSW4: Unit digits





#### **◆ PCB3**

#### **DSW1: Not used**

Factory setting (Do not change)



#### **DSW2: Capacity setting**

No setting is required.

RWH-4.0FS(V)NFE	ON 12 3 4
RWH-5.0FS(V)NFE	ON 1 2 3 4
RWH-6.0FS(V)NFE	ON 12 3 4

#### **DSW3: Not used**


Factory setting (Do not change)



#### **DSW4: Additional setting**

	Single phase (1~ 230V 50Hz)	Three phase (3N~ 400V 50Hz)
Factory setting (Do not change)	1 2 3 4 5 6 7 8	ON 1 2 3 4 5 6 7 8


#### **DSW5: Power source setting**

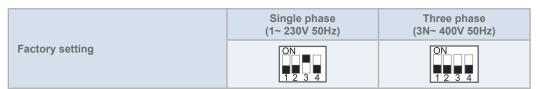

#### **DSW6: Not used**



#### **DSW7: Unit control configuration**

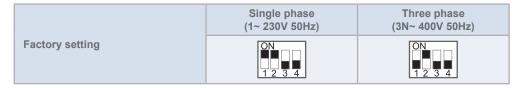

#### **DSW8: Not used**



#### **DSW9: Not used**



RSW1 & RSW2: Not used

RSW3 & RSW4: Not used

#### **♦ Led indications**

#### PCB1

Name	Color	Indication	
LED1	Green	Pump operation	
LED2	Green	System heater or boiler operation	
LED3	Green	DHW tank's heater operation	
LED4	Red	Heat pump operation (thermo ON/OFF)	
LED5	Yellow	Operation: indicates power supply to the unit	
LED6	Red	Alarm (flickering with 1 sec interval)	
LED7	-	Not used	
LED8	Yellow	H-link indication transmission	

#### PCB3

Name	Color	Indication
LED1	Green	Power supply indication
LED2	-	Not used
LED3	-	Not used
LED4	Red	Heat pump operation (compressor 2)
LED5	Yellow	Alarm (flickering with 1 sec interval)
LED6	-	Not used
LED7	-	Not used
LED8	Yellow	H-link indication transmission




## 4.9 Electrical wiring diagrams


#### 4.9.1 Electrical wiring diagram for outdoor unit

#### **♦** RAS-(4-6)HVRNME-AF (1~ 230V 50Hz)

Mand	- + - 0 3	
MGFK	10	Kernarks
M0F1,2	Motor (for Fan)	
EF1	Power Fuse	
CMC	Magnetic Contactor (for Compressor)	
RVR	Magnetic 4 Way Valve	
SVA	Solenoid Valve	
MΛ	Electrical Expansion Valve	
TB1	Terminal Board	
TF1		
PCB1	Printed Circuit Board	
EFR1		
Y52C	Aux.Relay (For Compressor,Magnetic Contactor)	DC Coil
Y21	Aux.Relay(For Magnetic 4 Way Valve)	DC Coil
Y20A	Aux.Relay(For Magnetic Valve)	DC Coil
Хсн	Aux.Relay(For C Heater)	DC Coil
THM7	Thermistor (for Outdoor Air)	
THM8	Thermistor (for Piping)	
EMHT	for	
PSH	High Pressure Switch(for Protection)	
PSC		
DCL	Reactor	
DIP-IPM	Inverter Module	
NF1~3	Noise Filter	
PSW1	Switch(Forced Defrosting)	On PWB
PSW2	Switch(Checking)	On PWB
PSW3	Switch(Checking)	On PWB
DSW1	Test Ru	On PWB
DSW2	Switch(Auxiliary Option Setting)	On PWB
DSW3	<b>Jutdoor Capacity</b>	On PWB
DSW4	Switch(Refrigerant Cycle Setting)	On PWB
DSW5		On PWB
9MSQ	urce Setting)	
-	ansmiss	On PWB
DS 1,2	Inserting Type Connector	
9		
ᆼ	Crankcase Heater	

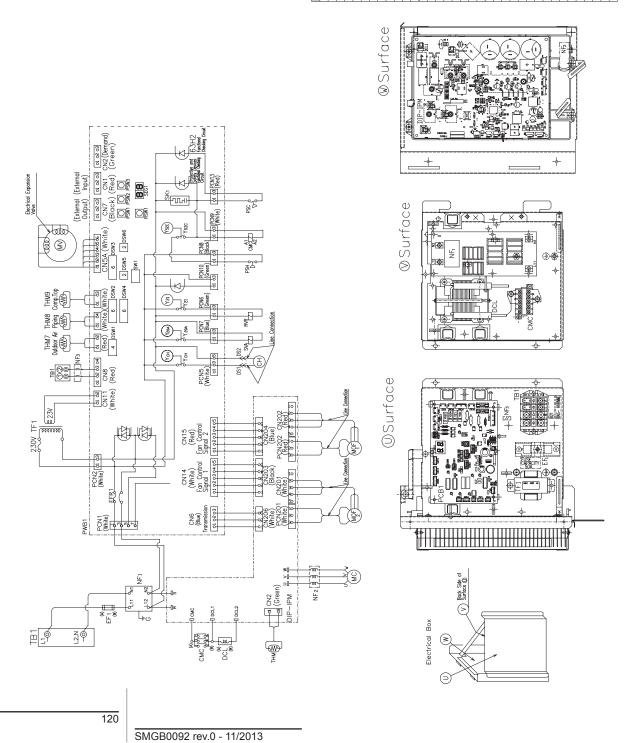

Jack	Name of Barto	Domarko
<u> </u>	j j	Nelliurs
IOF1,2	(for	
F1,2	Fuse	
MC1	Magnetic Contactor (for Compressor)	
Υ <sub>R</sub>	Magnetic 4 Way Valve	
Α	Solenoid Valve	
>	Electrical Expansion Valve	
31	Terminal Board	
F1	Transformer	
CB1	Printed Circuit Board	
CB2,3	Printed Circuit Board	
CB4	Printed Circuit Board	
FR1	Fuse	
52C	Aux.Relay(For Compressor,Magnetic Contactor)	DC Coil
21	Aux.Relay(For Magnetic 4 Way Valve)	
20A	Aux.Relay(For Magnetic Valve)	DC Coil
.5	Aux.Relay(For C Heater)	DC Coil
HM7	Thermistor (for Outdoor Air)	
HM8	(for	
6MH	Thermistor (for Comp. Top)	
SH	High Pressure Switch(for Protection)	
SC	High Pressure Switch(for Control)	
CL	Reactor	
B1,2	Capacitor	
PM	Inverter Module	
F1,2,6,7	Noise Filter	
SW1	Switch(Forced Defrosting)	On PWB
SW2	Switch(Checking)	On PWB
SW3	Check	- 1
SW1	Switch(Test Run)	- 1
SW2	Switch(Auxiliary Option Setting)	On PWB
SW3	Switch(Outdoor Capacity Setting)	On PWB
SW4	Switch(Refrigerant Cycle Setting)	On PWB
SW5	Switch	On PWB
SW6	Switch (Power Source Setting)	On PWB
W1	Switch(Transmission Changeover)	On PWB
1,2	Resistance (For Starting)	
PR	Reverse Protection Relay	
I	se Heater	

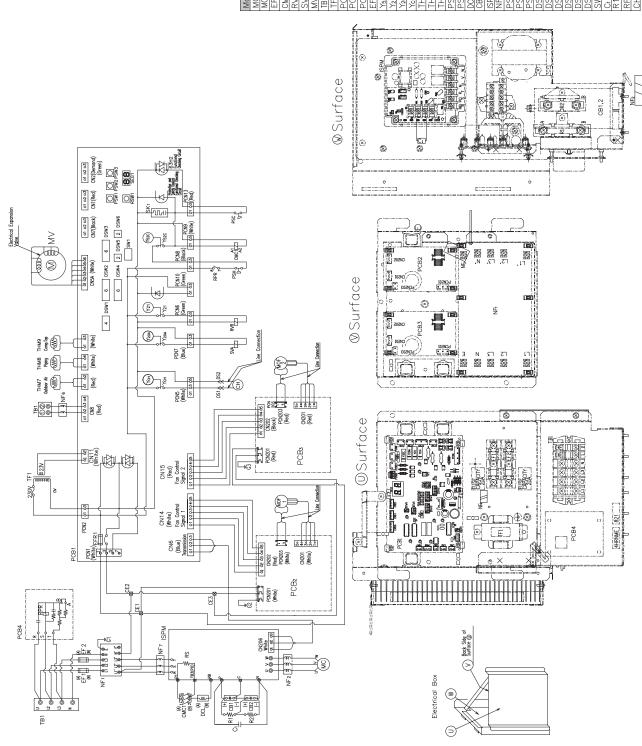


4





#### 4.9.2 Electrical wiring diagram for indoor unit

#### **♦ RWH-(4.0-6.0)FSVNFE (1~ 230V 50Hz)**

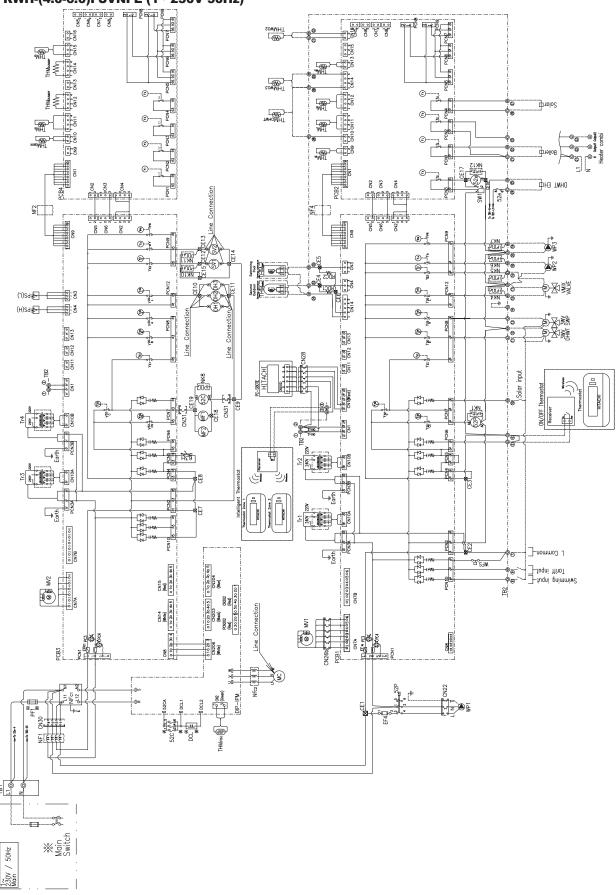


Look at next page for Mark table.

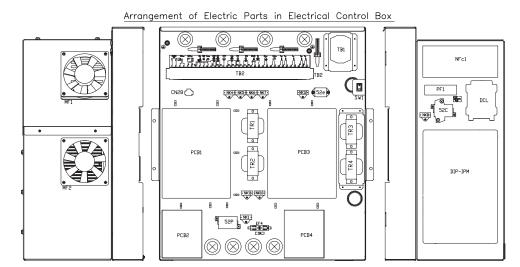

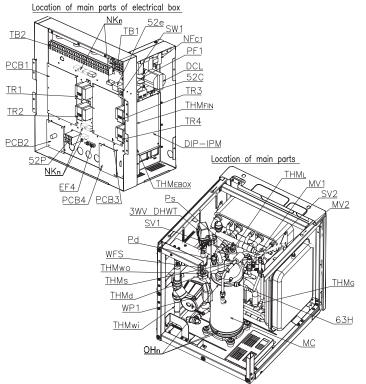

PCBs Sockets location

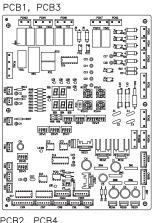

PCB2, PCB4

PCB2,

Mark Table (I)


Mark Table (II)

Mark Table (III)


Mark	Part Name
TB 1	Terminal Board (for Power Supply)
TB 2	Terminal Board (for Control Circuit)
PCB1	Printed Wiring Board (for Main Control 1cycle)
PCB2	Printed Wiring Board (for I/O 1cycle)
PCB3	Printed Wiring Board (for Main Control 2cycle)
PCB4	Printed Wiring Board (for I/O 2cycle)
PF <sub>1</sub>	Power Fuse for Compressor
NFc1	Noise Filter
NF <sub>1,2,4,C2</sub>	Ring Core
DIP-IPM	Inverter Module
52C	Contactor (for Compressor)
DCL	Reactor
MC	Motor (for Compressor)
CE 1~19	Connector (Terminating Connector)
CN22,266,28,30	
MV 1-2	Electrical Expansion Valve
Tr1~4	Transformers
PS (H)	High Pressure Sensor
PS (L)	Low Pressure Sensor
ТНМонит	Thermistor (DHWT water Temperature)
THM <sub>AMB2</sub>	2nd ambient sensor
IHMswp	Swimming pool sensor
THM <sub>wo2</sub>	Thermistor (Outlet C2 water Temperature)
ТНМwoз	Thermistor (Outlet boiler water Temperature)
THMs	Thermistor (for Suction Gas Temperature)
THM DUMMY	Resistance


Mark	Part Name
ТНМ гвох	Thermistor (for ambient E.BOX Inv. temperature)
THM₀	Thermistor (for Discharge Gas Temperature)
THMwi	Thermistor (for Inlet Water Temperature)
THML	Thermistor (for liquid pipe temperature)
THMg	Thermistor (for Gas pipe temperature)
THMwo	Thermistor (for Outlet Water Temperature)
THMfin	Thermistor (for Inverter FIN Temperature)
NK <sub>1,4~8,10~12</sub>	Noise Killer
OH <sub>1</sub> , 2, 3	Oil Heater
SV1.2	Solenoid Valve
MF1,2	Fan inverter E.BOX
63H	High Pressure Switch
Vmix	Mixing valve
3WVDHWT	3 Way valve for DHW
3WVswp	3 Way valve for SWP
LCD	User interface LCD
RDC <sub>1-2</sub>	Resistance
WFS	Water flow switch
WP	Water Pump
EF4	Fuse Pump
52P	Relay (for Pump)
52e	Relay (for Domestic Hot Water Heater)
E	Earth
SW1	Switch 1 (for DHWT Heater manual operation)
DSW <sub>n</sub>	Dip-switch setting
FFR <sub>1</sub>	Fuse

Mark	Part Name
EFS <sub>1</sub>	Fuse
RSW 1-2	Refrigerant Cycle n*
RSW 3-4	Indoor Unit no. Settings
SEG 1~5	Sevent segments indication
Y52 cs	Relay for Water Pump (WP)
Y 20B	Relay for 3 way valve DHWT
Y 20A	Relay for 3 way valve SWP
Y20L	Relay for Mixing valve left
Y <sub>E2</sub>	Relay for Mixing valve right
YA	Relay for Water Pump 2
Ypr	Relay for Water Pump 3
Y1	Relay for Boiler/Heater combination
Y 2	Relay for Heater combination
Y3	Relay for DHWT Electrical Heater
Y4	Relay for Solar combination
Y52 c	Relay for Inverter 2 cycle
Y <sub>20L</sub>	Relay for Oil Heater
Y <sub>E2</sub>	Relay for Solenoid Valve 1
YA	Relay for Solenoid Valve 2
	Terminals
	Close-end Connector
*	Field Supplied
	Field Wiring
	Earth Wiring
	Factory Wiring

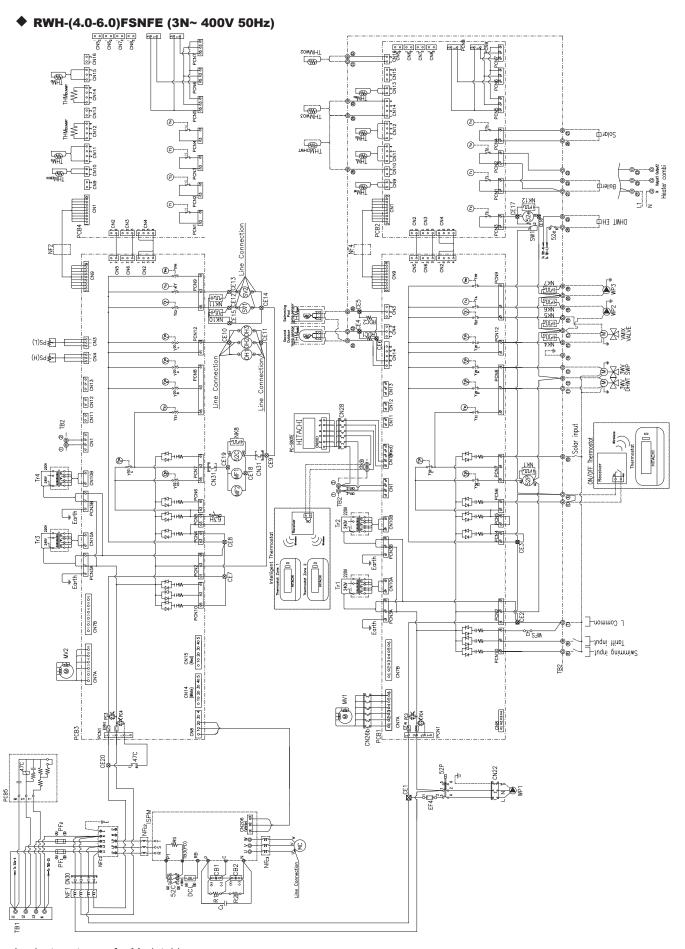

Look at next page for Mark table.

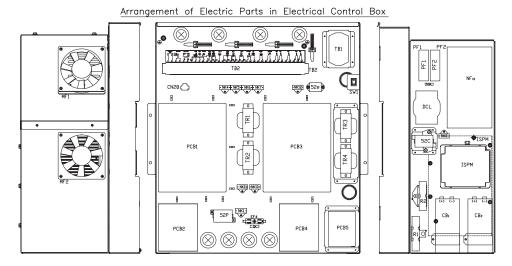

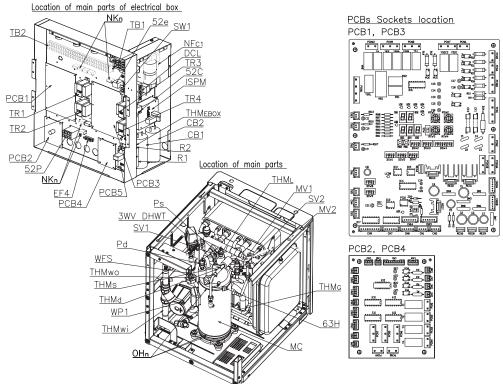

Mark Table (I)

Part Name Terminal Board (for Power Supply) Terminal Board (for Control Circuit)
Printed Wiring Board (for Main Control 1cycle)
Printed Wiring Board (for I/O 1cycle) Printed Wiring Board (for Main Control 2cycle)
Printed Wiring Board (for I/O 2cycle) CB3 CB4 PF<sub>1,2</sub> Power Fuse for Compressor Noise Filter Ring Core Inverter Module Contactor (for Compressor) Reactor Motor (for Compressor) Connector (Terminating Connector)
Connector Electrical Expansion Valve Transformers
High Pressure Sensor Low Pressure Sensor 2nd ambient sensor Swimming pool sensor
Thermistor (DHWT water Temperature)
Thermistor (Outlet C2 water Temperature)
Thermistor (Outlet boiler water Temperature) THMswp THM dhwt THMwoz THMwos THMs Thermistor (for Suction Gas Temperature) Resistance
Thermistor (for ambient E.BOX Inv. temperature)

Mark Table (II)

Mark	Part Name
THM₀	Thermistor (for Discharge Gas Temperature)
THMwi	Thermistor (for Inlet Water Temperature)
THML	Thermistor (for liquid pipe temperature)
THMc	Thermistor (for Gas pipe temperature)
THMwo	Thermistor (for Outlet Water Temperature)
PCB5	Printed Wiring Board (for Reverse Protection)
C1	Capacitor
R1,2	Resistance (for Starting)
CB1,2	Inverter Capacitor
47C	Reverse Protection Relay
NK <sub>1,4~8,10~12</sub>	Noise Killer
OH <sub>1</sub> , 2, 3	Oil Heater
SV1.2	Solenoid Valve
Vmix	Mixing valve
3WVDHWT	3 Way valve for DHW
3WVswp	3 Way valve for SWP
MF1,2	Fan inverter E.BOX
63H	High Pressure Switch
LCD	User interface LCD
RDC <sub>1-2</sub>	Resistance
WFS	Water flow switch
WP	Water Pump
EF4	Fuse Pump
52P	Relay (for Pump)
52e	Relay (for Domestic Hot Water Heater)
E	Earth
SW1	Switch 1 (for DHWT Heaer manual operation)

Mark Table (III)

nui K i	able (III)
Mark	Part Name
DSW <sub>n</sub>	Dip-switch setting
EFR <sub>1</sub>	Fuse
EFS <sub>1</sub>	Fuse
RSW 1-2	Refrigerant Cycle n°
RSW 3-4	Indoor Unit no. Settings
SEG 1~5	Sevent segments indication
Y52 cs	Relay for Water Pump (WP)
Y 20B	Relay for 3 way valve DHWT
Y 20A	Relay for 3 way valve SWP
Y 20L	Relay for Mixing valve left
Y <sub>E2</sub>	Relay for Mixing valve right
YA	Relay for Water Pump 2
Ypr	Relay for Water Pump 3
Υ1	Relay for Boiler/Heater combination
Y <sub>2</sub>	Relay for Heater combination
Y3	Relay for DHWT Electrical Heater
Y4	Relay for Solar combination
Y52 c	Relay for Inverter 2 cycle
Y 20L	Relay for Oil Heater
Y <sub>E2</sub>	Relay for Solenoid Valve 1
ΥA	Relay for Solenoid Valve 2
0	Terminals
-\>-	Close-end Connector
*	Field Supplied
	Field Wiring
	Earth Wiring
	Factory Wiring

# 5


# 5. Control system

## Index

5.1.	Device	e control system	126
5.2.	Safety	protection and control device	127
	5.2.1.	Indoor unit	127
	5.2.2.	Outdoor unit	127
5.3.	Installa	ation configurations	128
	5.3.1.	Main configurations	129
	5.3.2.	Additional combinations	132
5.4.	Standa	ard control functions	136
	5.4.1.	Space heating	136
	5.4.2.	Room Thermostat control	143
	5.4.3.	Circuit water pumps	149
	5.4.4.	Domestic Hot Water (DHW)	153
	5.4.5.	Swimming pool	160
	5.4.6.	Auxiliary electric heater accessory for space heating	161
	5.4.7.	Auxiliary Boiler combination for space heating	165
	5.4.8.	Solar combination	169
5.5.	Room	thermostat (accessory)	173
	5.5.1.	Room Thermostat Unit installation and configuration (as accessory)	173
	5.5.2	Installing the Programmable thermostat	174

#### 5.1 Device control system

The figure below shows the outline of the control system.

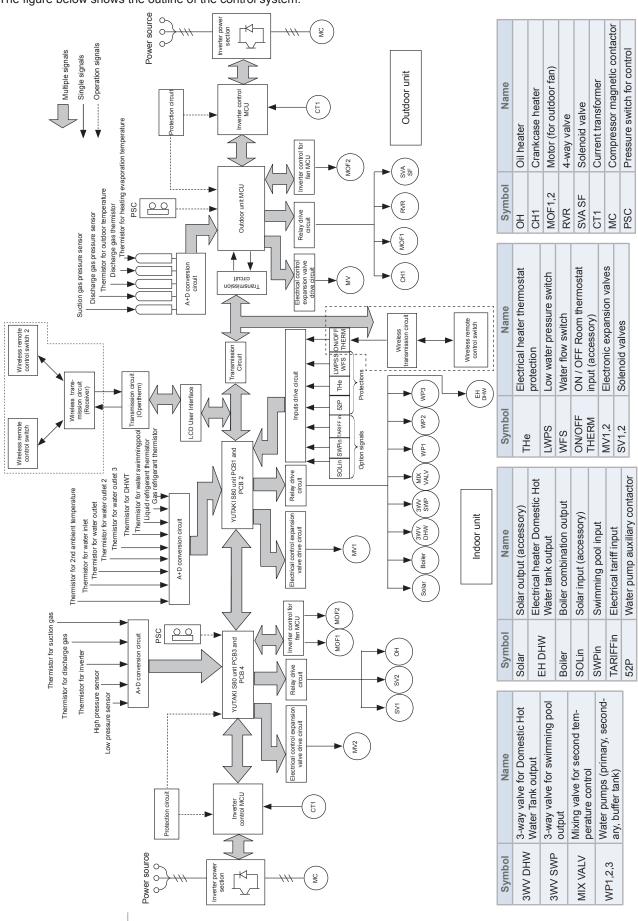



## 5.2 Safety protection and control device

#### 5.2.1 Indoor unit

MODEL			RWH-(4.0-6.0)FS(V)NFE				
For	Water circulation	n					
	High water pressure Low water flow switch		3 bar				
			Automatic reset				
		Open	12 l/min ±15 % contact opens with decreasing flow				
	Pump feedback		Input ON when relay ON				
For water temperature							
	High temperate	ure protection	+5°C of Maximum water temperature (Heating mode)				
For	refrigerant temp	erature					
	Freeze temper	rature protection	TI<-20°C (for 30 seconds)				
For	the control circu	iit					
	Fuse capacity		5A (Inside PCB)				
For the water pump							
	Fuse capacity		3.15A				

#### 5.2.2 Outdoor unit

MODEL				RAS-4H(V)RNME-AF	RAS-(5/6)H(V)RNME-AF			
_	High pressure switch			Automatic reset, non-adjustable				
For compressor		Cut-out	MPa	4.15 <sup>-0.05</sup> <sub>-0.15</sub>				
		Cut-out	IVIFa	3.20±0.15				
	Fuse	1~ 230V 50Hz	Α	40	50			
For control		3N~ 400V 50Hz		2x20	2x20			
	CCP timer setting time		min	•	justable			
For condenser fan motor Internal thermostat				Automatic reset, non-adju	stable (each one for each tor)			
DC	DC Cut-out		°C	-	-			
AC	Cut-out			-	-			
AC	Cut-in			-	-			
For control circuit			۸					
Fuse capacity on PCB			A					



## 5.3 Installation configurations



- The following installation examples show typical configurations. In case of variations of them, the responsibility of correct system functioning will be of the installer.
- The configuration examples given below are only for illustration purposes.

Туре		Space heating		DHW		Heating complement		Solar Kit	Swim-
	Description	Radia- tor/Fan coil	Floor	Tank (acces- sory)	Thermostat (optional)	Electric heater (accessory)	Boiler	(field sup- plied)	ming pool
Main	configurations								
	One space heating only								
1	Space heating installation by radiators or fan coils application, with a room thermostat as an option	0	×	×	0	×	×	×	×
	One space heating only and DHW tank								
2	Space heating installation (by radiators or fan coils application) + DHW tank, with a room thermostat as an option.	0	×	0	0	×	×	X	×
	Two space heating only		0	×	0	×	×	×	×
3	Two space heating applications (high & low water temperature), with a room thermostat as an option.	0							
	Two space heating only and DHW tank		0	0	0	×	×	×	×
4	Two space heating applications (high & low water temperature) + DHW tank, with a room thermostat as an option.	0							
Addit	ional combinations								
The n	ext configurations are combinable with the ma	in configura	ations (1	or 2 spac	e heating, with	n/without tank)	)		
5	Electric heater complement  Two possible space heating applications (high & low water temperature) + Electric heater (accessory) + optional DHW tank, with a room thermostat as an option.	0	0	0	0	0	×	×	×
	Boiler complement								
6	Two possible space heating applications (high & low water temperature) + Boiler complement + optional DHW tank, with a room thermostat as an option.	0	0	0	0	×	0	×	×
7	Solar complement						0		
	Two possible space heating applications (high & low water temperature) + Solar combination + op-	0	0	0	0	0	×	0	×
	tional DHW tank + optional Heating complement, with a room thermostat as an option.					×	0		
	Swimming pool combination								
8	Two possible space heating applications (high & low water temperature) + Swimming pool com-	0		0	0	0	×	0	0
	bination + optional DHW tank + optional Heating complement + optional Solar combination, with a room thermostat as an option.					×	0		




Only one heating complement (or boiler or electric heater) can be installed at the same installation.



# 5.3.1 Main configurations

# ◆ One space heating only (Installation example 1)


One space heating only: Space heating using radiators or fan coils with an optional room thermostat. The necessary LCD controller is supplied as accessory.

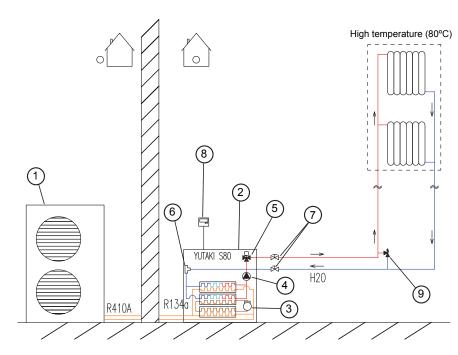

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	LCD controller (accessory)
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)

# ◆ One space heating and DHW Tank (Installation example 2)

One space heating and DHW Tank: Space heating using radiators or fan coils with an optional room thermostat. Domestic Hot Water Tank is heated by Heat Pump. The LCD is integrated with the DHW Tank.

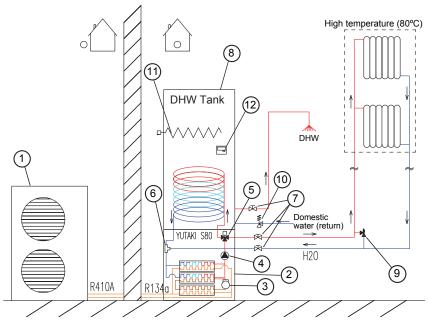

Item	Description	
1	Outdoor unit	
2	Indoor unit	
3	R134a compressor	
4	Water pump	
5	3-way valve	
6	T-branch	
7	Shut-off valves (field supplied)	
8	Domestic hot water tank	
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)	
10	Security valve (DHWT-SWG-01 accessory)	
11	DHWT heater (integrated with DHWT)	
12	LCD controller (integrated with DHWT)	




# ◆ Two space heating (High & Low water temperature) (Installation example 3)

Two space heating (High & Low water temperature): When the air to water heat pump is connected to two different heating circuits, circuit 1 will be direct (high temperature for radiator operation) and circuit 2 will be a mixing circuit in order to have a second temperature control using mixing valve motor (low temperature for floor heating operation). Additionally, a motorized valve must be added in order to close the direct circuit when it is not in use. In order to get these two water temperature levels (high and low), a mixing station is required. This mixing station is controlled using the indoor unit by means of a mixing valve motor and additional water sensor. Optional Room Thermostat. The necessary LCD controller is supplied as accessory.



- When YUTAKI S80 is working with two space heating applications (High & Low water temperature), it is necessary to install the 2nd temperature kit accessory (ATW-2KT-02) and the following accessories:
  - Water temperature sensor for second temperature control (ATW-WTS-02)
  - Mixing valve motor (ATW-MVM-01)
  - Aquastat for heating floor protection (ATW-AQT-01)
- Additionally, the Auxiliary output signal box accessory (ATW-AOS-01) is available to control the field supplied Motorized valve for the direct circuit.

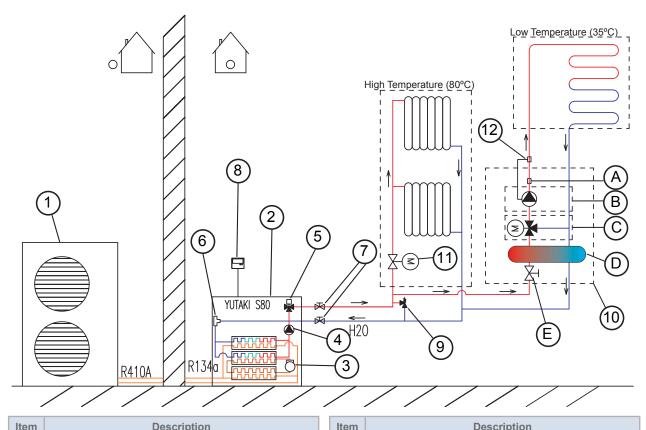

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	LCD controller (accessory)
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)

Item	Description
10	Second temperature kit (ATW-2KT-02 accessory)
11	Motorized valve (field supplied)
12	Aquastat (ATW-AQT-01 accessory)
Α	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve




## ◆ Two space heating (High & Low water temperature) and DHW Tank (Installation example 4)

Two space heating applications (High & Low water temperature) and Domestic Hot Water Tank: When the air to water heat pump is connected to two different heating circuits, circuit 1 will be direct (high temperature for radiator operation) and circuit 2 will be a mixing circuit in order to have a second temperature control using mixing valve motor (low temperature for floor heating operation). Additionally, a motorized valve must be added in order to close direct circuit when not in use. In order to get these two water temperature levels (high and low), a mixing station is required. This mixing station is controlled using the indoor unit by means of a mixing valve motor and additional water sensor. Domestic Hot Water Tank is heated by Heat Pump. The space heating and domestic hot water tank operation is alternated (or heating or DHW tank). Optional room thermostat. The LCD is integrated with the DHW Tank.



- When YUTAKI S80 is working with two space heating applications (High & Low water temperature), it is necessary to install the 2nd temperature kit accessory (ATW-2KT-02) and the following accessories:
  - Water temperature sensor for second temperature control (ATW-WTS-02)
  - Mixing valve motor (ATW-MVM-01)
  - Aquastat for heating floor protection (ATW-AQT-01)
- Additionally, the Auxilliary output signal box accessory (ATW-AOS-01) is available to control the field supplied Motorized valve for the direct circuit.

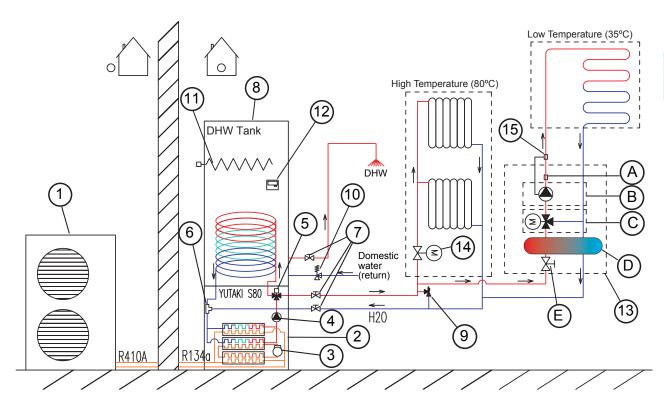

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	Domestic hot water tank
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)
10	Security valve (DHWT-SWG-01 accessory)

Item	Description
11	DHWT heater (integrated with DHWT)
12	LCD controller (integrated with DHWT)
13	Second temperature kit (ATW-2KT-02 accessory)
14	Motorized valve (field supplied)
15	Aquastat (ATW-AQT-01 accessory)
А	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve




#### 5.3.2 Additional combinations

# **♦** Electric heater complement (Installation example 5)

Two space heating applications (High & Low water temperature) + Combination with Electric heater + optional Domestic Hot Water Tank: Two space heating application with a Room Thermostat as an option heated by Heat Pump and supplemented by 3-stage electrical heater (as accessory) to provide additional heating capacity to the system (mono-energetic system). Optional Domestic Hot Water Tank is heated by Heat Pump. The LCD is integrated with the DHW Tank or supplied as necessary accessory if indoor unit is alone.



When YUTAKI S80 is working in Mono-energetic system (with electric heater) the electric heater accessory is available (WEH-6E). Additional water sensor (Two3) is also necessary. Use the ATW-WTS-02Y universal water sensor accessory if needed.

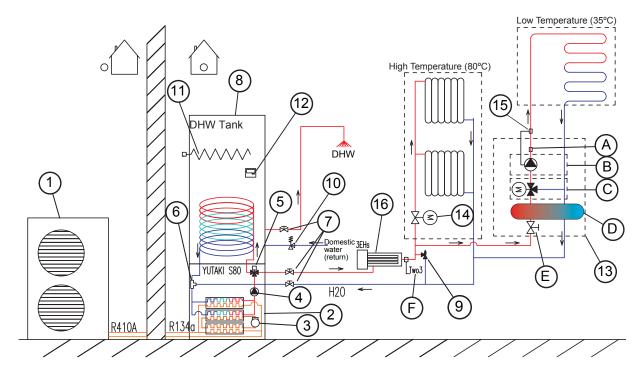

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	Domestic hot water tank
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)
10	Security valve (DHWT-SWG-01 accessory)
11	DHWT heater (integrated with DHWT)
12	LCD controller (integrated with DHWT)


Item	Description
13	Second temperature kit (ATW-2KT-02 accessory)
14	Motorized valve (field supplied)
15	Aquastat (ATW-AQT-01 accessory)
16	Electric heater (WEH-6E accessory)
А	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve
F	Universal water sensor (Two3) (ATW-WTS-02Y accessory)

# **♦** Boiler complement (Installation example 6)

Two space heating applications (High & Low water temperature) + Boiler combination + optional Domestic Hot Water Tank: Two space heating application with optional Room Thermostat heated by alternating Heat Pump and boiler. Optional Domestic Hot Water Tank is heated by Heat Pump. The LCD is integrated with the DHW Tank or supplied as accessory if indoor unit is alone.



- When YUTAKI S80 is working in Alternating Bi-valent system (with boiler), a hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing. Use the ATW-HSK-01 accessory if needed. Additional Water pump (WP3) and water sensor (Two3) (ATW-WTS-02Y accessory) are also necessary.
- When YUTAKI S80 is working in Alternating Bi-valent system (with boiler) install 2 water check valves (non-return) at the water inlet of the indoor unit and boiler. Use the ATW-WCV-01 accessory if needed.

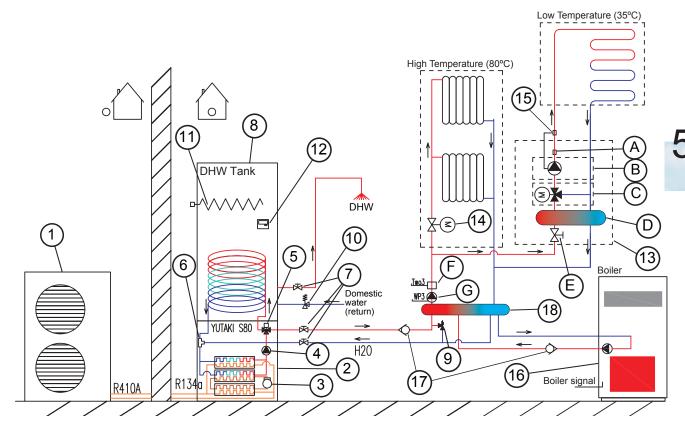

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	Domestic hot water tank
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)
10	Security valve (DHWT-SWG-01 accessory)
11	DHWT heater (integrated with DHWT)
12	LCD controller (integrated with DHWT)
13	Second temperature kit (ATW-2KT-02 accessory)

Item	Description
14	Motorized valve (field supplied)
15	Aquastat (ATW-AQT-01 accessory)
16	Boiler (field supplied)
17	Water check valve (ATW-WCV-01 accessory)
18	Hydraulic separator (ATW-HSK-01 accessory)
Α	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve
F	Universal water sensor (Two3) (ATW-WTS-02Y accessory)
G	Water pump 3 (WP3) (field supplied)




## Solar combination (Installation example 7)



Solar combination is not available when the HITACHI domestic hot water tank is integrated over the indoor unit.

Two space heating applications (High & Low water temperature) + Domestic Hot Water Tank + Solar combination + Heating complement (Boiler or Electric heater combination): Two space heating application with a Room Thermostat as an option heated by Heat Pump and alternating boiler or supplemented by 3-stage electrical heater. Domestic Hot Water Tank is heated by Heat Pump and also by free energy of the sun by means of a field supplied Solar panel and field supplied Solar Kit. The LCD is integrated with the DHW Tank.

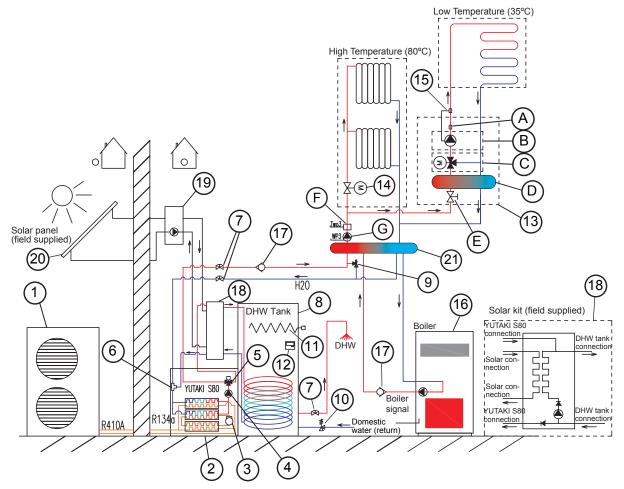

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	Domestic hot water tank
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)
10	Security valve (DHWT-SWG-01 accessory)
11	DHWT heater (integrated with DHWT)
12	LCD controller (integrated with DHWT)
13	Second temperature kit (ATW-2KT-02 accessory)
14	Motorized valve (field supplied)
15	Aguastat (ATW-AQT-01 accessory)

Item	Description
16	Boiler (field supplied)
17	Water check valve (ATW-WCV-01 accessory)
18	Solar Kit (field supplied)
19	Solar pump & control (field supplied)
20	Solar panel (field supplied)
21	Hydraulic separator (ATW-HSK-01 accessory)
А	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve
F	Universal water sensor (Two3) (ATW-WTS-02Y accessory)
G	Water pump 3 (WP3) (field supplied)




# ◆ Swimming pool combination (Installation example 8) - TOTAL combination

Two space heating applications (High & Low water temperature) + optional Domestic Hot Water Tank + Swimming pool combination + Heating complement (Boiler or Electric heater combination): Two space heating application with a Room Thermostat as an option and swimming pool space heated by Heat Pump and alternating boiler or supplemented by 3-stage electrical heater. Swimming pool is connected to the main circuit through a 3-way valve (ATW-3WV-01/02 accessory) and a heat exchanger (field supplied). Domestic Hot Water Tank is heated by Heat Pump. The LCD is integrated with the DHW Tank or supplied as necessary accessory if indoor unit is alone.



When YUTAKI S80 is working with a swimming pool the 3-way valve accessory is needed (ATW-3WV-01 or ATW-3WV-02).

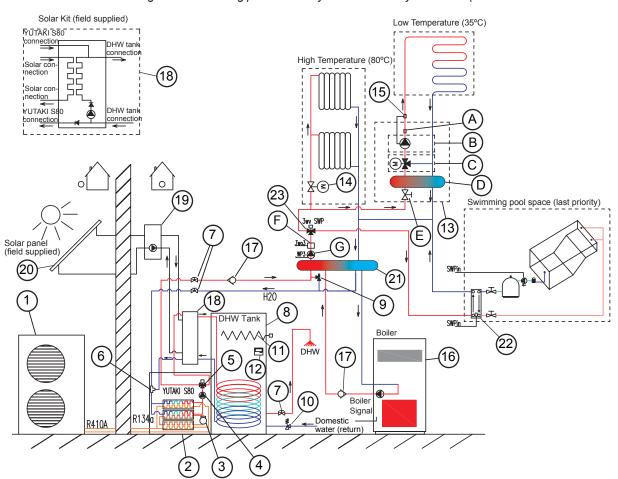

Item	Description
1	Outdoor unit
2	Indoor unit
3	R134a compressor
4	Water pump
5	3-way valve
6	T-branch
7	Shut-off valves (field supplied)
8	Domestic hot water tank
9	Differential pressure overflow valve (ATW-DPOV-01 accessory)
10	Security valve (DHWT-SWG-01 accessory)
11	DHWT heater (integrated with DHWT)
12	LCD controller (integrated with DHWT)
13	Second temperature kit (ATW-2KT-02 accessory)
14	Motorized valve (field supplied)
15	Aquastat (ATW-AQT-01 accessory)
16	Boiler (field supplied)

Item	Description
17	Water check valve (ATW-WCV-01 accessory)
18	Solar Kit (field supplied)
19	Solar pump & control (field supplied)
20	Solar panel (field supplied)
21	Hydraulic separator (ATW-HSK-01 accessory)
22	Swimming pool heat exchanger (field supplied)
23	3-way valve (ATW-3WV-01/02 accessory)
А	2nd Water Temperature sensor (ATW-WTS-02 accessory)
В	Secondary water pump
С	Mixing valve motor (ATW-MVM-01 accessory)
D	Hydraulic separator
Е	Shut-off valve
F	Universal water sensor (Two3) (ATW-WTS-02Y accessory)
G	Water pump 3 (WP3) (field supplied)

# 5.4 Standard control functions

# 5.4.1 Space heating

# Selecting space heating configuration

Available system configuration will be set using water type for space heating operation. There are two available circuits, one direct circuit and one mixed circuit.



## NOTE

Please refer to Installation configurations section for detailed information about the two circuits.

REF	Description	Default Value				
CIRCUIT 1 (Direct circuit)						
WTh1	Water Calculation T° C1 (None; Points; Gradient; Fix)	Gradient				
	CIRCUIT 2 (Mixed circuit)					
WTh2	Water Calculation To C2 (None; Points; Gradient; Fix)	None				



#### NOTE

As default, YUTAKI S80 is set for one circuit only (Direct circuit) and Gradient.

For information on how to create settings, refer to *LCD user's interface* chapter.

#### **Water temperature set-point**

Each of the 2 water circuits will have an independent water set-point.

#### Where:

- None
  - Heating circuit is disabled
- OTC Points
  - Water target is selected by an Outside Temperature Compensated (OTC) control that is defined by 4 different points (Minimum and maximum water outlet temperatures vs. Minimum and maximum outdoor ambient temperatures).
- OTC Gradient
  - Water target is selected by an Outside Temperature compensated (OTC) control that is defined by a different gradient of the curve. The initial point of the curve is always 20°C-20°C (Water outlet target 20°C at outdoor ambient temperature of 20°C).
- Fix
  - Water target value is defined by a fixed temperature set by the user.

# **♦** Space heating activation conditions

- Space heating mode is activated by any of following events:
  - Space Heating mode selected by user (LCD controller RUN/STOP button) or by remote action.
  - Space Heating mode Demand ON by external thermostat signal (ATW-RTU-01) (Option 1) or
  - Space Heating mode Demand ON by intelligent thermostat (ATW-RTU-02) (Option 2) or
  - Space Heating mode Demand ON by LCD Timer
- · Space heating mode is disabled if:
  - Domestic Hot Water operation mode is in load condition.
  - No-load condition is active (all of the activation events are inactive).
  - Tariff function or LCD Timer blocked.
  - Alarm.




#### NOTE

When Space Heating is not active then unit will not request compressor frequency for Space Heating and, if there are no other modes in operation, Outdoor Unit will receive Thermo OFF situation.

# ◆ Selection of heating circuit minimum/maximum temperature limits by Installer

The installer will limit the Space Heating Temperature Set-point in order to prevent excessively high or low temperatures in the space heating.



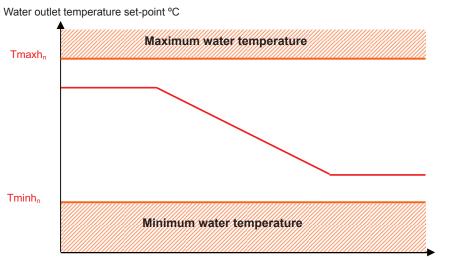

Outdoor ambient temperature (°C)

# Temperature Limit values:

REF	Description	Default Value	Range	Steps	Units	
	CIRCUIT 1 (Direct circuit)					
Tmaxh₁	Maximum supply T°	80	35 ~ 80	1	°C	
Tminh₁	Minimum supply T°	20	20 ~ 34	1	°C	
	CIRCUIT 2 (Mixed circuit)					
Tmaxh <sub>2</sub>	Maximum supply T°	55	35 ~ 80	1	°C	
Tminh <sub>2</sub>	Minimum supply T°	20	20 ~ 34	1	°C	



# CAUTION

Temperature limits have priority over all other temperature set-point modifications (Room Thermostat, User Selection, etc.), and maximum water temp is limited by unit's operational range.



# ◆ Ambient temperature calculation for water temperature compensation calculation

In order to avoid problems with sudden temperature changes an average ambient temperature will be used for ambient temperature instead of direct value. The average time will be 2 hours.

YUTAKI S80 can use the two outdoor temperature sensors (Outdoor unit ambient temperature and Auxiliary ambient temperature (4-20mA) for the two space heating circuits.

DSW setting

This function requires that DSW4#2 is set to ON to enable the use of auxiliary ambient temperature.

Source temperature for average calculation is selectable by DSW4#2 & DSW5#1,2 at start up with the following values:

DSW5		ACTION		
Pin 1	Pin 2	Circuit 1	Circuit 2	
OFF	OFF	Outdoor Sensor Average	Outdoor Sensor Average	
OFF	ON	Outdoor Sensor Average	Auxiliary Ambient Sensor Average	
ON	OFF	Auxiliary Ambient Sensor Average	Outdoor Sensor Average	
ON	ON	Auxiliary Ambient Sensor Average	Auxiliary Ambient Sensor Average	



#### NOTE


- Not average during first 30 seconds after switch ON (power ON).
- After 30 seconds starts outdoor ambient temperature average.



# ♦ OTC Points: Outside temperature compensated (OTC) control by points

OTC Points system will use average outdoor ambient temperature in order to get the water temperature set-point.

Water set-point will be determined using the following rule:

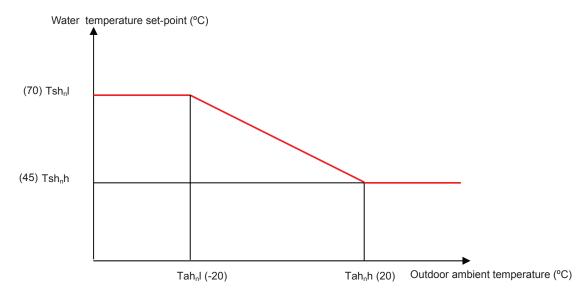

Where:

Tsh<sub>n</sub>l: Temperature setting at low ambient temperature

Tsh h: Temperature setting at high ambient temperature

Tah l: Low ambient temperature

Tah h: High ambient temperature

n: water circuit number (n= 1 or 2)

REF	Description	Default Value	Range	Steps	Units	
	CIRCUIT 1 (Direct circuit)					
Tah₁I	Low ambient T° C1	-20	-20~6	1	°C	
Tah₁h	High ambient T° C1	20	7~25	1	°C	
Tsh₁I	Set-point at low ambient T° C1	70	Tmaxh <sub>1</sub> ~Tminh <sub>1</sub>	1	°C	
Tsh₁h	Set-point at high ambient T° C1	45	Tmaxh <sub>1</sub> ~Tminh <sub>1</sub>	1	°C	
	CIRC	UIT 2 (Mixed circuit)				
Tah <sub>2</sub> l	Low ambient T° C2	-20	-20~6	1	°C	
Tah <sub>2</sub> h	High ambient T° C2	20	7~25	1	°C	
Tsh <sub>2</sub> I	Set-point at low ambient To C2	44	Tmaxh <sub>2</sub> ~Tminh <sub>2</sub>	1	°C	
Tsh <sub>2</sub> h	Set-point at high ambient T° C2	20	Tmaxh <sub>2</sub> ~Tminh <sub>2</sub>	1	°C	



#### NOTE

Parameters ( $Tmaxh_{(1/2)} \sim Tminh_{(1/2)}$ ) are defined by Maximum and Minimum water outlet temperatures selected by installer.



# CAUTION


- It is installer's responsibility to make sure no unwanted situation occurs (for example: water temperature setting too high into floor heating)
- Be aware that the water set-point for circuit 2 will always be lower than water calculation for circuit 1.
- When only circuit 1 is heating, circuit 2 will be fed with water at temperature equal to circuit 1's target water.



# ◆ OTC Gradient: Outside temperature compensated (OTC) control by gradient

Water target is selected by an Outside Temperature compensated (OTC) control that is defined by a different gradient of the curve. The initial point of the curve is always 20°C-20°C (Water outlet target 20°C at outdoor ambient temperature of 20°C).

The gradient of the heating curve describes the relation between the change in the supply temperature and the change in outside temperature.

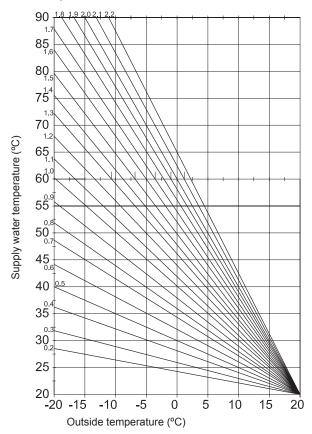

Gradient	Water Outlet Target
0.2	-0,2 x Text + 24
0.3	-0,3 x Text + 26
0.4	-0,4 x Text + 28
0.5	-0,5 x Text + 30
0.6	-0,6 x Text + 32
0.7	-0,7 x Text + 34
0.8	-0,8 x Text + 36
0.9	-0,9 x Text + 38
1.0	-1,0 x Text + 40
1.1	-1,1 x Text + 42
1.2	-1,2 x Text + 44
1.3	-1,3 x Text + 46
1.4	-1,4 x Text + 48
1.5	-1,5 x Text + 50
1.6	-1,6 x Text + 52
1.7	-1,7 x Text + 54
1.8	-1,8 x Text + 56
1.9	-1,9 x Text + 58
2.0	-2,0 x Text + 60
2.1	-2.1x Text + 62
2.2	-2.2x Text + 64

REF	Description	Default Value	Range	Steps	Units	
	CIRCUIT 1 (Direct circuit)					
OTCh1	Gradient C1	1.4	0.2~2.2	0.1	-	
	CIRCUIT 2 (Mixed circuit)					
OTCh2	Gradient C2	0.6	0.2~2.2	0.1	-	



# NOTES

- Default value of Circuit 1 corresponds to Water Rule = 1.4 (High temperature heating).
- Default value of Circuit 2 corresponds to Water Rule = 0.6 (Radiant Floor).



# CAUTION

- It is the installer's responsibility to make sure no unwanted situation occurs (for example: water temperature setting too high into floor heating)
- Be aware that the water set-point for circuit 2 will always be lower than water calculation for circuit 1.
- When only circuit 1 is heating, circuit 2 will be fed with water at temperature equal to circuit 1's target water.

## Example:


(OTCh1) = 1.1

Text (Outdoor temperature) =  $0^{\circ}$ C  $\rightarrow$  water outlet target = -1.1x 0 +42 = 42°C



# **♦** Fixed water temperature set-point

Outdoor ambient temperature has no effect on this setting. The user will select a fixed water outlet temperature setpoint.

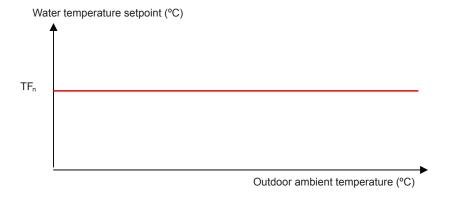

Where:

TF<sub>n</sub>: Fixed temperature setting

n: heating circuit number (n= 1 or 2)

REF	Description	Default Value	Range	Steps	Units
CIRCUIT 1 (Direct circuit)					
TF1	Fixed T° C1	70	Tmaxh <sub>1</sub> ~Tminh <sub>1</sub>	1	°C
	CIRCUIT 2 (Mixed circuit)				
TF2	Fixed T° C2	40	Tmaxh <sub>2</sub> ~Tminh <sub>2</sub>	1	°C



#### NOTE

- Parameters (Tmaxh<sub>(1/2)</sub>~Tminh<sub>(1/2)</sub>) are defined by Maximum and Minimum water outlet temperatures selected by installer.
- Water outlet temperature will depend on unit's operational range.




#### CAUTION

- It is the installer's responsibility to make sure no unwanted situation occurs (for example: water temperature setting too high into floor heating).
- Be aware that the water set-point for circuit 2 will always be lower than water calculation for circuit 1.
- When only circuit 1 is heating, circuit 2 will be fed with water at temperature equal to circuit 1's target water.

#### ◆ Second water temperature control (mixing valves control)

The mixing valve is controlled to maintain the second heating supply temperature at the second heating temperature setpoint. The mixing valve position is calculated with a proportional integral action (P+I) control algorithm based on the difference between the heating supply set-point and the heating supply temperature.

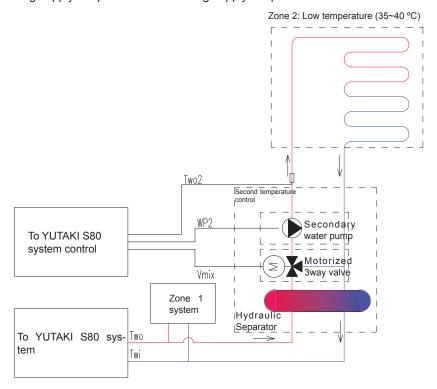

The system control decides how much to open or close the mixing valve to achieve the desired position for the valve. This depends on the running time of the actuator used on the valve. The running time is defined as the time it takes to drive the valve from the fully closed to the fully open position. Typically this can be between 1 and 4 minutes.

REF	Description	Default Value	Range	Steps	Units
PB	Proportional band of mixing valve	6.0	0.0~20	0.2	K
IRF	Integral reset factor of mixing valve	2.5	0.0~20	0.1	%
RTM	Running time factor of mixing valve	140	10~500	10	sec

## **♦** Water set point priority

When system is in direct and mixed mode and both are active the resultant set-point will be always the circuit 1 water set-point (direct mode).



### NOTE

- In theory it should be done as the bigger of the two but in the case of circuit 2 (mixed) being higher than circuit 1 (direct)
  there would be problems in the last one. This situation can only by caused by a bad configuration from installer and it
  must be avoided.
- In case of not demand in one of the two circuits the water target of the circuit with demand has priority and water target will be calculated for this circuit.
- In case of 2 circuits installation and not demand in direct circuit, main water target (for the compressor) will be by water calculation type for mixing circuit and mixing valve will be 100% opened.



# **♦** Space heating timer

User can create up to 7 scenes with entire unit configuration available. These scenes can be assigned to different parts of the day creating a daily pattern, after that, user can assign to each day of the week the desired daily pattern.



#### NOTE

Please refer to LCD user's interface chapter for more information about the space heating timer

#### **5.4.2 Room Thermostat control**

YUTAKI S80 unit can be used with two different Room Thermostats available as accessories:

- ON/OFF Thermostat (ATW-RTU-01)
- Intelligent Room Thermostat (with Opentherm communication) (ATW-RTU-02) with extension room thermostat for second circuit (ATW-RTU-03)


Thermostat Type is selected using the parameter list on LCD user interface:

REF	Description	Default Value			
Room the	Room thermostat type				
RTT	Thermostat (Installed / Not installed)	Not installed			

# ◆ ON/OFF Thermostat (accessory ATW-RTU-01)

When the ON Room Thermostat temperature setting is higher than room ambient temperature, Room Thermostat communicates with RF Receiver in order to close relay signal and Thermo ON Condition must be applied.

When the OFF Room Thermostat temperature setting is lower than room ambient temperature, Room Thermostat communicates with RF Receiver in order to close relay signal and Thermo OFF Condition must be applied.

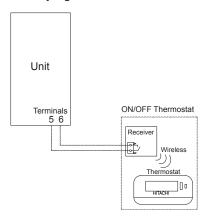

Thermostat	Receiver	Unit status	Pump status (ECO)
Demand	Closed relay signal between terminals 5-6	Thermo ON unit	Pump runs
No demand	Open relay signal between terminals 5-6	Thermo OFF unit	Pump stops after overrun time



#### NOTE

For more information on how to work water pumps, refer to Circuit water pumps section.


# Minimum on time and ON/OFF time cycle

In order to reduce Thermo ON/OFF Cycles per hour and to damage compressor, there are two additional functions for ON/OFF Thermostat.

These two functions are:

- 1 Minimum ON Time: When Thermostat demands, a minimum ON time will be applied (including when demand is OFF).
- 2 Minimum OFF Time: This function determines the minimum OFF time after no demand of Room Thermostat input.


REF	Description	Default Value	Range	Steps	Units
Rton	Minimum ON Time	6	0~15	1	min
Roff	Minimum OFF Time	6	0~15	1	min

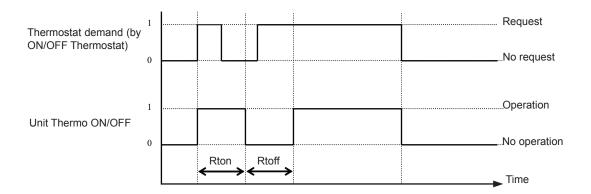

# ◆ Intelligent room thermostat (accessory ATW-RTU-02/03)

When an intelligent room thermostat is installed (as accessory), the unit and Room Thermostat communicate by means of the receiver and Opentherm communication.

Room thermostat sends the actual room temperature and room temperature setting to the unit.

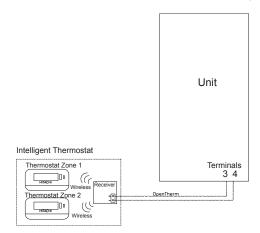



# **Room set-point influence**

The room temperature will modify the water set-point of the Outside Temperature Compensated (OTC) control (both OTC Points and OTC Gradient) system.

At different times of the day, according to the time programme in the Room Unit, the room temperature set-point will cause a shift of the heating curve up or down to reflect the change in desired room temperature. The change in supply set-point due to the room set-point is dependent on the value of the outside temperature and the selected heating calculation.

If a Room Unit is not bounded (RF binding) to heating circuit 1, the room set point used is equal to the room set point of heating circuit 2. If a Room Unit is also not bounded to heating circuit 2 (or not circuit 2), then a default value of 20°C is used.

Resulting Water Temperature Set-Point will be:

**Ttwo** =  $Ttwo \ OTC + 2 \ x \ \Delta Troom$ 

Where:

Ttwo: Resulting Water Set-Point

Ttwo OTCn: Water Set-Point as calculated by OTCn.

 $\Delta$ Troom: Room Temperature Offset = RS – RD.

RS = Room set-point; RD = Room default temperature condition (20°C)

Example:

Default OTC: **Ttwo OTC** = -1.3 x Ta + 43.2

Ta (outside temperature) = 0°C

Ttwo OTC =  $-1.3 \times 0 + 43.2 = 43.2$ °C

RS = 18°C

RD: Better condition 20°C.


Ttwo = function (OTC + (Room temperature set-point offset) x2)

Ttwo = function (OTC + (Room set-point (RS) - Room default temperature condition (RD) (20°C) x2)

Ttwo = function (OTC + ((18-20)x2)

Ttwo =  $43.2 + (-4^{\circ}C) \rightarrow \text{Ttwo} = 39.2^{\circ}C$ 

In this case, for a 2K change in room set-point, the supply is changed by 4K.

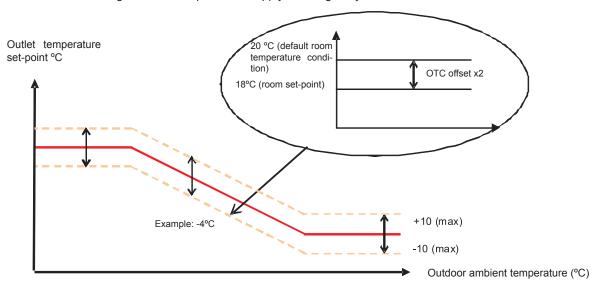



# NOTE

- Room set-point factor has no effect on setting fixed temperature operation.
- Room set point influence has no effect during the first 10 minutes after power on due to slow time transmission between Opentherm and LCD control.

#### Room temperature compensation (configuration in LCD user interface)

If room compensation is enabled the calculated supply set-point is adjusted based on the difference between room temperature and room set-point in order to reduce room error.

The amount of room effect can be adjusted using the room temperature compensation factor setting. To increase or decrease the amount of room compensation, adjust the room compensation factor. A higher value will give more priority to the room temperature error, and a lower value will mean that the controller follows the selected heating curve more closely.

If a Room Unit is not bound (RF binding) to heating circuit 1 or 2, the room temperature compensation function is disabled.

REF	Description	Default Value	Range	Steps	Units
CIRCUIT 1 (Direct circuit)					
Rfact <sub>1</sub> Compensation factor C1		2	0~5	1	-
	CIRCUIT 2 (Mixed circuit)				
Rfact <sub>2</sub>	Compensation factor C2	2	0~5	1	-



#### NOTE:

To disable room compensation function, set Rfact, or Rfact, to 0.



New water temperature set-point is calculated as follows:

 $Ttwo = Ttwo OTC + Rfact_o x (RS - RT)$ 

Where:

Ttwo: Resulting Water Set-Point

Ttwo OTC<sub>n</sub>: Water Set-Point as calculated by OTCn.

Rfact<sub>a</sub>: Room compensation factor (Default 2)

RS: Room set point

RT: Room temperature

Example:

 $Ttwo \ OTC = -1.3 \times Ta + 43.2$ 

Ta(outside temperature) = 0°C

Ttwo OTC = -1.3x 0 +43.2 = 43.2°C

RS = 20°C


RT = 23°C

RFact<sub>n</sub>= 2 (Default value)

Ttwo = function (OTC + RFact<sub>n</sub> x (Room set-point (RS)– Room temperature (RT))

Ttwo = function (OTC + 2x (20 - 23)

Ttwo =  $43.2 + (-6^{\circ}C) \rightarrow \text{Ttwo} = 37.2^{\circ}C$ 

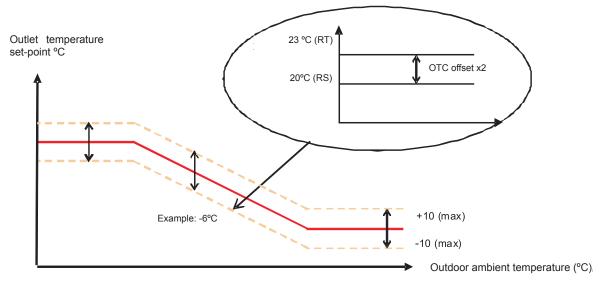



#### NOTE

- Room set-point factor has no effect on setting fixed temperature operation.
- Room set point influence has no effect during the first 10 minutes after power on due to slow time transmission between Opentherm and LCD control.



# Thermo OFF condition by intelligent room thermostat

If Room Temperature is an offset (Roff) bigger than Room Temperature set-point, it must be a THERMO OFF Condition (Compressor OFF, ...) and water pump must be turned OFF after over-run time (if ECO Pump is selected).

If Room Temperature > Room Set-point temperature + Roff

- → Thermo OFF condition by Indoor temperature
- If Room Temperature < Room Set-point temperature
- → Thermo ON condition by Indoor temperature



## NOTE

In case of multiple Room Thermostats: Thermo OFF occurs when all Thermostats are fulfilled.

REF	Description	Default Value	Range	Steps	Units
Roff	Room Thermo OFF	3	0~5	1	°C

# Unit OFF status by room thermostat (only intelligent thermostat)

If Room Temperature setting (RTS option) is 5°C or 10°C. (by pressing OFF button (5°C) or Holidays button (10°C) on User Thermostat), the heating space selected will be turned OFF. In case of two User Thermostats, Unit OFF Condition will be set for the global heating space.



# NOTE

This condition will be transmitted to LCD user control and seven segments PCB.




# 5.4.3 Circuit water pumps

# **♦** Main water pump for heating circuit application


# **Pump configuration (Standard & Economy function)**

Pump control can be set to Standard or Economy mode. This configuration is set using DSW4 pin 5.

When pin is OFF, pump will be in STANDARD operation and pump will always be in operation when space heating is enabled, but when it is disabled using the LCD user interface or Thermostat OFF (intelligent thermostat only), pump must be switched OFF and only switched ON by Domestic Hot water request.

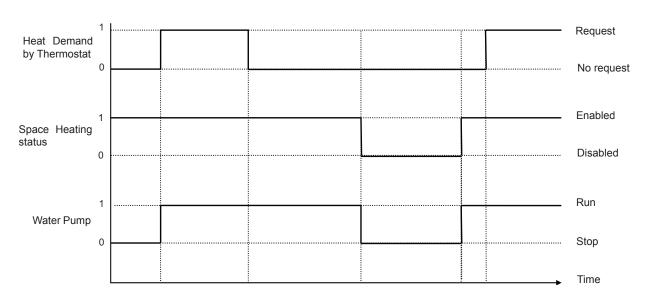


When pin is ON, pump will be in ECONOMY operation. Economy operation allows pump to stop when system is stopped by demand OFF in room thermostat.

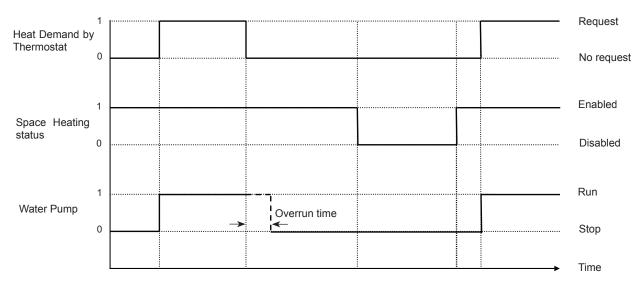

# **♦** Overrun pump delay


All pumps are no longer required; operation must continue at least until pump overrun time has passed since end of requirement.

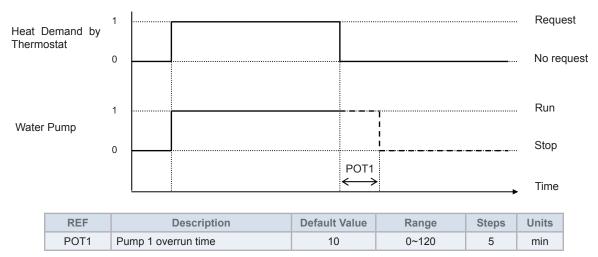

# **♦** Recirculation option (Only for economy mode)

When recirculation option is enabled, pumps will operate regularly when they are stopped by Room thermostat Demand OFF condition.

Each PMinOFF minutes pump will be operated during PMinON minutes. Timer is independent for main and sub pumps.

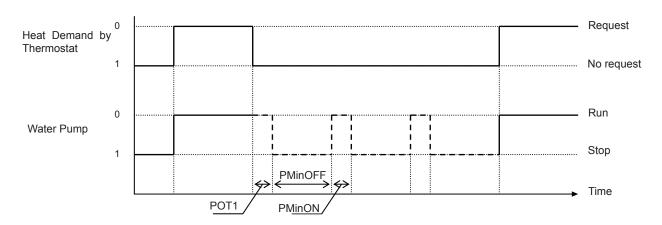

REF	Description	Default Value	Range	Steps	Units
PMinOFF	Min time OFF	40	0~120	5	min
PMinON	Min time ON	10	0~120	5	min



If Min time OFF & Min time ON are 0, the Re-circulation Option has no effect.

# **♦ Radiant Floor Overheat Protection**

Over temperature protection for Radiant Floor avoids over heating in zone 2.

Alarm is activated when:

- Two2 > Ttwo2(max) (Tmaxh<sub>n</sub>) + RFTTMAX

When alarm is active WP2 is stopped and mixing valve is set to 0.

User Variable:

REF	Description	Default Value	Range	Steps	Units
RFTTMAX	Over Temperature Offset C2	5	1~10	1	°C



Put 0 to disable the protection OTO for radiant floor.


# **♦** Pump seizure protection

The pump seizure protection function helps to prevent these components from sticking during long periods of inactivity.

Every week the components will be run for a short period.

The following Installer parameters control the optional seizure function. They are used to enable seizure protection and set its activation time. When this happens, follow these instructions:

- · Make sure mixing valves are fully opened and then fully closed (time depends on runtime parameter).
- · Diverting valves are switched on for 1 minute.
- Pumps are switched on for 1 minute.

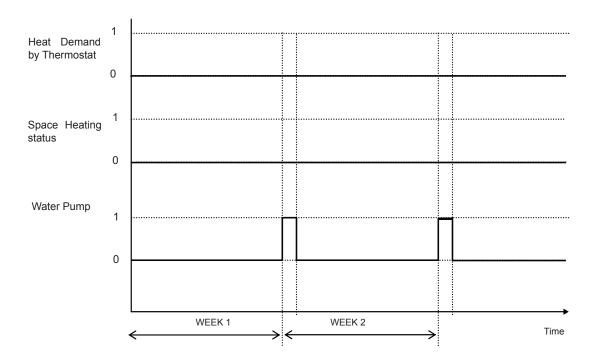

REF	Description	Default Value	Range	Steps	Units
SeizPr	Seizure Protection Status	Off	Off / On		-
OpInt	Operation Day	Mon	Mon~Sun	-	Day
StTim	Start Time (00~24)	01:00	(00:00~23:59)	00:01	Time



# 5.4.4 Domestic Hot Water (DHW)

An optional domestic hot water tank can be connected to the YUTAKI S80 Indoor unit. The domestic hot water tank is available in two models: 195 or 260.

Refer to the DHW Tank and YUTAKI S80 installation and operation manuals for more details.

# **♦ Status**

Sanitary water will only operate if it is enabled from LCD user interface:

REF	Description	Default Value
DHWs	DHW status (Disabled; Enabled)	Disabled



## NOTE

- If there is any sanitary water operation being performed and DHW status is changed from Enabled to Disabled, the current sanitary water operation will be stopped.
- · If DHW is set to Disabled, new sanitary water operation is forbidden until it is changed to Enabled.

# Priority

DHW Operation has priority over all other operation modes unless otherwise noted.

The following constraints apply:

- When DHW requires Heat Pump operation, no other modes can require heat pump operation.
- If DHW does not require Heat Pump operation, it is stopped; there is no restriction on the other operation modes.

#### ◆ Sanitary water modes (Standard / High demand)

DHW loading has two different modes, STANDARD Mode and HIGH DEMAND Mode.

- **STANDARD** (economical) Mode: The domestic hot water tank will start heating when water temperature in tank is low enough for Heat Pump to be started. DHW is always heated by Heat Pump.
- HIGH DEMAND Mode: The domestic hot water tank will start heating when differential is higher than T<sub>DHWON</sub>. Only the
  water tank heater will start unless water temperature in tank goes below Heat Pump starting temperature.

DHW Modes will be selected using LCD User interface:

REF	Description	Default Value
DHWm	DHW Mode (Standard; High Demand)	Standard

# **◆** Domestic hot water temperature setting (T<sub>DHWS</sub>)

DHW operation (both Water tank heater and Heat Pump) will be stopped when:

T<sub>DHW</sub> > T<sub>DHWS</sub>

Where:

Tdhw: Domestic Hot water temperature (°C)

Tdhws: Domestic Hot water setting temperature (°C)

CODE	REF	Description	Default Value	Range	Steps	Units
3-022	T <sub>DHWS</sub>	DHW T° set-point	60	30 ~ T <sub>DHWMAX</sub>	1	°C

# ◆ Maximum set-point selected by Installer

In order to avoid excessively hot water in the tank, there is an additional function that allows the installer to set a maximum temperature.

REF	Description	Default Value	Range	Steps	Units
T <sub>DHWMAX</sub>	DHW maximum set-point T°	65	40~75	1	°C

# **♦** High demand mode differential (T<sub>DHWON</sub>) (only high demand mode)

DHW Heater will start when following conditions are met:

- · System is set to HIGH DEMAND Mode
- $T_{DHW} < (T_{DHWS} T_{DHWON})$
- $T_{DHW} > (T_{DHWS} T_{HPON})$

Where:

T<sub>DHW</sub>: Water temperature in DHW (°C) (by THM<sub>DHW</sub> sensor)


 $T_{\tiny DHWS}$ : Water temperature setting in DHW (°C)

 $T_{\text{DHWON}}$ : Domestic hot water differential (temperature drop that starts DHW)

T<sub>HPON</sub>: Heat pump operation ON To differential

Other functions may cause DHW Heater to start regardless of this control. For example, DHW Heater may be started by Electric Heater Waiting time.

REF	Description	Default Value	Range	Steps	Units
T <sub>DHWON</sub>	DHW differential	6	2~15	1	°C

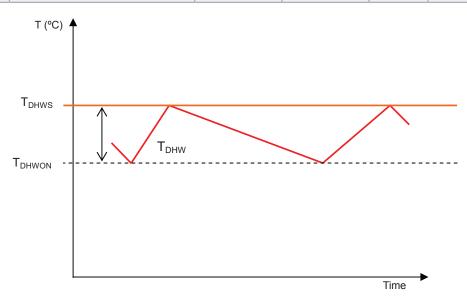

If  $T_{DHW} > T_{HPON} \rightarrow$  Heating is performed by Electrical Heater Tank (if Heater enabled by dip-switch)

If  $T_{DHW} < T_{HPON} \rightarrow$  Heating is performed by Heat Pump and/or Electrical Heater Tank (if Heater enabled by dip-switch)



# ◆ Heat pump operation for DHW (T<sub>HPON</sub>)

During Heat Pump operation for DHW, DHW tank is heated using heating water circuit.

Since there is no sensor inside the heating circuit for DHW tank, water outlet temperature is used to control sanitary tank heating.

During Heat Pump operation for DHW, water outlet target will be set to  $T_{HPWTS}$ . Additionally  $T_{HPWTS}$  cannot be higher than maximum temperature for the heat pump.

 $\mathsf{T}_{\mathsf{HPWTS}}$  is calculated as:

• 
$$T_{HPWTS} = T_{DHW} + 15^{\circ}C$$




#### NOTE

 $T_{\it HPWTS}$  range is between 55°C and 80°C

Heat pump operation for DHW starts when  $\rm T_{DHW}$  is lower than  $\rm T_{HPSTART}$ 

Heat pump operation for DHW stops when  $T_{\mathrm{DHW}}$  is greater than  $T_{\mathrm{DHWS}}$ .

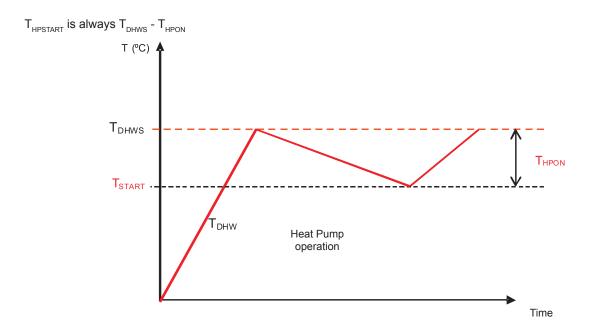

The offset  $T_{HPON}$  follows the next variable:

REF	Description	Default Value	Range	Steps	Units
T <sub>HPON</sub>	HP ON To differential	20	10~40	1	°C

# ◆ Maximum / Minimum DHW loading time (T<sub>DHWMAX</sub> / T<sub>DHWMIN</sub>)

This function controls the minimum and maximum times that DHW can operate using Heat Pump mode. Heater operation is not affected by it.

Heat Pump will not stop if:

- Heat Pump Operation Time < T\_DHWMIN


Stoppage by  $T_{DHWS}$  (Domestic Hot Water Temperature Setting) has priority over this timer, so it may stop the system regardless of Heat Pump Operation Time.

Heat pump will stop when:

- Heat Pump Operation Time >  $T_{DHWMAX}$ 

When Heat Pump is stopped by this function, DHW will continue working by Heater or boiler.

REF	Description	Default Value	Range	Steps	Units
T <sub>DHWMIN</sub>	DHW minimum time	10	0~15	1	min
TDHWMAY	DHW maximum time	60	20~150	1	min

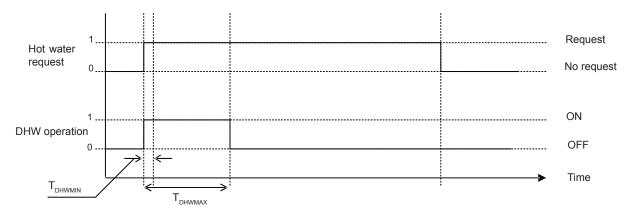



Manual stop has priority above Minimum operation time.



# **◆ DHW** second cycle wait time (only standard mode)

This defines the minimum time between two consecutive domestic hot water heat pump cycles.


DHW will not start if:

- DHW Off Time < C<sub>DHW</sub>

Tank heater Start-Up by T<sub>DHWON</sub> (High Demand Differential) is not limited by this function.

DHW start-up by  $T_{HPON}$  &  $T_{HPOFF}$  is limited and therefore the DHW mode, including heater, will not start at all by means of this function when timer has not passed.

DHW Off Time starts being counted after last DHW Heat Pump operation.

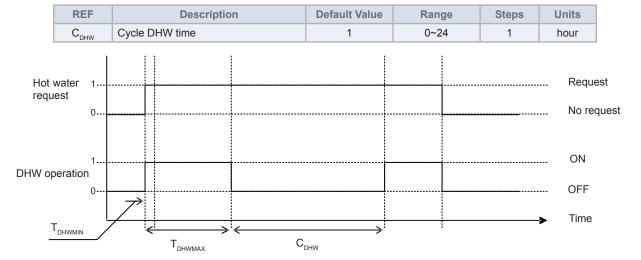



#### NOTE

If only DHW is operating (No heating space demand), waiting time has no meaning because it is done in order to ensure space heating operation.

#### **♦ DHW electric heater**

Electric Heater DHWT control will be disabled as default.

Automatic control can be enabled by dip-switch setting:

- DSW4-1: OFF (Default): DHWT Electric Heater control disabled
- DSW4-1: ON: Electric Heater control enabled



# NOTE

Electric heater has additional manual operation by using SW1 located in indoor unit cover's protection, beside the manometer. Refer to DHWT electrical heater for emergency operation section for more information.


# ◆ DHW electric heater wait time (only standard mode)

If Heat Pump cannot offer sufficient capacity it will be necessary to start Heater in order to supply additional capacity.

Heater will start if:

- DHWT Heater enabled (DSW4-1:ON)
- Heat Pump DHW Operation Time > DHW<sub>FH</sub>

 $Heat \ Pump \ will \ not \ stop \ if \ heat \ pump \ stoppage \ conditions \ are \ not \ met. \ For \ example, \ stoppage \ by \ T_{\tiny DHWMAX} \ control \ or \ T_{\tiny HPSTOP}.$ 

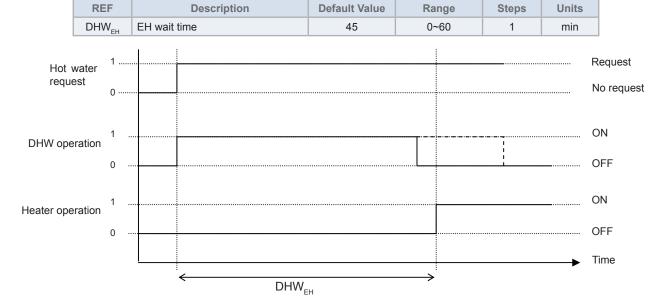



- If DHW<sub>EH</sub> is set to 0, then it will be considered the default value of 45 minutes.
- Electric Heater waiting time has no effect if  $T_{DHW} \ge T_{HPSTOP}$

# 5


# ◆ Space heating priority temperature (only standard mode)

If Space Heating Priority function and DHWT Heater control are enabled (by Dip-Switch), Heat Pump operation by DHW mode will stop (and continue with heater if necessary) if:

- DSW4-1: ON: Electric Heater control enabled
- Text (ambient temperature) < SHPT

In this situation, if  $T_{DHW} < T_{HPSTART'}$  tank's electric heater will start (even if DHW<sub>EH</sub> is not passed) and DHW mode with heat pump will not stop until  $T_{DHW} > T_{DHWS}$ 

REF	Description	Default Value	Range	Steps	Units
SHPTs	Space priority	OFF	OFF/ON	1	-
SHPT	Space priority T°	-5	-20~0	1	°C

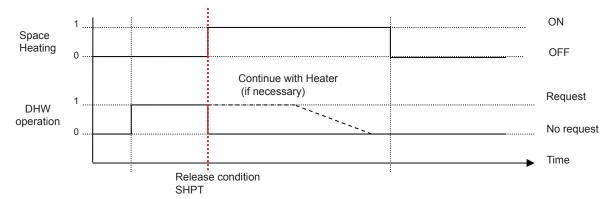




- DHW Heater will continue if heating tank is necessary.
- In case DSW4-1: OFF, the unit needs to restart.
- In case of DHWT cycle time=0h, no function is applied.

# ◆ DHW tank electric heater "emergency" operation

The domestic hot water tank can be heated by means of an internal heater in the event of malfunction of either the outdoor or the indoor unit. A dedicated switch (SW1) is used to activate this function. This switch (SW1) is located at the front cover of the electrical box (accessible by removing the indoor unit front cover) and it is in "Automatic" operation by factory setting.

In order to activate the internal heater of the tank, select the "Emergency" operation in the switch. In this case, the temperature setting shall be performed through the heater's thermostat. Select the temperature with the temperature regulator located at the front side of the tank (maximum position is 85°C).

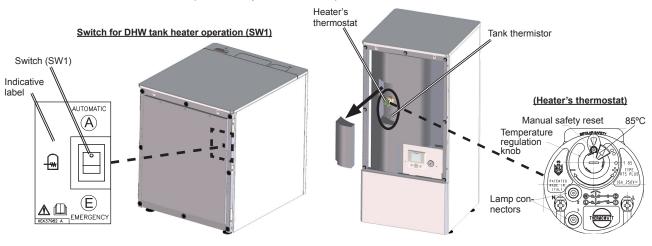

# **♦ DHW** heating by timer

A DHW Time program is provided inside the unit (through LCD Controller). DHW operation may be enabled or disabled by this timer

The user can create up to 7 scenes with the entire unit configuration available. These scenes can be assigned to different parts of the day creating a daily pattern. After that, user could assign to each day of the week the desired daily pattern.



#### NOTE

For more information, refer to LCD user's interface chapter.

# 5.4.5 Swimming pool

When the swimming pool operation is required, the swimming pool pump starts to operate given the swimming pool pump feedback. In this situation, the 3-way valve of the DHWT is not activated and the 3-way valve for the swimming pool changes its normal position diverting to the swimming pool heat exchanger, allowing to heat the swimming pool water temperature to a comfortable value.

Swimming Pool Function will only be enabled if:

- It is enabled by user interface
- Heat Pump is turned OFF (or Thermo OFF) by any other system.
- Swimming pool is enabled by swimming pump feedback (PCN10-5 input).

# **♦** Swimming pool target temperature

Swimming Pool will start if:

- Swimming Pool Temperature < SWP<sub>s</sub> -1°C

Swimming Pool will stop if:

- Swimming Pool Temperature > SWP<sub>s</sub> +1°C

Remember that unit cannot start in Swimming Pool mode if Swimming Pool Pump feedback is not active.

REF	Description	Default Value	Range	Steps	Units
SWP	Swimming pool status	Disabled	Disabled – Enabled	-	-
SWPs	Swimming pool To set-point	24	24~33	1	°C

## Swimming pool Offset temperature

When swimming pool status is enabled, indoor unit needs to work an offset of temperature higher than swimming pool To setpoint due to the heat exchanger between the two circuits.

User Variable:

REF	Description	Default Value	Range	Steps	Units
SWOff	Swimming pool Offset T°	15	10~31	1	°C



#### NOTE

For swimming pool combination it is needed a special swimming pool sensor, see available accessories.

#### Swimming pool timer

User can create up to 7 scenes with entire unit configuration available. These scenes can be assigned to different parts of the day creating a daily pattern, after that, user can assign to each day of the week the desired daily pattern.



# NOTE

Please refer to LCD user's interface chapter for more information about the space heating timer



# 5.4.6 Auxiliary electric heater accessory for space heating

The electric heater accessory for additional heating capacity may be used during very cold outdoor temperatures. It can also be used for emergency operation in case of outdoor unit malfunction. The electrical heater supplied by HITACHI as accessory has 6 kW capacity.

Electric Heater will only operate if unit is in Space Heating mode. It will always be disabled in any other mode (Hot DHW and Swimming Pool).

Electric Heater will only operate when Heating Accessory is set to HP + Heater.

System protection will always have priority against heater operation whenever it is stated.

Model	Heater Capacity	Heater steps
WEH-6E (*)	6kW	3 steps (2/4/6kW)



#### NOTE

(\*): The input power values are explained as example for the water electric heater supplied by HITACHI as accessory (WEH-6E), with a total input power of 6.0 kW. For other water electric heaters, the input power for each step will be different.


User Variable:

REF	Description	Default Value
HS	Complementary Heating = (Only HP; HP + Heater; HP + Boiler)	Only HP

# **♦** Heater bivalent point

Heater will only be enabled when:

- Outdoor Ambient Temperature < Electrical heater Bivalent Point

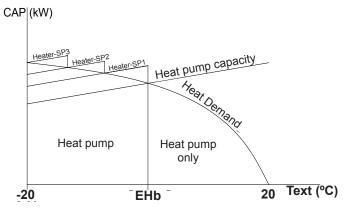

User Variable:

REF	Description	Default Value	Range	Steps	Units
EHb	Electrical Heater Bivalent Point	0	-20~20	1	°C

# **◆** Target temperature

Heater operation will be controlled by heater set point (HTset).

HTset is calculated as follows:

- If Water set point (Ttwo) ≤ Maximum Heat Pump operation (Tmax):
  - HTset = Ttwo ksco (Suppy set point control offset)
- When system is in Emergency Mode (heat pump cannot be operated) HTset will always be:
  - HTset = Ttwo

User Variable:

REF	Description	Default Value	Range	Steps	Units
ksco	Supply Setpoint Offset	4.0	0~10	1	K




#### NOTE

The maximum heat pump operation is defined by its working range. Please refer to the Technical Catalogue for more information

## Heater step control

Actual heater output is given using a 3 step output (only heater 1 on, only heater 2 on and both heater on).

Stone	Power (*)
Steps	(4-6) HP
1	2kW
2	4kW
3	6kW

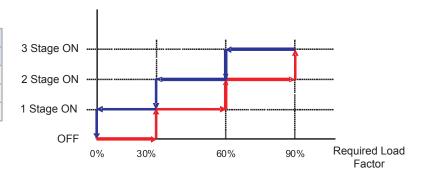




#### NOTE

(\*): The input power values are explained as example for the water electric heater supplied by HITACHI as accessory (WEH-6E), with a total input power of 6.0 kW. For other water electric heaters, the input power for each step will be different.

After each step increase, further step increases are prohibited during ISWT to avoid hunting. Step decrease does not have this limitation. Since sampling time is 1 minute, at least 1 minute needs to pass between any step changes.

In any of the following conditions step will be forced to 0. This change will occur regardless of maximum 1-step change and user defined delay:


- · Electric Heater is forbidden by Waiting Time (see WT variable explanation)
- Electric heater is forbidden by ambient temperature (see bivalent point explanation)
- · Electrical heater is disabled by user
- · There is alarm related to heater

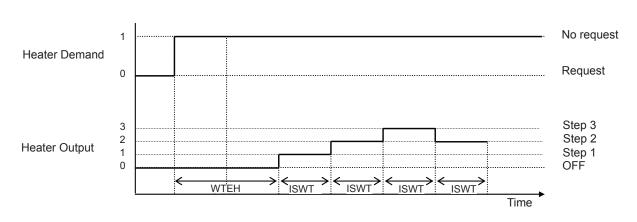

User variables:

REF	Description	Default Value	Range	Steps	Units
ISWT	Inter-Stage Wait time	5	0~10	1	min

In order to minimize a possible rattle contactor between steps it is added additional function as shown bellow:

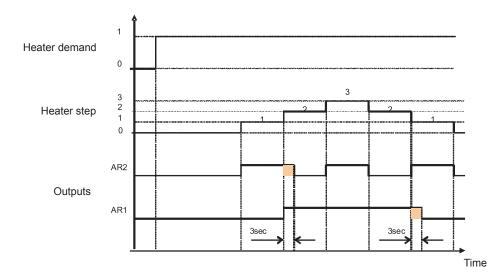

# ♦ Step heater for 3-phase imbalance option

Only applies when power source of indoor unit is 3-phase (3N~ 400V 50Hz).

In order to prevent 3-phase imbalance by Heater Steps, this option will be used to switch all 3 steps at the same time. When user allows 1-step heater mode (DSW3-3 ON), heater can only operate in one step.




NOTE

For more information refer to chapter Optional functions.

#### **♦** Heater wait time

If Water set-point (Ttwo) ≤ Maximum Heat Pump Operation, Electric Heater will be only allowed to operate when more than electrical heater waiting time (WTEH) has passed since Heat Pump was started (switch on or thermo on) and Heater demand.

When Water set-point (Ttwo) > Maximum Heat Pump Operation or when heater needs to operate in emergency mode, Electric Heater may be operated regardless of Wait time.

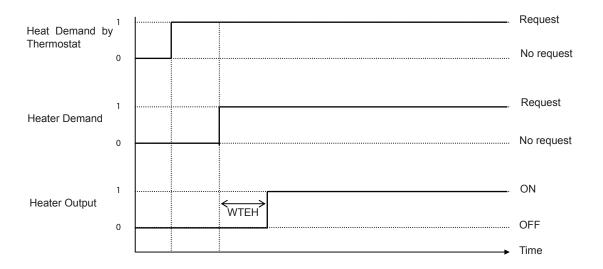

User Variable:

REF	Description	Default Value	Range	Steps	Units
WTEH	Wait time for electric heater	30	1 ~ 90	1	min



- · Electrical Heater for Emergency operation has no effect.
- · Electrical Heater for starting at low water condition has no effect.

## Heater for emergency mode

When user allows emergency mode (DSW4-4 ON), heater may operate in this mode. This configuration allows also DHW emergency operation.



# NOTE

For more information refer to chapter Optional functions.

#### **♦** Heater forced OFF

When user/installer allows heater forced OFF by DSW4-7 ON, all uses of the Heater are forbidden, the configuration by LCD has no effect and heater protections (heat at low water temperatures, emergency operation heater...) has no effect.



# 5.4.7 Auxiliary Boiler combination for space heating

#### **♦** Boiler operation

Boiler will only operate if unit is in Space Heating or DHW modes. It will always be disabled in any other mode (Swimming Pool).



# NOTE

The procedures in this chapter apply both to space heating and sanitary water unless otherwise stated.

Boiler will only operate when Heating Accessory is set to HP + Boiler. Boiler and Heater can never work at the same time.

System protection will always have priority over boiler operation wherever it applies.

User Variables:

REF	Description	Default Value
HS	HS Complementary Heating = (Only HP; HP + Heater; HP + Boiler)	



#### CAUTION

The boiler is configured as alternating with the heat pump. An hydraulic separator or buffer tank must be used to ensure proper hydraulic balancing. Additional Water pump (WP3) and water sensor (Two3) are necessary for boiler combination control.

User variables:

	REF	REF Description	
l	hsb	Hydraulic Separator = (Disabled, Enabled)	Disabled



#### NOTE

This variable is automatically enabled when boiler complementary heating is selected.



# CAUTION


- Be sure that the boiler and the integration of the boiler with the YUTAKI S80 system is in accordance with relevant European and national regulations.
- HITACHI can not be held responsible for incorrect or unsafe situations in the boiler system.
- Make sure that the non-return valves (field supplied) are correctly installed in the system as shown in the installation configuration.

## **♦** Boiler bivalent point

Unit should be sized to operate mainly in heat pump mode. Given that capacity is reduced with temperature, it may be desirable for the unit to use boiler accessory only when ambient temperature is very low.

Boiler will only be enabled when:

Outdoor Ambient Temperature < Bivalent outdoor temperature for boiler (Bp)

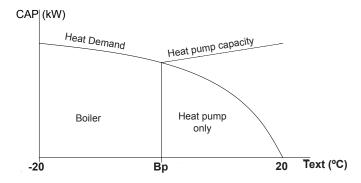

User Variable:

REF Description		Default Value	Range	Steps	Units
Bp Bivalent outdoor temperature for Boiler		-5	-20~10	1	°C

#### **♦** Target temperature

Being a parallel system (either Heat Pump or Boiler), water setting will be the same as the water set-point for Heat pump without outdoor unit temperature restrictions but with restrictions of Maximum water temperature by installer.


- · Water set point is Ttwo when Boiler Thermo ON.
- · Water temperature control is always performed by Two3.

# **♦** Conditions for enabling and disabling boiler.

# **Conditions for Enabling**

Unit will enable boiler operation if all the following conditions are met.

- 1 Heating operation selected (Space Heating)
- 2 Boiler selected
- 3 Ambient temperature < Boiler Bivalent point (Bp) (-5°C Default) more than WT (Waiting time for boiler WT)
- 4 Water temperature (Two3) ≤ Water Temperature target (Ttwo) Supply set point control offset (4°C default) (Kscob)

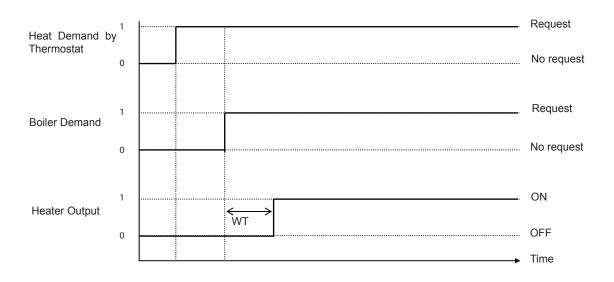

## User Variable:


REF	Description	Default Value	Range	Steps	Units	
WT	Waiting Time for Boiler	30	1 ~90	1	min	

# **Conditions for Disabling**

Unit will not enable boiler operation if any of the following conditions are met:

- 1 Demand OFF by Room Thermostat
- 2 Ambient temperature > Boiler Bivalent point (Bp) more than 10 minutes.

## **♦** Boiler time chart

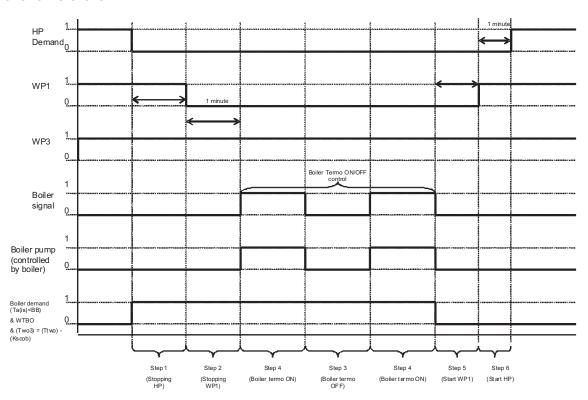

#### **♦** Conditions for THERMO ON/OFF Boiler

- Conditions for Thermo ON Enabling:
- 1 Water temperature (Two3) < Water temperature setting (Ttwo) Supply set point offset (4°C Default) (Kscob)</p>
- 2 Room thermostat demand

User Variable:

REF Description		Default Value	Range	Steps	Units
Kscob	Kscob Boiler Offset To		0 ~10	1	°C

#### · Conditions for Thermo OFF:

When Boiler is enabled, water calculation is based in the difference between water outlet 3 (Two3) and water target (Ttwo) It will occurs, when any of Conditions a, b, c or d are fulfilled.

- a. Measured outlet temp value (Two3) ≥ Water temperature target + 5°C.
- **b.** Outlet water temp (Two3) = Max water range temp by installer (Tmaxh<sub>1</sub>&Tmaxh<sub>2</sub>) + 2°C.
- c. Thermo OFF by Room Thermostat.
- **d.** Ambient temperature (instant) > Boiler Bivalent point (Bp) more than 10 minutes.



#### NOTE

Complementary disabling functions for the boiler itself:


In any of the following conditions step will be forced to 0 (boiler off):

- Boiler is disabled by user or thermo OFF by itselfs (waiting time).
- · There is an alarm related to boiler

#### **♦** Boiler minimum and maximum times

Boiler can only be stopped after minimum ON time has passed (Bon).

Boiler can only be started after minimum OFF time has passed (Boff).

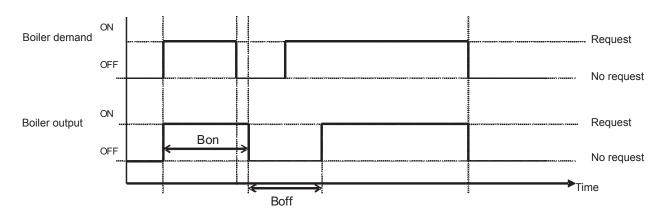

# User Variables:

	REF Description  Bon Boiler minimum ON time  Boff Boiler minimum OFF time		Default Value	Range	Steps	Units
			2	1 ~ 30	1	min
			5	1 ~ 30	1	min



#### NOTE

Maximum water temperature limit (Tmaxh.) selected by installer has priority in front of Boiler minimum ON Time.



## **◆** Emergency mode

When user allows emergency mode (DSW4-4 ON), boiler may operate in this mode.



#### NOTE

For more information refer to Optional functions chapter.

#### 5.4.8 Solar combination

# **♦** Concept

YUTAKI S80 allows the combination with solar panels for the Domestic Hot Water operation. The air to water heat pump will provide a part of the required heating, and the rest of required heating will be provided by the solar panels.

The solar kit is designed to transfer the heat from the solar panels to the domestic hot water tank's heat exchanger. It is necessary to install the Solar kit accessory to exchange the heat between the solar circuit and the DHW tank to indoor circuit.

The solar panels gather heat from the sun, resulting in an environment friendly system. When the temperature of the glycol solution in the solar panel rises above the water temperature in the domestic hot water tank, the pumps from the solar pump station and the solar kit begin operating in order to transfer the heat to the domestic hot water tank's heat exchanger.



#### NOTE


Solar combination is not available when the domestic hot water tank is integrated over the indoor unit.

#### ◆ Solar installation requirements


· Electrical connection

The solar pump station has an auxiliary contact that closes when the contact for the pump of the solar pump station is operated.

This contact will provide 230 V to the input of the indoor unit and prevent domestic water heating by the heat pump during solar heating.

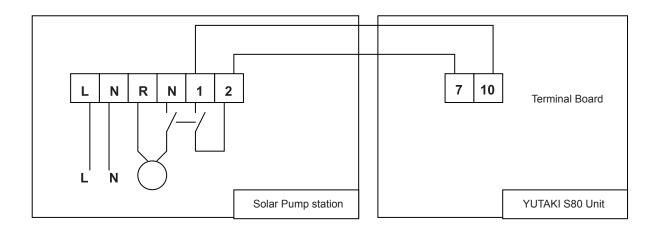

When solar mode is enabled by the heat pump and the temperature of the glycol solution in the solar panel has risen above the water temperature in the domestic hot water tank, one of the HP's outputs will be switched ON (terminals 26/27).

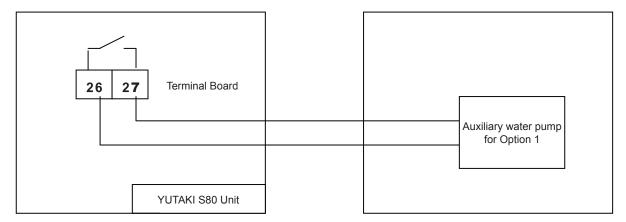

## ♦ Setting the solar status

Simultaneous water heating by the sun and water heating by the heat pump is not possible.

By default, heating of the tank by the heat pump has priority over heating by the sun.

This means that, whenever there is a request of the domestic hot water and domestic water heating is enabled (by the schedule timer or enabled by user), heating will be done by the heat pump. In case solar heating is busy, solar heating will be stopped.

This is to avoid shortage of domestic hot water in case the solar radiation is very weak, or solar radiation only became high shortly before domestic hot water demand is expected (e.g. on a cloudy day).

This default setting can be changed, so that at all times, when solar heat becomes available, domestic water heating by the heat pump will be (if busy) interrupted and taken over by the sun.

REF	Description	Default Value	Range	Steps	Units
Ssta	Solar status (Disabled, Enabled)	00: Disabled	00: Disabled/ 01: Enabled	1	-

#### **♦** Solar station control

If the solar pump station has an ON/OFF/AUTO function, make sure to put it on the AUTO function. This means that the pump will switch ON automatically when the solar panel temperature rises sufficiently above the domestic hot water tank temperature and switch OFF automatically when the difference between the solar panel and the domestic hot water tank temperature becomes too low.

When the temperature of the solar panel reaches  $10^{\circ}$ C\* higher than the domestic hot water tank temperature, the pump of the solar pump station and the pump of the solar kit will start operation.

Description	Ideally Value	Remarks		
Solar delta T	10	Depending on solar station		

When the temperature of the solar panel becomes lower than the domestic hot water tank temperature, the pumps from the solar pump station and the solar kit will stop operating.



# ♦ Solar enabling/disabling conditions

· Solar start conditions

When all of Conditions a, b, c are fulfilled.

- a. Solar status enabled by user
- b. Solar energy available through solar pump station (Input Terminal 10 enabled)
- **c.**  $T_{DHW} < T_{DHWS} T_{DHWON}$

#### Where:

- T<sub>DHW</sub> = Domestic Hot Water Tank temperature (°C)
- T<sub>DHWS</sub> = Domestic Hot Water Tank temperature setting (°C) (Default 60°C)
- T<sub>DHWON</sub> = Domestic hot water differential °C (temperature drop that starts DHW) (Default 6°C)
- T<sub>DHWMAX</sub> = Domestic Hot Water tank maximum supply temperature (°C) (Default 65 °C)

If conditions are fulfilled, heating DHW by Heat Pump will be switched OFF, and heating will be done by solar station through YUTAKI S80's auxiliary output signal. If  $T_{DHW} > T_{DHWMAX}$  solar station cannot heat DHW by tank at maximum allowed temperature and YUTAKI S80's auxiliary output will be switched OFF.

· Solar stop conditions

When any of Conditions d, e, f, g is fulfilled.

- d. Solar status disabled by user
- e. Solar energy not available through solar pump station (Input Terminal 10 disabled)
- **f.**  $T_{DHW} > T_{DHWS}$
- g.  $T_{DHW} > T_{DHWMAX}$



# NOTE

When heating DHW by solar power, DHW Timer has no effect.



## ◆ Maximum time solar heating for DHW


In some high demand cases this function controls the maximum time that DHW can operate using Solar power alone. Heater operation is not affected by it.

Solar power will be stopped when:


- Solar Operation Time > T\_DHWMSOL

When Solar is stopped by this function, DHW will continue working by Heat Pump or heater (depending on water condition). If the DHW is banned by Timer or Tariff function, DHW tank will stop.

Description	Default Value	Range	Steps	Units	
DHW SOLAR maximum time	60	30~240	1	min	

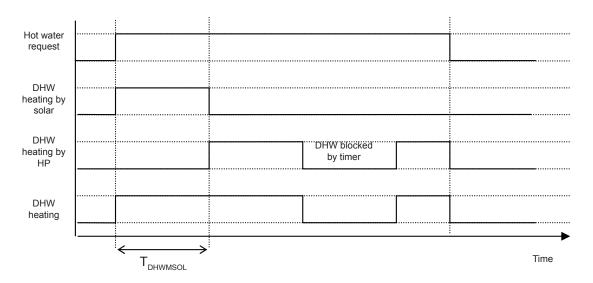

After  $T_{DHWTMSOL}$ , it must pass the Maximum DHW Time (default 45 min) from *Maximum / Minimum DHW Loading Time* ( $T_{D-HWMAX} / T_{DHWMIN}$ ) water control section, for next solar mode.

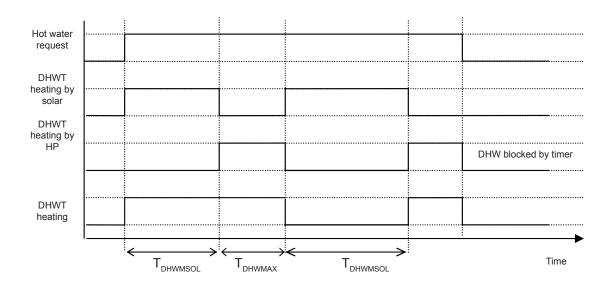




# 5.5 Room thermostat (accessory)

# 5.5.1 Room Thermostat Unit installation and configuration (as accessory)

# **♦** Description

The Room Unit communicates with the RF Receiver on an 868MHz Radio Frequency (RF) band to control the YUTAKI S80 system. Neither product will communicate with other RF products that use different frequencies or communication protocols.

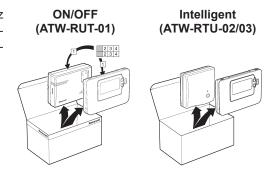



#### NOTE


The RF link between the Room Unit and RF Receiver in system packs is pre-configured at the factory and therefore these components SHOULD be installed at the same site. This makes the installation process fast and easy, but if products from individual system packs are separated, or mixed with other pre-configured system packs during installations please refer to section Binding / Rebinding Procedure to bind the desired units together and allow them to communicate with each other.

#### **♦** Installation Information

As these products communicate using RF technology special care must be taken during installation. The location of the RF components as well as the building structure may influence performance of the RF system. To assure system reliability, please review and apply the information given below.

Within a typical residential building the two products should communicate reliably within a 30m range. It is important to take into consideration that walls and ceilings will reduce the RF signal. The strength of the RF signal reaching the RF Receiver depends on the number of walls and ceilings separating it from the Room Unit, as well as the building construction - the diagram below illustrates an example of typical signal strength reduction. Walls and ceilings reinforced with steel or plasterboard walls lined with metal foil reduce the RF signal significantly more.

Once a position is selected for the Room Unit this can be checked using the RF Communication Test mode as described in section *Locating the Room Unit*. If the position is unsuitable the RF Receiver will not respond and an alternative position for the Room Unit must be selected.

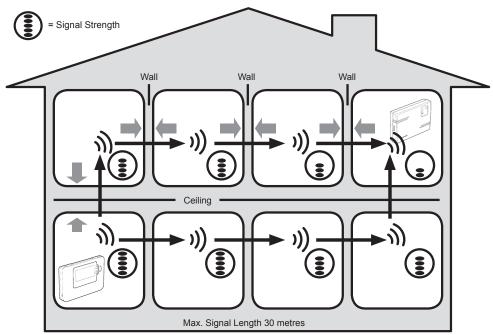

Typical example of Building Fabric Signal losses

# **5.5.2 Installing the Programmable thermostat**

Please follow the illustrations and information below in sequence to install the RF Receiver and Room Unit correctly. To enable special features and see what other system options are available refer to section *Installer Mode*.

# ◆ Installing the ON/OFF Receiver (ATW-RTU-01)

0						
2	NOTE  The receiver box contains not be opened and installed by	no user serviceable parts. It s qualified installer only.				
3	CAUTION  Electrostatic sensitive devic	e! Do not touch the circuit bo	ard.			
4	NOTE  All wiring must be in accord.  CAUTION  Observe ambient temperate Receiver wiring label)	ance with IEE regulations. ure and current limits (see tl	he RF	230 V- 50/60 Hz	Remove the jumper   Si6   Indoor unit Yutaki S80   Wiring   R6660D   R6660D	
6	a.	b. > 7mm Ø	max	c. 2.5mm <sup>2</sup>	d.	



# ◆ Installing Intelligent Receiver (ATW-RTU-02)

Please follow the illustrations and information below in sequence to install the RF Receiver and Room Unit correctly. To enable special features and see what other system options are available refer to section *Installer Mode*.




## NOTE

The RF Receiver contains no user serviceable parts. It should be opened and installed by qualified installer only.



# $oldsymbol{\lambda}$ caution

Static electricity. Malfunction. Do not touch the circuit board.

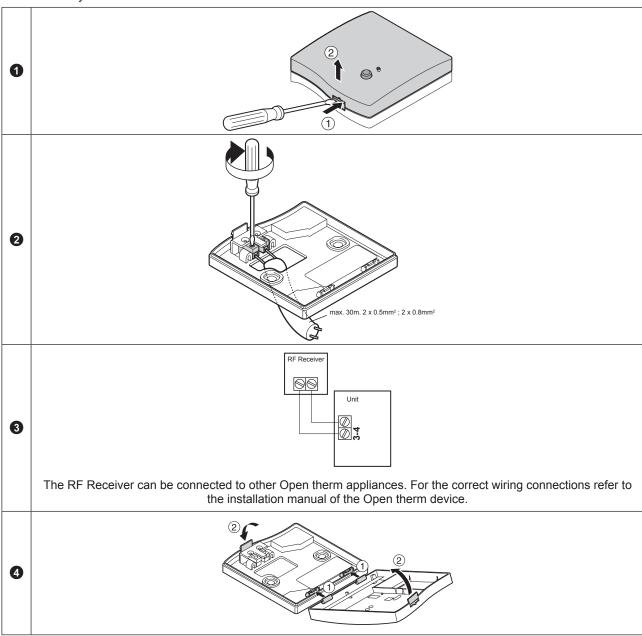



# NOTE

- · All wiring must be in accordance with IEE regulations.
- Observe ambient temperature and current limits (see the RF Receiver wiring label).

# ◆ Installing the Room Unit (ATW-RTU-01/02/03)

#### **Power Up**

- · Installing the Batteries:
  - a. Lift up the front cover of the Room Unit to reveal the battery cover and product controls.
  - **b.** Remove the battery cover by pressing down and sliding out.
  - c. Insert the 2 x AA LR6 Alkaline Batteries supplied with the Room Unit, ensuring the correct orientation.
  - d. After a short pause the Room Unit will display information on the screen and is now ready for use.
  - e. Replace the battery cover by sliding it firmly back into the front of the Room Unit.
    - Setting the Date and Time:
  - a. Press the ① button to begin setting the date. When you set the date for the first time after the batteries are inserted, the display will show: Press the ② ① ① buttons to set the current day of the month (e.g. d 01 = 1st day of the month) then press the green ③ button to confirm.

· d[]|

**b.** Press the  $\bigcirc$   $\bigcirc$  or  $\bigcirc$  buttons to set the current month of the year (e.g. m 01 = January) then press the green  $\bigcirc$  button to confirm.



c. Press the ④ ⊕ or ■ buttons to set the current year (e.g. yr 07 = 2007) then press the green ★ button to confirm. The date is now stored and the Day Indicator will be displayed under the current day of the week (e.g. 1 = Monday, 2 = Tuesday, etc.)



**d.** Use the ① ① or Duttons to set the correct time then press the green or button to confirm. Each press of the buttons will change the time by one minute and holding them down will change the time slowly at first and get progressively quicker.





## NOTE

If this mode is entered accidentally then press the 🚯, 🗲 or 🖰 buttons to exit.



## ◆ RF Communication check (test mode) (ON/OFF Thermostat) (ATW-RTU-01)

To check the RF communication, hold the Room Unit about 2-3 metres from the installed RF Receiver. Set the Room Unit to off by pressing the  $\circlearrowleft$  button. then press the  $\circledast$  and  $\circledast$  buttons together with the  $\Longrightarrow$  button for 3 seconds. The unit will display '**tESt**' and it will send test signals to the RF Receiver. If the test signals are received the LED on the RF Receiver, will flash between 1 and 5 times. Flashing the green LED on every 5 seconds (relay output will remain off) for a maximum of 10 minutes. When the green LED flashes on every 5 seconds proceed to the next step.



#### NOTE

If the green LED is not switched at specified intervals, the red LED is flashing or if you are installing a replacement RF Receiver or Room Thermostat, follow the procedures described in section Binding / Rebinding Procedure.

# ◆ RF Communication check (test mode) (Intelligent Thermostat) (ATW-RTU-02/03)

To check the RF communication, hold the Room Unit about 2-3 metres from the installed RF Receiver. Set the Room Unit to off by pressing the  $\circlearrowleft$  button. then press the  $\S$  and  $\blacktriangledown$  buttons together with the D button for 3 seconds. The unit will display "test" and it will send test signals to the RF Receiver. If the test signals are received the LED on the RF Receiver will flash between 1 and 5 times. The number of flashes indicates the strength of the radio signal. The higher the number of flashes, the stronger the signal is.



#### NOTE

If the LED does not flash or if you are installing a replacement RF Receiver or Room Unit, follow the procedures described in section Binding / Rebinding Procedure.

# ♦ Locating the Room Unit

While still in the Test Mode, as described in section above the Room Unit should be located taking the following into consideration and reviewing the illustrations below:


1 Find a suitable location where the signal transmission is reliable. Reliable transmission is indicated when the RF Receiver is flashing the green LED every 5 seconds.



## NOTE

The RF Receiver will be off.

- 2 Install the Room Unit EITHER on the wall using the wall bracket OR attach the optional table stand as shown in below.
- 3 Exit the Test Mode by pressing the 🖎 or 🖰 button.

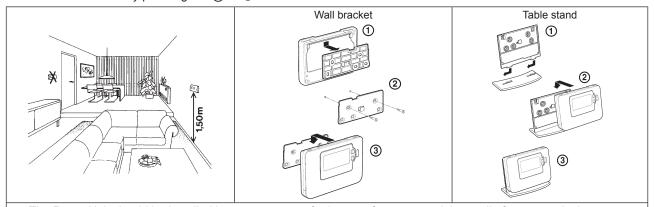

- The Room Unit should be installed in an open space for best performance as it is a radio frequency device.
- Leave at least 30cm distance from any metal objects including wall boxes and at least 1 metre from any other electrical equipment eg. radio, TV, PC etc.
- Do not mount onto metal wall boxes.
- It is recommended that the RF Receiver is fully installed.

# ◆ Communication loss (Only Intelligent thermostat) (ATW-RTU-02/03)

In the event of an RF communications loss, the LED on the RF Receiver will indicate which type of fault has occurred.

- If there is a communications fault between the RF Receiver and the Room Unit, then the LED on the RF Receiver will flash red for 0.1 sec ON every three seconds.
- If there is a fault in communications between the boiler or System Controller, then the LED on the RF Receiver will flash 3 times quickly and then be off for three seconds.
- If there is more than one Room Unit installed, as in multi-zone systems for example, and communications is lost with one zone, then the red LED on the RF Receiver will flash two times quickly and then be off for two seconds.
- If there is more than one Room Unit installed, as in multi-zone systems for example, and communications is lost with both zones, then the red LED on the RF Receiver will flash once for 0.1 sec ON, and 0.9 sec OFF.

Once the faulty device has been identified, replace as necessary and follow the re-binding procedure as described in section *Binding / Rebinding Procedure*.

#### **♦** Installer Mode


Installer Mode is used to alter the system settings for specific applications, to use the special features of the Room Unit in a different way or to alter the factory preset parameters. Parameters are divided into two groups:

- Category 1 parameters Room Unit Setup
- Category 2 parameters System Setup

These are all listed in section Installer Parameters Table.

- · Entering Installer Mode
- 1 Press the 🖰 button.

Press and hold the i button and the **PROGRAM** ( & ) buttons together.

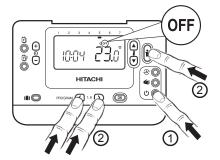

2 The unit will display the first parameter of installer parameter group category 1 (from Parameter n.1 to n.19) as shown



The display will flash indicating that a change has been made.



Press the green button to confirm the change.

The display will stop flashing.



**5** Press **④ ⊕** button to go to the next parameter.



- 6 Press the ▶ button to go to Installer parameter group category 2 (②) (from Parameter n.4 to n.14).
- 7 To exit the installer mode press the ♠ or ♠ buttons.



#### ◆ Fail-Safe Mode Setup (ON/OFF Thermostat) (ATW-RTU-01)

The fail-safe mode defines the RF Receiver box output relay status if the RF communication is lost (e.g. when the Room Unit stops communicating due to discharged batteries).

The factory setting keeps the relay permanently off when the communication is lost.

#### ◆ Fail-Safe mode setup (Intelligent thermostat) (ATW-RTU-02/03)

The fail-safe mode defines the system status if the RF communication is lost (e.g. when the Room Unit stops communicating due to discharged batteries). If the system is a direct (radiator one), then the factory setting will make the system revert to a set point of 10°C for frost protection. If indirect loops are added, the system will continue to operate at the last communicated setpoint.

#### ◆ Using the Room Unit for Specific Applications (ON/OFF Thermostat) (ATW-RTU-01)

The Room Unit is a versatile controller that can be used to control many different applications. Some of the system parameters within the Room Unit menu will not apply. Please also note other changes to the setting of the optimization and proportional band settings as shown in the tables of the section *Installer Parameters Table*.



#### NOTE

In order for the Room Unit to send the heating demand signal to the RF Receiver, it is essential that the Category 2 parameter 8:Su is set to the correct value. Failure to do this will mean that the heating system will not respond to changes in the setpoint on the Room Unit. Under these circumstances the system will operate with no input from the Room Unit and may not therefore provide adequate temperature control.

## **♦** Using the Special Features of the Room Unit

Special Feature	Description	Enable/Disable		
Heating or Cooling Operation	This product can be used for heating or cooling applications. If you select cooling mode the control algorithm and factory default program will be modified. You can independently modify the heating and cooling profile (Only ON/OFF thermostat)	To enable: Set parameter 4:HC (category 2) to 1.		
Summer/ Winter Auto time change	This feature moves time automatically on the last Sunday of March and the last Sunday of October. The feature is factory enabled.	To enable: Set parameter 3:tC (category 1) to 1.		
Temperature Offset	If the Room Unit is located in a particularly hot/cold location for reliable signal transmission reasons then the measured/displayed temperature can be adjusted by +/- 3°C. This is useful if the homeowner wants the reading to match another appliance temperature display.	Set parameter 12: tO (category 1) to the required offset value.		
Upper/Lower Temperature Limit	The normal upper temperature limit of 35°C can be reduced to 21°C to save the homeowner energy. The normal lower limit of 5°C can be increased up to 21°C to protect inhabitants from cold.	Set parameter 6: uL (category 1) to the desired upper limit.  Set parameter 7: LL (category 1) to the desired lower limit.		



# ♦ Using the Room Unit for specific applications (Intelligent thermostat) (ATW-RTU-02/03)

The Room Unit is a versatile controller that can be used to control many different applications. Please note that when the Room Unit is installed in conjunction with a System Controller, the functionality will differ to that when installed with a standard boiler system. Most of the functions shown below will be controlled by the System Controller and be set within its parameters. Therefore, some of the system parameters within the Room Unit menu will not apply. Please also note other changes to the setting of the optimization and proportional band settings as shown in the the next tables.

#### **♦** Installer Parameters Table

# **Category 1 - Room Unit Settings**

Parameter No.		Factory Default Setting		Optional Setting		
		Cat	egory 1 Parameters – Room Unit	Settings		
		Display	Description	Display	Description	
AM-PM / 24hr Dis- play	1:CL	24	24 hr clock display format	12	12 hr – AM/PM clock display format	
Reset Time/ Temp Program	2:rP	1	Time / Temp profile set to factory default  Changes to 0 when one of the time/temp profiles are changed	0	Time / Temperature are as programmed  To restore the factory profile set to 1	
Auto Summer/Win- ter Time Change	3:tC	1	Auto Summer/Winter Time Change Enabled	0	Auto Summer/Winter Time Change Disabled	
LCD Backlighting	5:bL	1	Backlighting Enable	0	Backlighting Disabled	
Upper Temp Limit	6:uL	35	35°C Upper Temp. Limit	21 to 34	21°C to 34°C adjustment in 1°C steps	
Lower Temp Limit	7:LL	5	5°C Lower Temp. Limit	5 to 21	6°C to 21°C adjustment in 1°C steps	
Optimization	8:OP	0	Optimization Disabled	1	Optimization Enabled	
Temperature Offset	12:tO	0	No temperature offset	-3 to +3	-3°C to +3°C adjustment in 0.1°C steps	
Proportional Band Width	13:Pb	1.5	Proportional band of 1.5 degrees	1.6 to 3.0	1.6°C to 3.0°C adjustment in 0.1°C steps	
Reset Parameters to Factory Defaults	19:FS	1	All settings at factory defaults Changes to 0 when one of the parameter is changed	0	Settings are as modified above  To restore the factory profile set to 1	



#### NOTE

Remember to always press the green w button to confirm that you want to store your new Installer Set-Up setting. To exit the Installer Mode press the A or to button.



## **Category 2 - System Settings**



#### NOTE

To ensure correct heat pump system operation, parameter 8:Su must be set correctly.

Parameter	Parameter No.		Factory Default Setting	Optional Setting	
Category	2 Parameter	s – Sy	stem Settings (press the 🕥	button	to access this category)
Heat/Cool selection enable / disable	0	Disabled	1	Enabled	
Room Temperature Sensor Use	8:Su	0	Programmer and room compensation unit	1	Only Intelligent Thermostat
Maximum Flow Setpoint	11:uF	55	55°C Maximum Flow Temp.	0 to 99	0°C to 99°C adjustment in 1°C steps (N.A.)
Minimum Flow Setpoint	12:LF	15	15°C Minimum Flow Temp.	0 to 50	0°C to 50°C adjustment in 1°C steps (N.A.)
Mixing Value Run Time	13:Ar	150	150 seconds	0 to 240	0 to 240 sec. adjustment in 1sec steps (N.A.)
Pump Overrun Run Time	14:Pr	15	15 minutes	0 to 99	0 to 99 mins adjustment in 1min steps (N.A.)



#### NOTE

Remember to always press the green w button to confirm that you want to store your new Installer Set-Up setting. To exit the Installer Mode press the 🔊 or 🗲 button.

# ◆ Binding / Rebinding Procedure (ON/OFF Thermostat) (ATW-RTU-01)

The binding operation described below is required if:

- Any of the system components (Room Unit or RF Receiver) are replaced.
- The RF Receiver has incorrect or no binding data stored (e.g. when pre-bound system pack components have been mismatched).



#### NOTE

During the binding procedure keep approximately 1m distance between the Room Unit and the RF Receiver.

To bind/rebind:

- 1 Hold button on RF Receiver for 15 seconds. LED will flash red 0.1 sec ON, and 0.9 sec OFF
- 2 Hold button on RF Receiver for 5 seconds. LED will flash red for 0.5 sec ON, and 0.5 sec OFF.
- 3 Press the 🖰 button on the Room Unit
- 4 Hold & A, The boiler and RF signal icons will be displayed.
- **5** Press the green **o**K button.
- 6 When Red LED on the RF Receiver goes off, the devices are bound.
- 7 If binding is unsuccessful, then the LED will stay on. In this case, move the Room Unit and repeat the procedure from the beginning.
- 8 The LED on the RF Receiver will flash green every 10 seconds to indicate that the device is live.
- 9 Now go to Section Installing the Programmable thermostat to setup the system.



## ♦ Binding/Rebinding Procedure (Intelligent thermostat) (ATW-RTU-02/03)


Binding is a necessary process in order to link the room thermostat with the wireless receiver and assign them to the corresponding circuit on the YUTAKI S80 controller.





In case of binding only one of the two circuits, the thermostat functions of the circuit which is not bound can not be used.

Make sure the room thermostats are shut down before starting the binding process. They must be in the Off position.

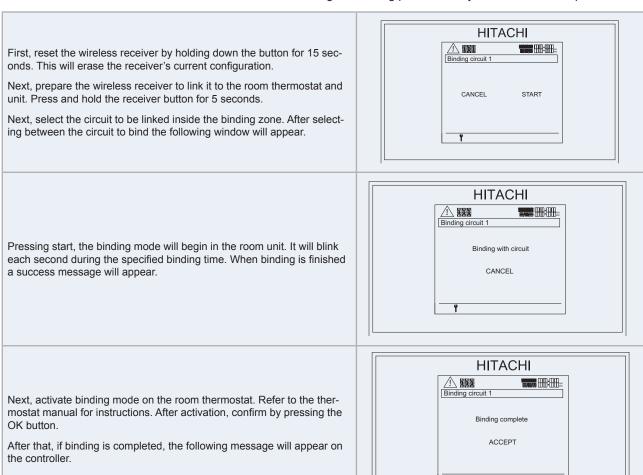

If binding fails, the "BINDING FAILURE" error message will appear.



#### NOTE

The same process applies to circuit 2 when selected on the menu.

In summary, the binding process follows the steps below:

- Ensure that thermostats are in the off position.
- Press the button on the receiver for 15 seconds in order to remove the current configuration.
- Press the button on the receiver for 5 seconds.
- Select the circuit to be linked on the binding menu. Press the start button on the screen.
- Start the binding mode on the thermostat. Refer to its instruction manual.
- Press Ok button on the thermostat to confirm binding.
- The display will show a confirmation message. If the binding is not confirmed for 30 seconds, an error message will appear.



#### NOTE

Be careful because if the power supply is stopped on the remote thermostat or his receiver, it will keep the last temperatures, room setting and room temperature. This values will be sent until the setting value is changed. If it has never been read any value, it will send the OpenTherm default temperature of 20°C.

#### **♦** Room Unit


#### Description

The Hitachi programmable wireless Room Unit is designed to control your heating system efficiently, providing comfortable temperatures when you are at home and energy savings when you are away. The following instructions explain how to program and use the Room Unit to provide the most home comfort at the least cost.

#### Features

- Ergonomic user interface featuring an 'OK-button'.
- Large LCD (Liquid Crystal Display) Screen with backlight.
- 7-day heating / cooling program to match your lifestyle, whilst maximising energy savings.
- 6 independent temperature levels per day (from 5°C to 35°C).
- Holiday button saves energy by letting you reduce the temperature for 1 to 99 days.
- Built-in Memory holds the user program indefinitely.

# Controls Layout

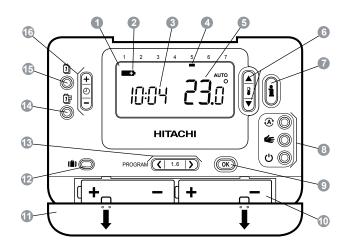

- 1 LCD Screen
- 2 Battery Low Indicator
- 3 Time Display
- 4 Day Indicator
- **5** Temperature Display
- **6** Temperature Change Buttons
- 7 Temperature Enquiry Button
- Operating Mode Buttons
- Green OK Button
- Battery Compartment
- 1 Battery Cover
- 12 Holiday Function Button
- 1 Program Buttons
- 1 Copy Day Button
- Set Date/Day Button
- Time Change Buttons

This section shows you how to setup and run the Room Unit in 3 simple steps:

#### **STEP 1: Installing the Batteries**



#### NOTE

Please follow the instructions in this section only if the Room Unit screen is blank (no symbols or digits are displayed). If the room temperature is already displayed move on to Step 2: Setting the Day and Time.

- To install the Batteries:
- a. Lift up the front cover of the Room Unit to reveal the battery cover and product controls.
- **b.** Remove the battery cover by pressing down and sliding out.
- **c.** Insert the 2 x AA LR6 Alkaline Batteries supplied with the Room Unit, ensuring the correct orientation (see *Controls Layout*).
- d. After a short pause the Room Unit will display information on the screen and is now ready for use.
- e. Replace the battery cover by sliding it firmly back into the front of the Room Unit.

#### **STEP 2: Setting the Date and Time**

- To set the Date and Time:
- a. Press the D button to begin setting the date.
- **b.** Press the ⊕ ⊕ or □ buttons to set the current day of the month (e.g. d01 = 1st day of the month) then press the green ★ button to confirm.
- c. Press the ⊕ ⊕ or ¬ buttons to set the current month of the year (e.g. m01 = January) then press the green ™ button to confirm.
- d. Press the ⊕ ⊕ or □ buttons to set the current year (e.g. yr08 = 2008) then press the green № button to confirm. The date is now stored and the Day Indicator will be displayed under the current day of the week (e.g. 1 = Monday, 2 = Tuesday, etc.)
- e. Use the ② ⊕ or buttons to set the correct time then press the green ™ button to confirm. Each press of the buttons will change the time by one minute and holding them down will change the time slowly at first and get progressively quicker.



# NOTE

If this mode is entered accidentally then press the ②, or O buttons to exit.

# **STEP 3: Running the Built-in Heating Program**

The Room Unit is now ready for operation. Press the 🏵 button and the built-in heating program will start running.



## NOTE

The built-in heating program has been designed to provide normal comfort requirements, but if you want to customise the settings please see the next section Programming the Room Unit.

5

#### **♦** Programming the Room Unit (Heating)

#### **The Built-in Heating Program**

The built-in heating program has 6 temperature level changes per day that can be set between 3.00 am and 2.50 am the following day - allowing you to maintain the evening temperature after midnight. Each temperature level can be set between 5°C and 35°C, and adjusted in 0.5°C increments. The factory default program for heating is as follows.

Monday to Friday (Day 1 to 5)

Period	1	2	3	4	5	6
Time	6:30	8:00	12:00	14:00	18:00	22:30
Temperature	21°C	18°C	21°C	18°C	21°C	18°C

Saturday & Sunday (Day 6 & 7)

Period	1	2	3	4	5	6
Time	8:00	10:00	12:00	14:00	18:00	23:00
Temperature	21°C	21°C	21°C	21°C	21°C	18°C

# **Reviewing the Heating Program**

To review or edit the heating program use the PROGRAM  $\bigcirc$  or  $\bigcirc$  buttons to navigate between the 6 individual programming periods for that day. Use the  $\bigcirc$  button to step through each day of the week, so the complete 7 day heating program can be reviewed or edited.

- · Modifying the Heating Program
  - To change the heating program:
  - a. Press either of the PROGRAM ( or ) buttons to enter the programming mode. The time / temperature settings for period (1) on Monday (Day 1) will be flashing as shown. The active period is highlighted by a flashing square around the numbers at the bottom of the screen and the selected day is shown with the day indicator.
  - **b.** To adjust the period start time use the ① ① ① buttons, the 'OK?' indicator will be displayed to confirm the change. Holding the button down will change the time quickly.





#### NOTE

If you are pressing the igodot igodot or igodot buttons and the display flashes the next period, it means the next period will be pushed forward.

**c.** Once the required time is reached press the green **OK** button to confirm.



## NOTE

If the original time setting did not require adjustment press the green ( button to move to step 'd'.

- d. The temperature setting for period ① on Monday (Day 1) will now be flashing. To adjust this press the ▮ ▲ or ▼ buttons and confirm the setting again by pressing the green ◑ button.
- **e.** The next time and temperature period will now be active. Adjust this by repeating steps b d above until all 6 periods are set for Monday or press the button to run the program as set, at any time.

You now have a choice of how to set the program for the next day:

f. i) Press the D button to copy Monday's program into Tuesday. The display will go blank apart from the 'non flashing' day indicator, which indicates the day copied and the 'flashing' target day to copy the program to. To accept this day press the green w button. To select a different target day press the D button until the 'flashing' day indicator is under the required day, then accept it by pressing the green button.



# NOTE

Once the target day is confirmed it becomes the day that is copied if the 🗓 button is pressed again.

OR

g. ii) Press the ① button to move the day indicator to Tuesday (Day 2). The program for that day can then be adjusted by following steps b to e. Programs for the remaining days can be set in the same way, using the ① button to move to the next day.

To exit the programming mode select the desired operating mode by pressing the 2,  $\blacktriangleleft$  or 0 buttons.



#### NOTE

To run the adjusted program select the AUTO mode.

#### **Disabling / Enabling Time Periods**

The Room Unit has 6 periods each day that can be programmed, but you may not need all of these switch points for your heating requirements. Therefore, any period from 2 to 4 can be removed from (or returned to) the heating program profile.

- · To disable or enable time periods:
  - a. To disable unwanted periods go to the desired period (2 to 6) using the PROGRAM or buttons to navigate, ensure the correct period is highlighted with the flashing square symbol. Press and hold the button for at least 2 seconds and the display will indicate the period has been removed from the program.
  - **b.** To enable periods again follow the same procedure as above, navigating to the already disabled period. To enable this period again press and hold the **û** button for at least 2 seconds.

#### **Choosing the Operating Mode**

The Room Unit can operate in three different modes: Automatic, Manual or Off. To set the operating mode press either of the A,  $\blacktriangleleft$  or D buttons. The screen indicates which mode is currently active by displaying AUTO, MAN or OFF.

**AUTOMATIC** (ⓐ) mode sets the Room Unit to follow the built-in temperature program (default or personalised). Operating the Room Unit in this mode is the best way to maintain a high level of temperature comfort whilst maximising your energy savings.

**MANUAL** (♠) mode allows the Room Unit to be used without following the built in temperature programme. The setpoint can be adjusted from 5°C to 35°C by using the ♠ or ♥ buttons. The Room Unit will continue to maintain this temperature until another operating mode or temperature is selected.

**OFF** ( $^{\circ}$ ) mode sets the Room Unit to control to a minimum temperature setting of 5°C (default) that acts as a frost protection measure for your home.

#### **During Normal Operation**

Temperature Override

During normal operation (AUTO (A) or MAN (A) mode) the programmed temperature can be adjusted manually by pressing the A or V buttons or the B button. The 'target' temperature will be displayed and flash for 5 seconds - during this time the A or V buttons can be used to modify the set value.



#### NOTE

This temperature override is cancelled at the next programmed temperature change.

Temperature Enquiry

When the Room Unit is configured to control the room temperature directly it will display the current room temperature. To review the programmed 'target' temperature (the temperature which the Room Unit is trying to maintain) press the  $\hat{\mathbb{I}}$  button. This 'target' temperature value will be displayed flashing for 5 seconds before returning to the current room temperature value.

5

#### Using the Special Functions

#### **HOLIDAY Function**

The holiday function allows you to set a constant temperature (default =  $10^{\circ}$ C) for a specified number of days (from 1 - 99 days). This lets you save energy and related costs when you are away from home, but resumes normal operation on the day of your return.

To set the Holiday function:

- a. Ensure the Room Unit is running in AUTO (�) or MAN (�) operating modes.
- b. Press the holiday the holiday days counter and temperature setting, along with the holiday indicator the
- c. Press the ⊕ ⊕ or = time buttons to set the holiday time (1 99 days) and press the green ™ button to confirm.
- d. Press the ♣ a or ♥ buttons to set the holiday temperature (5°C 35°C) and press the green № button to confirm.

The Room Unit will now control to the new temperature for the set number of days that your home is vacant. At midnight the holiday counter will be reduced by one until the selected number of days have passed. The Room Unit will then return to normal operation as set by the AUTO (ⓐ) or MAN (⑤) mode. To cancel the HOLIDAY function or to exit the function at any time press the lib button a second time.

#### **Adjusting the Time**

To adjust only the time during normal operation use the - or - buttons to adjust the time and press the green - button again to confirm any changes.

# ♦ FAQ's

#### How do I change the batteries on the Room Unit when they run out?

The Room Unit constantly monitors the battery power level, which typically lasts for about 2 years before needing replaced. When the power is running low a flashing symbol will be displayed on the screen. To change the batteries follow the steps in the above section ('STEP 1: Installing the Batteries'), replacing the used batteries with new ones in Step c.



#### NOTE

While changing the batteries your program settings will be stored but you may need to adjust the time settings to be correct.

# I want to use the table stand instead of wall mounted bracket. Where can I position the Room Unit?

It is important to keep the Room Unit in a location where reliable RF communication was proven. Advise your installer where would you like to position the Room Unit and he will check if the RF communication is reliable in the selected location(s).



# NOTE

As this is a wireless device certain objects could interfere with the RF signal - Leave at least 30cm distance from any metal objects (including wall boxes) and at least 1 metre from any other electrical equipment eg. radio, TV, PC, etc.

# 6. LCD user's interface

# Index

6.1.	Descri	ption of the hardware	. 190
6.2.	Compi	rehensive view	. 190
6.3.	Descri	ption of the icons	. 192
6.4.	Menu	description	. 194
	6.4.1.	User mode	194
	6.4.2.	Installer mode	194
6.5.	Menu	navigation	. 196
	6.5.1.	Unit configuration	196
	6.5.2.	Controller configuration	214
	6.5.3.	Return to global view (Logout when Installer mode)	215

# 6.1 Description of the hardware


LCD user control is the new user-friendly interface for controlling the unit. It has been designed to be supplied as accessory for indoor unit alone (without tank) and integrated into the DHW tank for indoor unit with HITACHI tank (Tank integrated over the indoor unit). This controller allows the remote control of the air to water heat pump by using the "Intelligent" Thermostat (as accessory).

#### Button definitions

The control's operating mode is very simple, with 7 user-friendly buttons.

Button descriptions:

- 1 RUN/STOP: From the comprehensive view, it will be switched RUN/STOP the selected area or all the unit if there is no zone selected
- 2 Ok: this button is used to select items and confirm edits to them.
- 3 4 Arrows: these allow you to navigate within the menus and displays.
- 4 Return: used as a cancel button when editing an item, and also used to go to the main menu from the general display.

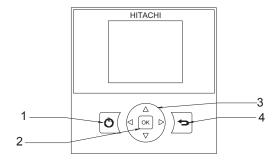

# 6.2 Comprehensive view

Main screen is called "comprehensive view". It provides the general system information distributed in 4 zones (Circuit I, Circuit II, Domestic Hot Water and swimming pool) through the screen, separating the different working concepts allowing checking the status of each circuit.

Move through this view using the arrow buttons.

"Time & Date", "Alarm indication" and "Unit Status signals" are displayed on all screens.


Only the following parameters can be modified on the "comprehensive view" screen:

- DHW temperature
- · Swimming Pool temperature
- RUN/STOP circuits, DHW, swimming pool or the entire unit.

To edit the parameters, first select the desired parameter and press OK button. After that, the new value can be entered using "arrow" buttons. Confirm that the value is correct by again pressing the OK button. The cancel button restores the previous value.

Pressing the "RUN/STOP" button switches the "RUN/STOP" status for all areas (if they are available).

To change the "status" of a single area, select the desired area and press the "RUN/STOP" button.

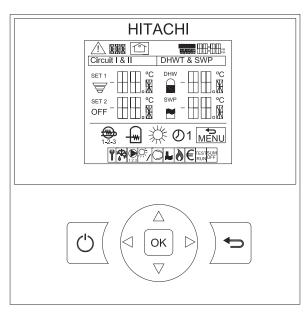

4

Ø

0

10



Displays the current date and time information.

The information displayed may be changed on the control configuration menu.

#### Alarm indication

Alarm indication will appear when an alarm is detected. The alarm icon and alarm code will appear.

#### Control of Circuits I & II

This displays the temperature setting calculated for each circuit and a throughput icon indicating the percentage of the temperature setting being generated.

Pressing the RUN/STOP button on one of these circuits will switch it on or off.

When Air to water heat pump System has configured an intelligent room thermostat, temperature settings for circuits I and II may be switched between the following variables.

- SET: Control temperature Setting
- OTC: OTC Temperature Setting
- **ROOM: Room Temperature Setting**
- **CURR: Current Room Temperature**

#### 4 DHW control

Available options are:

- DHWT temperature setting
- DHWT water temperature

This view gives information about the DHW's temperature setting and displays a temperature icon indicating the percentage of temperature the DHW will be generating.

It will also have an icon to show whether or not the electrical heater of the DHW is working and another one that indicates whether there is a timer configured for the current day. DHW temperature setting may be changed by pressing the OK button above it.

Pressing the RUN/STOP button over the DHW area will switch it RUN or STOP.

If anti-legionella is working, an ANTL text will appear, and the setting configured on the anti-legionella menu will be displayed.

#### Swimming pool control

Available options are:

- SWP temperature setting
- SWP water temperature

This view gives information about the Swimming pool temperature setting and displays a temperature icon indicating the percentage of temperature the Swimming pool will be generating. Swimming pool temperature setting may be changed by pressing the OK button above it.

Pressing the RUN/STOP button over the Swimming pool area will switch it RUN or STOP.

9

3

6

a

8

1

- Configuration Menu **Unit Configuration**
- Controller Configuration
- Return to global view (Logout for installer)

This icon indicates when it is possible to go to the configuration menu. If the icon is displayed, the user may return to the menu by pressing the back button. It has different options that can be configured as shown in the following pages.

MITACHI

OK

#### Timer indication

1 When Unit timer is set, it will appear the timer indication icon with its setting number.

#### Unit status signals

This part of the screen displays all the notification icons that offer general knowledge on the unit's situation.

Available signals are from left to right:

- Installer mode indication
- Defrost

•

- Water pumps
- Supplementary solar system
- Compressor ON
- Boiler working
- Tariff input
- Test tun
- Summer Switch-OFF

# Unit mode (Heating)

This icon shows the status of operation mode of the unit.

#### Central control indication

It can be selected local or central mode.

# DHW heater operation (If it is necessary)

Heater steps 8 1- Step 1

Unit (Status)

2- Step 2

Heating unit

3- Step 3

Timer enabled

Electrical Heater DHWT control:

- ON
- Disabled by timer

Test run

Auto summer switch-off



# 6.3 Description of the icons

Icon	Name	Values	Explanation
OFF		OFF	Circuit I or II is in Demand-OFF
		=	Circuit I or II is on Thermo-OFF
	Circuit I or II Status	#	Circuit I or II is working between 0 < X ≤ 33% of the desired temperature
		7	Circuit I or II is working between 33 < X ≤ 66% of the desired temperature
		Ŧ	Circuit I or II is working between 66 < X ≤ 100% of the desired temperature
OFF		OFF	DHW is on Demand-OFF.
ANTL		ANTL	If Anti-legionella option is working it will appear the text ANTL.
			DHW is on Thermo-OFF
_	DHW status		DHW is working between 0 < X ≤ 33% of the desired temperature
Ш			DHW is working between 33 < X ≤ 66% of the desired temperature
			DHW is working between 66 < X ≤ 100% of the desired temperature
OFF		OFF	Swimming pool is on Demand-OFF
		Ш	SWP is on Thermo OFF
1 1	Swimming pool statuts	ద	SWP is working between 0 < X< 33% of the desired temperature
ш		Ш	SWP is working between 33 < X≤ 66% of the desired temperature
			SWP is working between 66 < X≤ 100% of the desired temperature
888	Setting temperatures	Value	Displays the temperature setting of the circuit or DHW
	Octung temperatures	OFF	Circuit 1, Circuit 2, DHW or Swimming Pool are stopped
	Ban		Ban icon is displayed when a timer bans the unit. This means that there is a timer assigned for the current day, but the current time is outside the permitted period
**	Mode	**	Heating
<b>⊕</b> 123	Pump	<b>⊕</b> 123	This icon informs about pump operation.  There are three available pumps on the system. Each one is numbered, and its corresponding number is displayed below to the pump icon when it is operating
1-2-3	Circuit I and II step	1-2-3	Indicates which of the 3 possible heater steps is applied on space heating circuit
	DHWT Heater		Informs about DHW tank heater operation. (If it is enabled)
<del>[</del> _w]	Drivvi rieatei		Informs about DHW tank heater operation. (If it is banned by the timer)
1	Installer mode	4	Informs that LCD is logged on the installer mode which has special privileges
<b>L</b>	Swimming pool	<b>k</b>	Swimming pool is enabled
終	Solar	炒	Auxiliary Solar system is working
1 2	Compressor	1 2	Compressors enabled (1:R410A / 2:R134a)
<u> </u>	Alarm	Δ	Existing alarm. This icon will appear with the alarm code

1	•

Icon	Name	Values	Explanation
ъ	Boiler	ъ	Boiler system is working
€	Tariff	€	When tariff signal is received, the operation restriction is applied
<b>(</b> J)	Timer	Ø	When the timer is configured and enabled, the number of timer set at the current day (1 to 7) will be shown together with the clock icon
<b>\$</b> \$\$	Defrost	<b>#</b>	Defrost function is active
TEST RUN	Test Run	TEST RUN	Informs about the activation of the "Test Run" function in the outdoor unit
SUM OFF	Summer Switch-Off	SUM OFF	Notifies that Circuits 1 & 2 are OFF because Summer Switch-Off is activated.  Auto summer Switch-OFF is calculated on the controller. When daily average will be over Auto summer Switch-OFF temperature, Auto summer Switch-OFF will be activated.
MENU	Menu	MENU	This icon allows user to go to the "main menu" by pressing "Return" button.  The "comprehensive view" will appear when it's possible to return to the menu
$\triangle$	Central	企	Central mode icon could be Local and central, each one will have his own icon



# 6.4 Menu description

Two types of configuration modes can be selected:

#### 6.4.1 User mode

#### ♦ Menu contents (for user mode)

		Menu con	tents				
Level 1	Level 2	Level 3	Level 4	Level 5			
Unit Conf	iguration						
	Operation	Display Par	ameters				
		System O	peration				
		Unit Status	Unit Status				
		Actual Ten	nperatures				
		Setpoint					
		Alarm Hist	ory				
	General P	arameters					
		Central Op	peration O	ptions			
	System Co	onfiguration					
	Space Heating						
	alculation T° C1						
Water Calculation To							
		DHW					
		Swimming	Pool				
		Unit Timer					
			Scenes Creation				
			Daily Pat	terns Creation			
			Daily Pat	terns Assignation			
				ners Assignation			
		Optional F					
				Switch-OFF			
0 1 "	• •		Tariff Fur	iction			
Controller	r Configura						
	Time And						
	Language						
	Screen Co						
	About Cor						
Return to	global viev						

#### 6.4.2 Installer mode

#### **♦** Installer access

A special user with higher access privileges can use the controller to configure the system.

This user is referred to as the Installer, and in order to access the controller as Installer, you must hold down the OK and Return buttons for 3 seconds.



After that, the "Enter the password combination" message will appear.

The password combination for the Installer is:

Right (
$$\longrightarrow$$
), Down ( $\stackrel{\downarrow}{\blacktriangledown}$ ), Left ( $\longleftarrow$ ), Right ( $\longrightarrow$ )

Press Ok to confirm the password.

If the correct access code is entered, the installer mode icon will appear on the notifications bar (bottom line).



Installer level access remains active for 30 minutes. After that time, it is necessary to repeat the log in process. To exit the Installer mode and return to the unit menu, hold down the backspace for 3 seconds or go to the logout option on the menu.



# NOTE

The following chapters will explain the special settings the Installer can edit. It is important to understand that the Installer can also perform all the actions available to other users.

# ♦ Menu contents (for installer mode)

Re- marks
marks
Y
•
Y
Y
•
Y
-
Ý
· Y
- '
on
on
Y
Y
u- <b>y</b>
Y
Y
Y
ť
Y
Y
Ÿ
-
Y

		Menu co	ntents		Re-		
Level 1	Level 2	Level 3	Level 4	Level 5	marks		
Controll	er Configu	ıration					
	Time And	Date					
	Language Selection						
	LCD Energy Saving						
	Screen C	ontrast					
	About Controller						
Logout							



#### NOTE

- (\*1): This parameter will be shown when "Heating source" is set as "HP + Heater".
- (\*2): This parameter will be shown when "Heating source" is set as "HP + Boiler".

6



# 6.5 Menu navigation



## NOTE

This chapter explains navigation through the menus of the LCD controller. For more specific information about particular options in these menus, refer to the chapters Control system and Optional functions.

User menu contains the following features:

- Unit Configuration
- Controller Configuration
- · Return to global view



Installer menu contains the following features:

- Unit Configuration
- · Controller Configuration
- Logout



# 6.5.1 Unit configuration

The following chapters explain all the items contained on the Unit configuration menu.

"Unit configuration" contains the following features:

- Operation display parameters
- · General parameters
- · System configuration



## 6.5.1.1 Operation display parameters

"Operation display parameters" contains the following features:

- System Operation
- Unit Status
- Actual Temperatures
- Setpoint
- Alarm History



The next list shows the operation parameters that can be consulted on the display. All of them are read-only. Most of these variables are the same ones that can be consulted by 7-segment, taking information from the outdoor unit and the 2nd cycle.



## NOTE

All the operation parameters are able to be displayed by the installer but normal user can only display the basic ones.



REF	Access mode	Description	Default Value	Range	Steps	Units
		System	Operation			
OPST		Operation Status	OFF	OFF / Heat D-OFF / Heat T-OFF / Heat ON / DHW OFF / DHW ON / SWP OFF / SWP ON / Alarm XXX (XXX= Code number)	-	-
		Unit	Status	Alailii AAA (AAA – Code Hullibel)		
MVP		Mixing valve C2 position (%)	_	Variable value	_	%
Pd	Y	Discharge pressure R134a (MPa)	_	Variable value	-	MPa
Ps	Ÿ	Suction pressure R134a (MPa)	_	Variable value	-	MPa
EVI	Ÿ	· · · · · · · · · · · · · · · · · · ·		Variable value		%
	·	Indoor expansion valve 1 opening (%)	-		-	
E2	Y	Indoor expansion valve 2 opening (%)	-	Variable value	-	%
EO	Y	Outdoor expansion valve opening (%)	-	Variable value	-	%
H4	Y	Inverter operation frequency 1 (Hz)	-	Variable value	-	Hz
H2	Ŷ	Inverter operation frequency 2 (Hz)	-	Variable value	-	Hz
DEF	Y	Defrosting	_	Variable value	-	-
DI	•	Cause of stoppage 1	_	Variable value	_	_
D2		Cause of stoppage 1	_	Variable value	_	
P1	Y	Compressor running current 1 (A)	-	Variable value	-	A
P2	ų į	1	-	Variable value	-	_
		Compressor running current 2 (A)	-		-	A
ROM1		PCB 1 Firmware	-	Variable value	-	-
ROM2		PCB 3 Firmware	-	Variable value	-	-
CD		Product specification code	-	Variable value	-	-
			mperatures			
I1		Water inlet temperature	-	Variable value	-	°C
OT		Water outlet temperature	-	Variable value	-	°C
OC1		Water outlet temperature 3 (*4)	-	Variable value	-	°C
OC2		Water outlet temperature C2 (*1)	-	Variable value	-	°C
ОН		DH water temperature (*2)	-	Variable value	-	°C
os		Swimming pool temperature (*3)	-	Variable value	-	°C
Ta		Outdoor ambient temperature	-	Variable value	-	°C
Ta.		Second ambient temperature	-	Variable value	-	°C
Ta2		Outdoor ambient average temperature	-	Variable value	-	°C
Ta3		Second ambient average temperature	-	Variable value	-	°C
TaSum		Summer Sw-Off average temperature	-	Variable value	-	°C
RT1		Room temperature C1 (*5)	_	Variable value	-	°C
RT2		Room temperature C2 (*1)	_	Variable value	_	°C
Td1	Y	Discharge gas temperature (R410A)	_	Variable value	-	°C
Td2	Ÿ	Discharge gas temperature (R134a)	_	Variable value	_	°C
Tg1	Ý	Gas temperature (R410A)		Variable value		°C
Tg2	Ý	Suction gas temperature (R134a)	-	Variable value	_	°C
TI1	Ÿ	Liquid temperature (R410A)	-	Variable value	_	°C
	Ÿ		-	i		°C
TI2	•	Liquid temperature (R134a)	-	Variable value	-	°C
Ts	Y	Evaporating gas temperature (R410A)	-	Variable value	-	
Ts2		Evaporating gas temperature (R134a)	-	Variable value	-	°C
то.			point	New John College		00
TC		Water temperature setting	-	Variable value	-	°C
OTCS1		OTC Supply set point C1 (*5)	-	Variable value	-	°C
OTCS2		OTC Supply set point C2 (*1)	-	Variable value	-	°C
RTS1		Room temperature set point C1 (*5)	-	Variable value	-	°C
RTS2		Room temperature set point C2 (*1)	-	Variable value	-	°C
T <sub>DHWS</sub>		DHW temperature set point (*2)	-	Variable value	-	°C
'DHWS						°C

Y: Available only for installer.





- "Summer switch-off average" will be shown as "--" if "Summer switch-off status" is disabled.
- (\*1): This parameter will be shown when "Water calculation To C2" is enabled ("Points", "Gradient" or "Fix").
- (\*2): This parameter will be shown when "DHW status" is enabled.
- (\*3): This parameter will be shown when "Swimming pool status" is enabled.
- (\*4): This parameter will be shown when "Heating source" is "HP+Heater" or "HP+Boiler" mode.
- (\*5): This parameter will not be shown when "Water calculation To C1" is disabled ("None").

#### 6.5.1.2 General parameters

"General parameters" contains the following features:

Room thermostat options

Central operation options

Refrigerant cycle address

Indoor unit address

General parameters allow for the configuration of the general system variables.

REF	Description	Default Value	Range	Steps	Units
RTO	Room thermostat options	-	-	-	-
COO	Central operation options	-	-	-	-
OUa	Refrigerant cycle address	0	0~63	1	-
IUa	Indoor unit address	0	0~63	1	-


The installer may configure the system address here so as to allow for proper configuration.



## CAUTION

OU and IU must be at the same setting as that on the unit PCB address.

# Room thermostat options

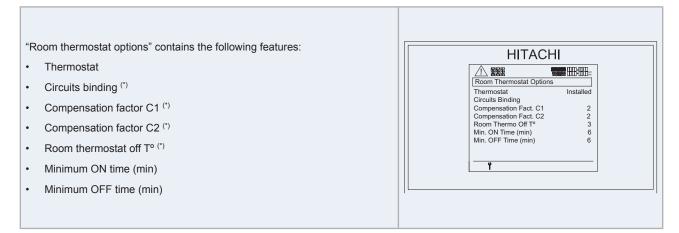



# NOTE

(\*) This parameter will be shown when "Thermostat" is installed.



The Room Thermostat Options submenu will display the following variables.

REF	Description	Default Value	Range	Steps	Units
Room Thermostat Options					
RTT	Thermostat (*1)	Not Installed	Not Installed / Installed	1	-
BIN	Circuits binding	-	-	-	-
Rfact <sub>1</sub>	Compensation factor C1	2	0~5	1	-
Rfact <sub>2</sub>	Compensation factor C2 (*2)	2	0~5	1	-
Roff	Room thermostat off T°	3	0~5	1	°C
Rton	Minimum ON time (min)	6	0~15	1	Min
Rtoff	Minimum OFF time (min)	6	0~15	1	Min



#### NOTE

- (\*1): This parameter will be shown when "Operation type" on "Central operation options" menu is set as "Air" or "Full" mode and the thermostat is installed.
- (\*2): This parameter will be shown when "Water calculation T° C2" is enabled ("Points", "Gradient" or "Fix").

#### **Circuits Binding**

Binding is a necessary process in order to link the room thermostat with the wireless receiver and assign them to the corresponding circuit on the controller.





# NOTE


In case of binding only one of the two circuits, the thermostat functions of the circuit which is not bound can not be used.

Make sure the room thermostats are shut down before starting the binding process. They must be in the Off position.


First, reset the wireless receiver by holding down the button for 15 seconds. This will erase the receiver's current configuration.

Next, prepare the wireless receiver to link it to the room thermostat and unit. Press and hold the receiver button for 5 seconds.

Next, select the circuit to be linked inside the binding zone. After selecting between the circuit to bind the following window will appear.

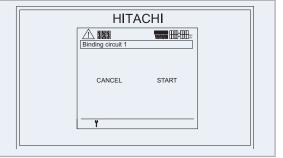


Pressing start, the binding mode will begin in the room unit. It will blink each second during the specified binding time. When binding is finished a success message will appear.

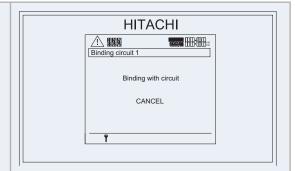

Next, activate binding mode on the room thermostat. Refer to the thermostat manual for instructions. After activation, confirm by pressing the OK button.

After that, if binding is completed, the following message will appear on the controller.

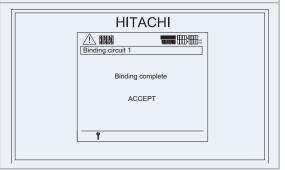

If binding fails, the "BINDING FAILURE" error message will appear.



#### NOTE

The same process applies to circuit 2 when selected on the menu.

In summary, the binding process follows the steps below:

- Ensure that thermostats are in the off position.
- Press the button on the receiver for 15 seconds in order to remove the current configuration.
- Press the button on the receiver for 5 seconds.
- Select the circuit to be linked on the binding menu. Press the start button on the screen.
- Start the binding mode on the thermostat. Refer to its instruction manual.
- Press Ok button on the thermostat to confirm binding.
- The display will show a confirmation message. If the binding is not confirmed for 30 seconds, an error message will appear.




#### NOTE

Be careful because if the power supply is stopped on the remote thermostat or his receiver, it will keep the last temperatures, room setting and room temperature. This values will be sent until the setting value is changed. If it has never been read any value, it will send the OpenTherm default temperature of 20°C.

#### **♦** Central operation options

This option is used for manage the YUTAKI S80 from a KNX centralized system. This system can read data from the unit.

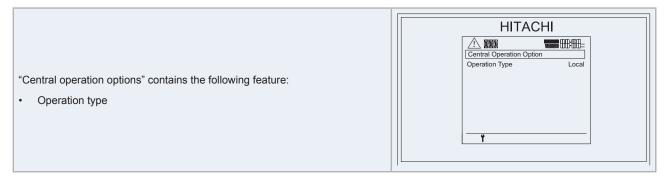

The "Central operation options" submenu will display the following variables.


REF	Description	Default Value	Range	Steps	Units
Central Operation Options					
COT	Operation type	Local	Local / Air / Water/ Full	-	-

The different ranges are described below:

- Local: central orders are not allowed.
- Air: LCD will work as a room thermostat. KNX sends the room thermostat setting and the ambient temperature. YUTAKI S80 works with these data as send from a room thermostat.
- Water: KNX sends the water temperature setting (heating and cooling) to YUTAKI S80.
- Full: KNX can control all variables from Air and Water modes at the same time.

#### 6.5.1.3 System configuration

The following chapters explain all the items contained on the "System configuration" menu.

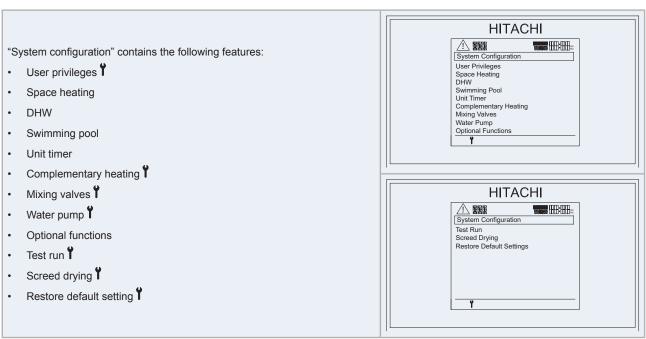



Menus may be modified during configuration. Configuration will hide or display available options. For example, if Circuit 2 is disabled, all circuit 2 options will be hidden.

6



## ♦ User privileges

"User privileges" contains the following features:

Calculation type selection

Antilegionella activation

This will define what the user may or may not do. For example, the Installer can decide whether or not the user may switch between different water calculation types, or whether or not the user may enable or disable the anti-legionella function.


REF	Description	Default Value	Range	Steps	Units		
	Water calculation privilege						
WTP	Calculation type selection	Yes	No / Yes	-	-		
ALP	Anti-legionella activation	No	No / Yes	-	-		

#### Space heating

"Space heating" contains the following features:

- Water Calculation T° C1
- Water Calculation T

  <sup>o</sup> C2
- C1 T° Range ¥
- C1 Tº Range

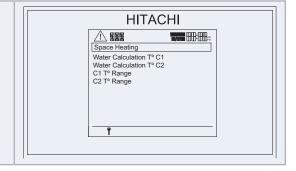

#### Water calculation To C1 and C2

The main parameter for configuration of space heating is the water calculation temperature.

The water calculation will calculate the temperature setting for each circuit, selecting a function to assign each temperature setting depending on the ambient temperature.

Each circuit will have its own water calculation type for heating. Booth circuits may be configured as:


None
Points
Gradient
Fix

To switch between them the variable type must be edited.




Installer may ban the possibility of switching between water calculation modes. In that case the user will not be able to edit the water calculation variable type.

The "None" option sets the circuit as disabled.

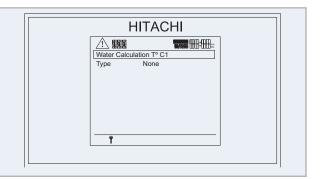

#### Points

"Point" is the most versatile calculation type. The user sets four points that will create line representing the function the Air to water heat pump will be use to give the temperature setting according to the current ambient temperature.

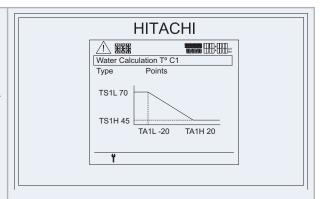


#### Gradient

Calculate the temperature setting using a gradient configured by the installer. In this view the user may configure the same variables as in the point view, only automatically. User can only edit the gradient variable and it will automatically set the values for the other 4 variables on the chart.



The unique editable variable on that view is gradient.

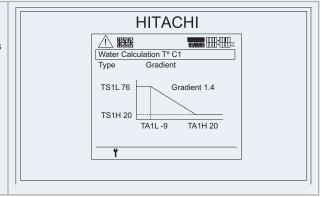

#### Fix

This calculation mode sets the circuit's temperature setting to a defined value, forcing the unit to maintain it.





Variables used in these views are displayed in the following table.

REF	Description	Default Value	Range	Steps	Units
	Water calculation T	ype			
WT1	WT1 Water calculation temperature C1		None / Points / Gradient / Fix	-	-
WT2	Water calculation temperature C2	None	None / Points / Gradient / Fix	-	-
	Heating OTC points Cor	ntrol C1			
TS1L	Set point at low ambient temperature C1	70	Tmax <sub>1</sub> ~Tmin <sub>1</sub> (*)	1	°C
TS1H	Set point at high ambient temperature C1	45	Tmax <sub>1</sub> ~Tmin <sub>1</sub> (*)	1	°C
TA1L	Low ambient temperature C1	-20	-20~6	1	°C
TA1H	High ambient temperature C1	20	7~25	1	°C
	Heating OTC points Cor	ntrol C2			
TS2L	Set point at low ambient temperature C2	44	Tmax <sub>2</sub> ~Tmin <sub>2</sub> (*)	1	°C
TS2H	Set point at high ambient temperature C2	20	Tmax <sub>2</sub> ~Tmin <sub>2</sub> (*)	1	°C
TA2L	Low ambient temperature C2	-20	-20~6	1	°C
TA2H	High ambient temperature C2	20	7~25	1	°C
	Heating OTC Gradient Co	ontrol C1			
OTC1	Gradient C1	1.4	0.2~2.2	0.1	-
	Heating OTC Gradient Co	ontrol C2			
OTC2	Gradient C2	0.6	0.2~2.2	0.1	-
	Heating Fixed Tempera	ture C1			
TF1	Fixed temperature C1	70	Tmax <sub>1</sub> ~Tmin <sub>1</sub> (*)	1	°C
	Heating Fixed Tempera	ture C2			
TF2	Fixed temperature C2	40	Tmax <sub>2</sub> ~Tmin <sub>2</sub> (*)	1	°C



(\*): Values ( $Tmax_{1/2} \sim Tmin_{1/2}$ ) are set by installer.

# C1 and C2 T° Range






Variables used in these views are displayed in the following table.

REF	Description	Default Value	Range	Steps	Units			
	C1 T° Range							
Tmax₁	Maximum supply temperature	80	35~80	1	°C			
Tmin₁	Minimum supply temperature	20	20~34	1	°C			
	C2 T° Range	9						
Tmax <sub>2</sub>	Maximum supply temperature	55	35~80	1	°C			
Tmin <sub>2</sub>	Minimum supply temperature	20	20~34	1	°C			

#### **◆ DHW configuration**

"DHW configuration" contains the following features, when "DHW status" is enabled:

- DHW status
- DHW mode
- · DHW temperature setpoint
- DHW temperature maximum setpoint
- DHW temperature differential (\*1)
- HP ON temperature differential
- DHW minimum time (min)
- DHW maximum time (min)
- Cycle DHW time (hours)
- EH waiting time (min)
- Space priority status \*\*
- Space priority temperature
- Anti legionella

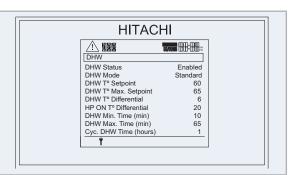



DHW tank has its own configurable variables, displayed in the following table.

REF	Description	Default Value	Range	Steps	Units
DHWs	DHW status	Disabled	Disabled / Enabled	-	-
DHWm	DHW mode	Standard	Standard / High demand	-	-
T <sub>DHWS</sub>	DHW T° Setpoint	60	30 ~ (T <sub>DHWmax</sub> ) (*2)	1	°C
T <sub>DHWmax</sub>	DHW To Maximum Setpoint	65	40~75	1	°C
T <sub>DHWON</sub>	DHW T° Differential (*1)	6	2~15	1	°C
T <sub>HPON</sub>	HP ON To Differential	20	10~40	1	°C
T <sub>DHWMIN</sub>	DHW Minimum Time (min)	10	0~15	1	Min
T <sub>DHWMX</sub>	DHW Maximum Time (min)	60	20~150	1	Min
C <sub>DHW</sub>	Cycle DHW Time (hours)	1	0~24	1	Hour
DHW <sub>EH</sub>	EH Waiting Time (min)	45	0~60	1	Min
SHPT <sub>s</sub>	Space Priority Status	Off	Off/On	-	-
SHPT	Space Priority To	-5	-20~0	1	°C
LEG	Anti Legionella	-	-	-	-



#### NOTE

(\*1): This parameter will be shown when "DHW mode" is set as "High demand".

(\*2): Value ( $T_{DHWmax}$  is set by installer).




## Anti legionella

This is a configuration view designed to set the water disinfection method.

"Anti legionella" contains the following features, when "Function status" is enabled:

- Function status
- Operation day
- Starting time
- · DHW temperature setpoint
- Duration (min)

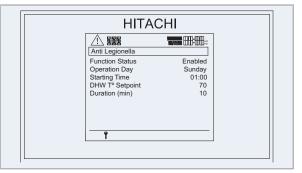

The user can only activate or de-activate the anti-legionella function (DesFun), while the Installer will have access to all configuration parameters.

REF	Description	Default Value	Range	Steps	Units
DesFun	Function status	Disabled	Disabled / Enabled	-	-
OpInt	Operation day	Sunday	Daily / Mon ~ Sun	-	Day
StTim	Starting time	01:00	(00:00~23:59)	00:01	Time
DHWTSP	DHW temperature setpoint	70	50~75	1	°C
KeepP	Duration (min)	10	10~60	1	Min

If "Function status" is enabled, it will start at selected time ("Starting time") and on the selected day ("Operation day") at the selected temperature ("DHW temperature setpoint") for the selected amount of time ("Duration").

In the comprehensive view, the text "ANTL" will appear in the tank area.




#### CAUTION

- Anti-legionella function is hidden by default. The Installer can choose to reveal it by the "Anti legionella activation" function in the "User privileges" display.
- Anti-legionella will set the water temperature to the setting value during the specified time. This temperature will be
  dangerous to the user and could burn the user. Installer is responsible for configuring it properly, advising the user, and
  enabling the function.

#### **Swimming pool**

"Swimming pool" contains the following features:

- · Swimming pool status
- Swimming pool setpoint temperature
- Swimming pool offset temperature

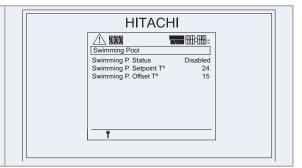

Swimming pool configuration parameters are displayed in the following table.

REF	Description	Default Value	Range	Steps	Units
SWP	Swimming pool status	Disabled	Disabled / Enabled	-	-
SWPs	Swimming pool setpoint temperature	24	24~33	1	°C
SWoff	Swimming pool offset temperature	15	10~31	1	°C



#### **♦** Unit timer


User can create up to 7 scenes with entire unit configuration available. These scenes can be assigned to different parts of the day creating a daily pattern, after that, user can assign to each day of the week the desired daily pattern.

Selecting configure value of the Unit timer menu will show the next window:



#### **Scenes creation**

"Scenes creation" is used to set the different unit configurations.

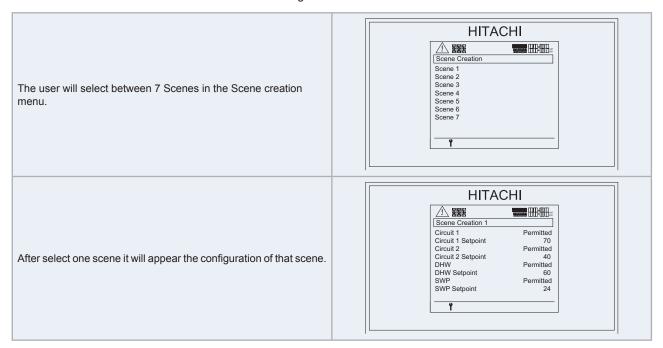

The editable things on that screen and for each scene will be:

Variable	Default value	Range	Steps	Units	When appears?
Circuit 1	Permitted	Prohibited / Permitted	-	-	Always
Circuit 1 setpoint	70	Tmax <sub>1</sub> ~Tmin <sub>1</sub> (*)	1	°C	If "Water Calculation To C1" is set as "Fix".
Circuit 2	Permitted	Prohibited / Permitted	-	-	If "Water Calculation T° C2" is enabled ("Points", "Gradient" or "Fix")
Circuit 2 setpoint	40	Tmax <sub>2</sub> ~Tmin <sub>2</sub> (*)	1	°C	If "Water Calculation To C2" is set as "Fix".
DHW	Permitted	Prohibited / Permitted	-	-	If "DHW Status" is enabled.
DHW setpoint	60	30~(T <sub>DHWmax</sub> ) (*)	1	°C	If "DHW Status" is enabled.
SWP	Permitted	Prohibited / Permitted	-	-	If "Swimming P. Status" is enabled.
SWP Setting T°	24	(SWPs)	1	°C	If "Swimming P. Status" is enabled.




#### NOTE

- (\*) Values (Tmax<sub>1/2</sub>~Tmin<sub>1/2</sub>) and (T<sub>DHWmax</sub>) are set by installer.
- Note that in case of changing the settings of "Water Calculation To" from "Fix" to "Gradient", and then back to "Fix" before the activation of timer events with modified temperature values, the temperature values of not yet activated timer events are reset to the default value of "Fix" mode.

#### **Daily patterns creation**

"Daily patterns creation" is used to set the scenes to different moments on a day.

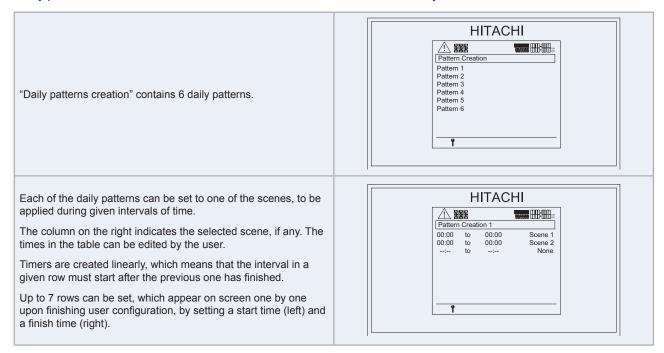




#### NOTE

- The time in the column on the right must be later than the time in the column on the left. In case that the time input by the user does not follow this rule, it is automatically corrected by the software, with at least one minute of difference between start time and finish time.
- Times which are not configured yet are shown as "--:--". The default start time for a new line is the finish time of the previous line.
- The ending time of one line cannot be later than the starting time of the next line. In case that the ending time input by the user when editing a line is later than the starting time of the following line, the starting line of the following line is modified accordingly.
- When attempting to store a line without inputting any time value, no data is stored and display returns to "--:--".
- In case that daily pattern is not configured for a given scene, the setting of a given time frame is "None" or when being out of the specified time, the unit is allowed to work with the configuration prior to the start of the timer.
- The value of time settings is comprised between 00:00 and 24:00. In case that one daily pattern ends at 24:00 and the next one starts at 00:00, cycle time between operations is not restarted, provided that the item is allowed on both scenes.

#### **Daily patterns assignation**

"Daily patterns assignation" is used to set different daily patterns to each day of the week.

On the "Daily patterns assignation", the daily pattern can be configured. It will be executed each day, or disabled if there is no pattern applied on that day.

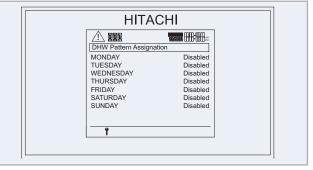

#### **Reset timers assignation**

"Reset timers assignation" is used for disable the timer for all days.


Confirmation is requested upon selection of "Reset timers assignation". Pressing yes, all days on the timer assignation will be set to the disabled value.



## lacktriangle Complementary heating lacktriangle

"Complementary heating" contains the following features:

- Heating source
- Electrical heater configuration (\*1)
- Boiler configuration (\*2)
- Solar configuration

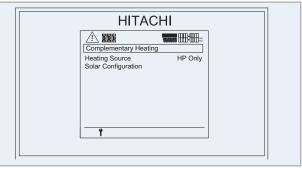



#### NOTE

- (\*1): This parameter will be shown when "Heating source" is set as "HP + Heater".
- (\*2): This parameter will be shown when "Heating source" is set as "HP + Boiler".




It will display the same parameters, with the addition of the those listed below.

REF	Description	Default Value	Range	Steps	Units					
HS	Heating source	HP only	HP only / HP+Heater / HP+Boiler	-	-					
	Electrical Heater Configuration									
MOT	Bivalent point for EH	0	-20~20	1	°C					
ksco	Supply setpoint offset	4	0 ~10	1	K					
PB	Proportional band (°C/100%)	6.0	0~20	0.2	°C/100%					
IRF	Reset factor (%/°Cmin)	2.5	0~20	0.1	%/°C Min					
ISWT	Inter-Stage waiting Time (min)	5	0~10	1	Min					
WTEH	Waiting time for EH (min)	30	1~90	1	Min					
	Boiler	Configuration								
BB	Bivalent point for boiler	-5	-20~20	1	°C					
Bon	Minimum ON time (min)	2	1~30	1	Min					
Boff	Minimum OFF Time (min)	5	1~30	1	Min					
WT	Waiting time (min)	30	1~90	1	Min					
Kscob	Boiler offset temperature	4	0~10	1	°C					
	Solar	Configuration								
Ssta	Status	Disabled	Disabled / Enabled	-	-					
T <sub>DHWMSOL</sub>	DHW maximum time (min)	60	30~240	1	Min					

# ♦ Mixing valves



- Proportional band
- Integral reset factor
- · Running time factor

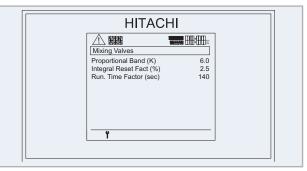

The following table lists the settings that may be edited to control circuit 2's mixing valve.


REF	Description	Default Value	Range	Steps	Units
PBMV	Proportional band (K)	6.0	0~20	0.2	K
IRFMV	Integral reset factor (%)	2.5	0.0~20	0.1	%
RTMV	Running time factor (sec)	140	10~500	10	Sec



# ♦ Water pump

"Water pump" contains the following features:

- · Minimum time OFF
- Minimum time ON
- Overrun time
- Overtemperature offset C2

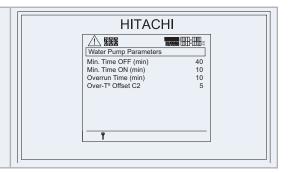


The following table lists the variables that may be configured to manage the water pump.

REF	Description	Default Value	Range	Steps	Units
PMinOff	Minimum time OFF (min)	40	0~120	10	Min
PMinOn	Minimum time ON (min)	10	0~120	10	Min
POT1	Overrun time (min)	10	0~120	5	Min
ОТО	Overtemperature offset C2	5	1~10	1	°C

#### Optional functions

"Optional functions" contains the following features:

- Summer Switch-OFF
- Seizure protection Y
- Tariff function
- Hydraulic separator status

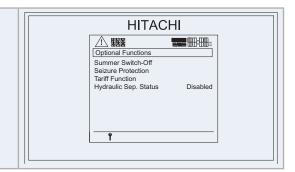

This menu will display optional functions to the user.

REF	Description	Default Value	Range	Steps	Units
SumSwOff	Summer switch-off	-	-	-	-
SP	Seizure protection	-	-	-	-
Tf	Tariff function	-	-	-	-
hsb	Hydraulic separator status	Disabled	Disabled / Enabled	-	-

#### **Summer Switch-Off**

Summer switch-off function can be configured to auto mode.

REF	Description	Default Value	Range	Steps	Units
AutoST	Switch-off status	Disabled	Disabled / Enabled	-	-
AutoT	Switch-off temperature	22	10~25	1	°C
AutoDiff	Switch on differential temperature	0.5	0~3	0.5	°C



## Seizure protection

"Seizure protection" includes the following variables.

REF	Description	Default Value	Range	Steps	Units
SeizPr	Seizure protection status	Off	Off / On	-	-
OpInt	Operation day	Monday	Monday ~ Sunday	-	Day
StTim	Start time	01:00	(00:00~23:59)	00:01	Time

These installer parameters control the optional seizure function. They are used to enable seizure protection and set its activation time. When this happens, follow these instructions:

- · Make sure mixing valves are fully opened and then fully closed (time depends on runtime parameter).
- Diverting valves are switched on for 1 minute.
- · Pumps are switched on for 1 minute.

#### **Tariff function**

"Tariff function" contains the following features:

REF	Description	Default Value	Range	Steps	Units
TarSt	Tariff function status	Disabled	Disabled / Enabled	-	-
TarAct	Tariff action	HP Block Nc	HP Block Nc / HP Block No / DHW Block Nc / DHW Block No	-	-
B-TARIFF	Boiler tariff	Disabled	Disabled / Enabled	-	-



#### NOTE

"Boiler tariff" is only used when "Tariff action" selected is "HP blocked Nc/No".

## ♦ Test run


When outdoor test run is selected, the remote control will ask for the duration of the test, and the working mode will be the same as that explained in Commissioning chapter, only with the Installer mode icon on the notifications bar.

## Screed drying


This function is used exclusively for the process of drying screed that has been newly applied to floor heating system.

When screed drying function is activated, the water set-points follows a predetermined schedule:


- 1 Water set-point is kept constant at 25°C for 3 days
- 2 Water set-point can be set between 20 to 55 °C for the installer. This process takes 4 days.

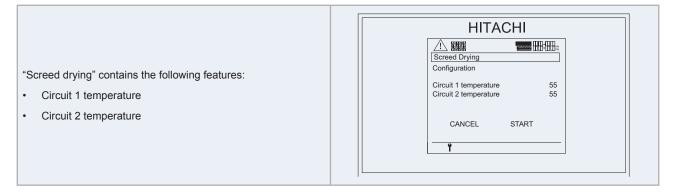

Once the screed drying process has been started, the screen on the right is displayed. It shows the remaining time and provides the option to cancel the process.

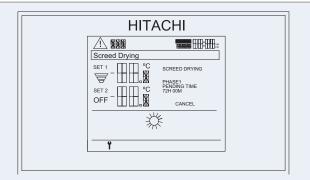

When the process is completed, the following screen will appear.

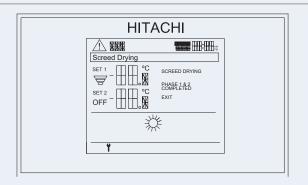





#### NOTE

Please, refer to the Optional functions chapter for detailed information.

## ♦ Restore default settings

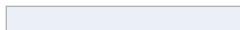

Confirmation is requested upon selection of "Restore default settings".

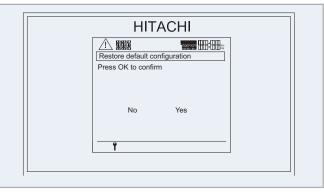

The "No" option is selected by default. Pressing "Yes" will reset the factory settings.

6




#### 6.5.2 Controller configuration

"Control configuration" contains different configuration options for the control. Those options are explained in the following items.

"Controller configuration" contains the following features:

- · Time and date
- · Language selection
- · LCD energy saving
- Screen contrast
- · About controller

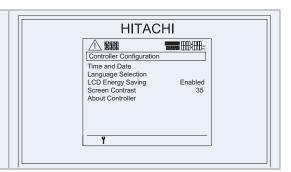


#### 6.5.2.1 Time and date

"Time and date" contains different features for the time and date configuration. "Configuration" parameter can be switched between:

- Complete: display will show date and time.
- · Time: display will only show the time.
- · Date: display will only show the date aligned to the right.
- None: hide time and date.

Time format options can be switched between:

- 24 Hours
- 12 Hours

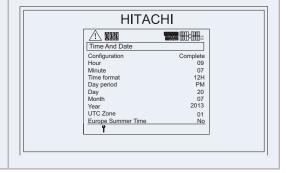



#### NOTE

Day period option will be enabled only when Time format is set to 12 Hours.



#### CAUTION

- This configuration only affects the display. Time and date will continue running.
- Be aware that functions that depend on time and date will affected even when the format displayed is "None".

UTC Zone can be set between 00~11 in function of the country. Some examples are described in the table below:

Country	Time zone	Setting value
United Kingdom Portugal	GMT	00
Spain Germany France Italy Denmark Netherlands Sweden Slovenia Czech	GMT +01:00	01
Greece Finland	GMT +02:00	02



#### 6.5.2.2 Language selection

User can set different languages in order to better understand the menu. They are selectable from the following view.

There are 5 available languages:

English (EN)

French (FR)

Italian (IT)

Spanish (ES)

German (DE)

Default language is English.

#### 6.5.2.3 LCD energy saving

LCD energy saving turns off the LCD backlight in order to reduce energy consumption. It is activated when:

- User does not touch any button for 2 minutes.
- User presses the run/stop button for 3 seconds.

Press any button to exit this mode.

#### 6.5.2.4 Screen contrast

User may specify screen contrast. This is modified in the same manner as a normal variable. Changing the variable will also change the contrast. Pressing left and right arrows for 10 seconds will set the contrast to the default value.

#### 6.5.2.5 About controller

About controller gives information about PCB and Controller firmware and the version number for the YUTAKI S80.

"About controller" contains the following features:

PCB1 firmware

PCB3 firmware

Controller firmware

Controller version

#### 6.5.3 Return to global view (Logout when Installer mode)

Pressing the OK button in this menu, it is possible to go back to the global view.

In the case of Installer mode, by selecting the Logout option, Installer mode is finished and the screen returns to the global view.



# 7. Optional functions

## Index

7.1.	Indoor	unit	218
	7.1.1.	Optional functions from LCD controller	219
	7.1.2.	Optional functions from dip-switch setting	223
	7.1.3.	Indoor external output signals	225
7.2.	Outdo	or unit	226
	7.2.1.	Available ports	226
	7.2.2.	Configuration	227
	723	Description of ontional output signals	229

#### 7.1 Indoor unit

YUTAKI S80 unit has different optional functions designed to make easier the control of the system. These functions can be selected from the LCD controller or by dip-switch setting (depending on the function).

These function are the following:

Access	Optional function
	Floor screed drying function (Circuits 1 & 2)
	Automatic summer switch-OFF
From LCD controller	Pump and motorized valve seizure protection
From LCD controller	DHW anti-Legionella protection
	Electrical tariff input
	Hydraulic separator combination
	One step heater for three phase imbalance option
	2nd outdoor temperature sensor accessory
Dy din awitah aatting	Unit and installation pipes antifreeze protection
By dip-switch setting	Electrical heater or boiler emergency mode
	Heater forced OFF
	Standard / Economic water pump operation
Others	Four external output signals




The specific information about these points is detailed throughout this chapter.

#### 7.1.1 Optional functions from LCD controller

#### ♦ Floor screed drying function (circuits 1 & 2)

YUTAKI S80 has a special optional function used exclusively for the process of drying screed that has been newly applied to floor heating system. This process is based on EN1264 part 4.

The water temperature set-point follows a predetermined schedule upon activation of the floor screed drying function.

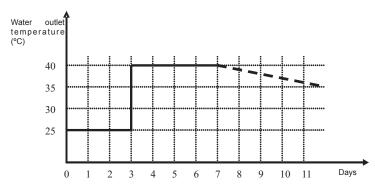

- 1 Water set-point is kept constant at 25°C (\*) for 3 days.
- 2 Water set-point is set to the Heating maximum supply temperature (but always limited to ≤ 55°C) for 4 days.
- 3 After 7 days started the floor screed drying, the water outlet temperature will return at the assigned water temperature setting, depending on the water rule selected.

Upon completion of the above sequence, the controller returns to normal operation.

All the other heating modes are overdriven except hot sanitary water. The room thermostat is disabled during this function.

Description	Default value	Range
Screed drying function circuit 1	OFF	OFF / ON
Screed drying function circuit 2	OFF	OFF / ON



#### NOTE

- Tariff input has no effect.
- Screed drying function process is shown in LCD.
- (\*) Unit heating working range has priority instead of 25°C.

#### **♦** Automatic summer switch-off

At high outdoor temperatures, it is not necessary to keep the heating operation. With this function, when the daily average outdoor temperature of the previous day rises above the Summer switch-OFF activation temperature, the YUTAKI S80 system deactivates the space heating (switch-OFF).

Variables used:

Description	Default value	Range	Steps	Units
Auto Summer Switch-OFF	Disabled	Disabled/Enabled	-	-
Summer Switch-Off temperature	22	10~25	1	°C
Switching ON differential	0.5	0~3	0.5	°C

The average of last 24 hours is calculated. Temperature is not measured for the first 24 hours. After that, the average with the new sample is adjusted and the conditions are checked every 5 minutes.



#### NOTE

• When the space heating is deactivated due to the checking conditions, it is possible to activate it using the ON/OFF button. In this case, the function is restarted and the average is reset.

Checking conditions	Action
Average > Summer Switch-OFF temperature	HEATING OFF
Average < (Summer Switch-OFF temperature – Switching ON differential)	HEATING ON

- · Average is an internal variable of the LCD controller.
- · A switching ON differential is applied.
- · Function must remember status (ON or OFF). When second condition is activated, status is restored.
- When changing Summer Switch OFF temperature or switching ON differential or Run/Stop any circuit (1 or 2), the average calculation restarts.

If circuits are forced OFF, a notification icon appears on the LCD.

#### **♦** Pump and motorized valve seizure protection

The pump/valve seizure protection function prevents sticking of components due to long periods of inactivity, by running the components during a short period every week.

Every week the components are run for a short period.

Mixing valves are fully opened and then fully closed (time depends on runtime parameter).

- Diverting valves are switched-ON for 1 minute.
- · Pumps are switched-ON for 1 minute

REF	Description	Default Value	Range	Steps	Units
SeizPr	Seizure protection status	Off	Off / On	-	-
OpInt	Operation day	Mon	Mon~Sun	-	Day
StTim	Start Time	01:00	(00:00~23:59)	-	Time

#### **♦ DHW** anti-legionella protection function

A specific setting is available to protect the DHW system against Legionella, which raises up the DHW temperature over the normal DHW tank temperature setting (using the electric heater of the DHW tank and/or the heat pump) on a periodic basis.


In order to help protect against Legionella in the domestic hot water system, the DHW set-point can be raised to a higher than normal temperature.



#### NOTE

According to national regulation, the installer must configure this disinfection function field setting with the following configuration parameters:

- Operation interval: day(s) of the week at which the domestic water should be heated.
- Status: defines whether the disinfection function is turned ON (1) or OFF (0).
- Start time: time of the day at which the domestic water should be heated.
- · Set-point: high water temperature to be reached.
- Interval: time period defining how long the set-point temperature should be maintained.

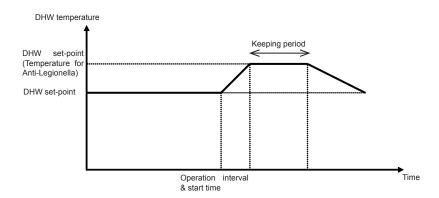

Description	Default value	Range	Steps	Units
Disinfection function status	Disabled	Disabled / Enabled	-	-
Operation interval	Sunday	Daily / Mon ~Sun	-	day
Start time	01:00	(00:00~23:59)	00:01	Time
DHW set-point (Temperature for Anti-Legionella)	70	50~75	1	°C
Keeping period	10	10~60	1	min



#### NOTE


- When anti-legionella function is detected, it is shown in LCD (by ANTL sentence).
- Anti-legionella function has priority over Tariff input and DHW timer.
- When DHW operation is OFF, Anti-legionella function is not enabled.
- This function can be carried out by using the heat pump and/or the DHW heater.
- The boiler cannot be used for Anti-Legionella function, in order to avoid a lack of capacity in space heating operation.



#### **◆** Tariff input (electrical tariff input)

This function allows an external tariff switch device to switch OFF the heat pump or the DHW during peak electricity demand period. Depending on the setting, the heat pump or DHW become blocked when signal is open/closed.

When the system is working in combination with boiler, the boiler is switched ON to provide the necessary heating.

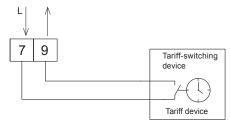

Description	Default Value	Range
Tariff function	Disabled	Disabled / Enabled
		00:Heat pump blocked when signal is closed.
Tariff a skip o	00	01:Heat pump blocked when signal is open.
Tariff action		02:DHW blocked when signal is closed.
		03:DHW blocked when signal is open.
Use boiler instead of heat pump when TARIFF Mode is ON	Disabled	Disabled / Enabled



#### NOTE

- Use boiler o DHW Heater instead heat pump when Tariff Mode ON has only effect when tariff action selected is heat pump blocked (NC or NO) (00 or 01).
- Use boiler instead of heat pump when TARIFF Mode is ON" only operates when "Tariff Action" is 00 or 01. Blocking DHW has priority against this variable.
- · When tariff action is ON, it is shown in LCD and seven segments.

#### **♦** Hydraulic separator combination

When the water pump of the indoor unit is not sized for heating installation (small water pump) or when the system is configured to alternate operation with a boiler, an hydraulic separator or buffer tank must be used to ensure proper hydraulic balancing. In this case, the hydraulic separator option can be enabled at the LCD user interface.

Additional water pump (WP3) and water sensor (Two3) are necessary for boiler combination control.

User variables:

Description	Default value	Range
Hydraulic separator	Disabled	Disabled / Enabled



If universal sensor enabled and Complementary heater is set to Heat Pump + Boiler or Heat Pump + Heater or hydraulic separator enabled, THMwo3 should be used instead of Two.


#### 7.1.2 Optional functions from dip-switch setting

#### ◆ One step heater for 3-phase imbalance option

This option can be used to switch all 3 steps of the electric heater at the same time, by means of a dip-switch setting (DSW3-3 ON), in order to prevent 3-phase imbalance by the electric heater steps.



This function only applies when power source of the indoor unit is 3-phase (3N~ 400V 50Hz).

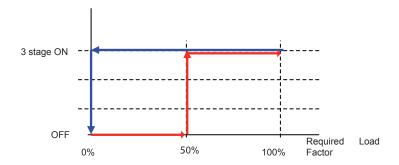

#### **♦** 2nd outdoor temperature sensor accessory

A 2nd outdoor ambient temperature sensor is available as an accessory, in case that the built-in ambient temperature sensor of the outdoor unit can not provide a reliable temperature measurement to the system because of restraints of the installation location.

The preferred sensor for each circuit can be selected by means of DSW setting:

Outdoor unit sensor for circuits 1 and 2.	DSW5-1 OFF DSW5-2 OFF
Outdoor unit sensor for circuit 1; Auxiliary sensor for circuit 2.	DSW5-1 OFF DSW5-2 ON
Auxiliary sensor for circuit 1; Outdoor unit sensor for circuit 2.	DSW5-1 ON DSW5-2 OFF
Auxiliary sensor instead of outdoor unit sensor for both circuits.	DSW5-1 ON DSW5-2 ON



- · Switch ON the DSW4-2 to enable this additional setting.
- The average is not calculated after 30 seconds of the switch has been turned ON.

#### ◆ Unit and installation pipes anti-freeze protection

In winter (heating operation), when the outdoor temperature is very low and the unit is in Thermo OFF operation (and water pump OFF), the water outlet temperature can become so low that the pipes become frozen.

In order to avoid this problem, this function can be selected by dip-switch setting (DSW4-6 ON) in order to start the pump operation when the water outlet temperature drops below 5°C and until it raises above 7°C.

7



#### **♦** Electrical heater or boiler emergency mode

In the event of outdoor unit failure, the required heating can be provided by the electric heater or by the boiler. This configuration can be activated by indoor unit dip-switch setting:

- DSW4-4: ON -> Heater/Boiler Emergency enabled
- DSW4-4: OFF -> Heater/Boiler Emergency disabled

#### **Conditions for activation**

- · Space heating is enabled.
- · Electric Heater or Boiler is allowed by user selection.
- Water temperature (Two) < Water Temperature target (Ttwo).</li>

#### **Conditions for disabling**

When Emergency Heater or Boiler is enabled, water calculation is based on the difference between Water outlet3 (Two3) and water target (Ttwo)

Conditions for disabling. When any of the following conditions is fulfilled:

- a. Measured outlet temperature value targeted
- **b.** Outlet water temp set at maximum water range temp by installer or higher.
- c. Thermo OFF by Room Thermostat
- d. Recovery of outdoor unit alarm
- e. DSW4-4:OFF
- f. Indoor unit alarm



- Water pump1 (primary) will be activated with electric heater.
- Water pump3 will be activated with boiler.
- If Heater emergency mode is activated, the DHW heater is also activated for emergency mode
- When emergency operation, the signal from outdoor units has no learned, the ambient temperature is considered at 10°C (fixed) and water calculation (in case of Point or gradient) has calculated at 10°C Outdoor temperature. It's recommended to change to fixed water calculation when emergency mode.
- In case of auxiliary outdoor ambient sensor enabled, the water calculation is based in this temperature.

#### **♦** Heater forced OFF

This function forces a permanent OFF of the heater when selecting an installation configuration without the electric heater of the unit (Mono-valent system or Alternating bi-valent system). In this case, all the uses of the electric heater are forbidden and the settings by LCD and the heater protections have no effect.

To activated this optional function, it is necessary a dip switch setting (DSW4-7 ON).

#### ◆ Standard / Economic water pump operation

For the water pump control, two different water pump modes are available: Standard or Economic mode.

The pump is set to "Standard mode" by default. In this mode, the pump is always ON, except when space heating/cooling OFF is selected.

It is possible to set the pump to "Economic Mode" by dip-switch setting, so the water pump can be stopped when it is not required heat demand by Thermostat (Room ambient temperature is reached) or when the system is stopped.

To activate Economic mode, it is necessary a dip switch setting (DSW4-5 ON).

#### 7.1.3 Indoor external output signals

The system has four output optional signals. Signals are programmed on the indoor unit's PCB using the CN7b. The output connectors have four ports (CN7b) to configure output options out of the four options that the system has.

#### **♦** Available ports

The system has the following input and output ports.

Indicat	ion	Port Setting on the Indoor Unit's PCB	Remarks	Output
	o1	1-3 on CN7b	1 2 3 4 5 6	DC 12V
Output	o2	1-4 on CN7b	1 2 3 4 5 6	DC 12V
Ont	03	1-5 on CN7b	1 2 3 4 5 6	DC 12V
	04	1-6 on CN7b	1 2 3 4 5 6	DC 12V



In order to make easy the electrical connection works, HITACHI offers as accessory a relay board for the additional output signals (Auxiliary output signal box ATW-AOS-01).

#### **♦** Configuration

Unit switches to this mode when DSW4-8 is turned ON during unit stoppage.

The unit has the following described optional signals:

Code	Name	Description	Port
o l	Operation signal	This signal allows control of the machine status at all times; it is very useful for centralized applications.  The signal will be enabled when Thermo ON operation	CN7b / 1-3
o2	Alarm signal	This signal allows activation of mechanisms that protect from and warn of possible failures in the unit.  The signal will be enabled when the unit is in alarm (indoor or outdoor)	CN7b / 1-4
Eα	Not available	-	CN7b / 1-5
۲۵	Thermo-OFF signal during circuit 1	Signal is enabled when circuit 1 is operating in Demand-OFF and circuit 2 in Thermo ON.	CN7b / 1-6

Component		Manufacturer or specifications	Remarks
Auxiliary relay (X3)		OMRON mini power relay model: MY1F or equivalent	Voltage between relay terminals 12 Vdc - 75 mA
Wire (control)	Voltage 12V DC	0.5 mm²	
Wire (power)	Voltage 230V	2.0 mm²	

7

#### 7.2 Outdoor unit

The system has the following output signals which are programmed in the PCB of the outdoor unit using connectors.

The system has the following optional functions which are programmed in the PCB of the outdoor unit.


#### 7.2.1 Available ports

The system has the following input and output ports.

Content		Setting of the port in the PCB of the indoor unit	Remarks	Outlet
Outpute	ا م	1-2 of CN7	1 0 X	DC 12V
Outputs	02	1-3 of CN7	1 0 X 2 0 3 0	DC 12V

#### **♦** Connection

The system has the following connections.

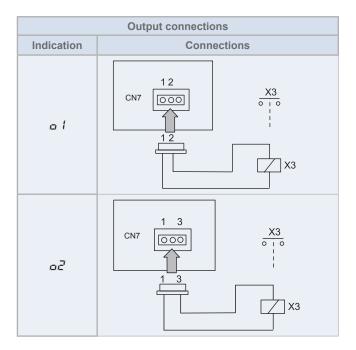

#### Specification of the components for a correct installation

Component		Manufacturer or specifications	Remarks		
Auxiliary relay (X3)		Auxiliary relay (X3)  OMRON mini power relay model: MY1F or equivalent		Voltage between relay terminals 12 Vdc - 75 mA	
3P connector cable		Optional part PCC-1A (capable of connecting the JST XHP –3 connector)	Five wires with connectors as one set		
Wire (control)	Voltage 12V DC	0.5 mm²			
Wire (power) Voltage 230V		2.0 mm²			



#### NOTE

- The connection of the input signal is only an example.
- Keep the CN1 and CN2 wires as short as possible.
- Do not run the wires along 230 V/400 V CA power cables Separately install them at a distance of more than 30cm. (The cables may intersect.)
- If you install the wires along a power supply wire, insert the wires in a metal conduit tube and ground one end of the tube.
- The maximum wiring length is 70 m. If you use this function, it is recommended that you use safety devices such as an electrical leakage breaker or a smoke detector.

#### 7.2.2 Configuration

#### **♦** Available optional signals

HRNME-AF units have the following signals that are described in the following table. These signals are set up through the PCB of the outdoor unit.

#### · Output signals

Ind.	Output signal	Application	
П	No setting application	No setting	-
<i>a</i> 1	Operation signal	This signal allows to pick up the machine's operation signal. This is very useful to start up additional systems such as humidifiers, fans and other additional air-conditioning systems.	CN7
02	Alarm signal	This signal picks up the machine's alarm. This is very useful to warn that an alarm has been tripped.	CN7
03	Compressor ON signal	This single allows to pick up the compressor's operation signal. It is very useful for checking signals during remote-control operation and for the interlock of the outdoor unit.	CN7
ΩЧ	Defrost operation signal	This signal allows to pick up the defrosting of the unit. This is very useful to know how the indoor unit is operating if there is an abnormal situation.	CN7



#### NOTE

Do not set same function (01~04) to multiple input port.


7

#### **Programming**

The optional signals are programmed through the PCB of the outdoor unit.

#### Setting of the optional signals

The optional signals of the outdoor unit are set up from the PCB of the outdoor unit and push switches PSW1, PSW2 and PSW3.

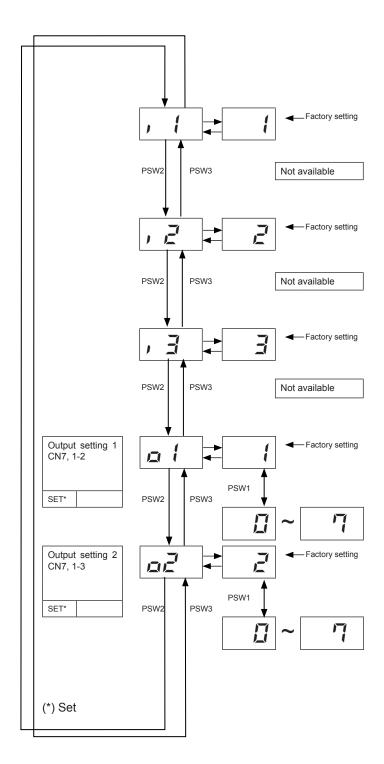

#### 7.2.3 Description of optional output signals

#### ◆ Operation signal ( ¹)

This optional signal is used to pick up the operation signal. It can be used to turn on or off complementary units of the air-conditioning system, such as fans, humidifiers, etc.

Connect the cabling and use the materials as shown in section Available ports.

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

#### ◆ Alarm signal (∠)

This optional signal is used to pick up the activation of safety devices.

Connect the cabling and use the materials as shown in section Available ports.

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

#### ◆ Operation signal of the compressor (∃)

This optional signal is used to pick up the signal when the compressor is ON. It can be used to check how the compressor is running at all times. It is very useful for locking the compressor when the fans are locked.

Connect the cabling and use the materials as shown in section Available ports.

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.

#### ◆ Defrosting signal (∀)

This optional signal is used to pick up when defrosting turns on. It is very useful to check if the indoor unit is in thermo-OFF.

Connect the cabling and use the materials as shown in section Available ports.

Note that the contact of auxiliary relay X3 is closed when an operation signal is issued.



# 8. Commissioning

## Index

8.1.	Prelim	inary check	232	
	8.1.1.	Checking the unit	232	
	8.1.2.	Electrical checking	232	
	8.1.3.	Hydraulic circuit checking (space heating circuit and DHWT)	232	
	8.1.4.	Checking the refrigerant circuit	233	
8.2.	Comm	issioning procedure	233	
8.3.	3. Indoor unit test run			
Ω /	Outdoor unit tost run			



When installation is complete, perform commissioning according to the following procedure and hand over the system to the customer. Perform the commissioning of the units methodically, and check that the electrical wiring and the piping are correctly connected.

Indoor and outdoor unit must be configured by the installer to get the prefect setting and the unit working.

#### 8.1 Preliminary check

#### 8.1.1 Checking the unit

- Check external appearance of the unit to look for any damage due to transportation or installation.
- Does installation space carry out Hitachi installations (see Service space in outdoor and indoor manual).
- Check that the units have been correctly installed and that the indoor unit four mounting foot are correctly adjusted.

#### 8.1.2 Electrical checking



#### CAUTION

Do not operate the system until all the check points have been cleared:

- Power on once water leak tests have succeed.
- Check to ensure that the electrical resistance is more than  $1M\Omega$ , by measuring the resistance between ground and electrical parts terminal. If not, do not operate the system until the electrical leakage is found and repaired. Do not impress the voltage on the terminals for transmission (1 and 2, 3 and 4 and sensors).
- Check to ensure that the switch on the main power source has been ON for more than 12 hours, in order to give the oil heater time to warm the compressor.
- In three-phase unit check phase sequence connection on terminal board.
- Check the power supply voltage (±10% of the rated voltage).
- Check that field-supplied electrical components (main switches, breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical specifications given in the unit's Technical Catalogue, and check that the components comply with national and local standards.
- Do not touch any electrical components for more than three minutes after turning OFF the main switch
- Check the dip switch settings of the indoor unit and the outdoor unit are connected as shown in the corresponding chapter.
- Check to ensure the electrical wiring of the indoor unit and the outdoor unit are connected as shown in the corresponding chapter.
- Check to ensure the external wiring is correctly fixed to avoid problems with vibrations, noises and cut out wires with the plates.AR

#### 8.1.3 Hydraulic circuit checking (space heating circuit and DHWT)

- Check that the circuit has been properly flushed and filled with water and that the installation has been drained: the pressure of the space heating and heating coil circuits must be 1.8 bar (at least 1.5 bar).
- Remove the air inside the water pump as explained in section Water filling of the Refrigerant and water piping chapter in this document.
- Check that the water tank heating coil is completely filled.
- Check for any leakage in water cycle.
- Make sure the system's internal water volume is correct.
- Make sure the DHW tank internal water volume is correct.
- Check that the hydraulic circuit stop valves are open.



# CAUTION

- Operating the system with closed valves will damage the unit.
- Check to see that air purge valve is open and that the hydraulic circuit is air purged. The installer is responsible of completely air purging the installation.
- Check that the water pump of the space heating and heating coil circuits work within the pump operating range and that the water flow is over the pump's minimum. If the water flow is under 12 liters/minute (with flow switch tolerance), alarm will be displayed on the unit.

- Remember that water connection must be accordance with local regulations.
- Water quality must comply with EU directive 98/83 EC.

#### 8.1.4 Checking the refrigerant circuit

- Check to ensure that the stop valves on the outdoor unit gas and liquid lines are fully open.
- Check that the size of the piping and the refrigerant charge comply with the applicable recommendations.
- Check the inside of the unit for refrigerant leakage. If there is a refrigerant leak, call your dealer.
- Check outdoor unit commissioning procedure manual.

#### 8.2 Commissioning procedure

This procedure is valid regardless of what options are on the module.

- When installation is complete and all necessary settings (Dip-switches in PCBs and User interface configuration) have been carried out, close the E.BOX and place the cabinet as shown in the manual.
- Select the heating operation mode in the LCD controller.
- Make a test run as shown in item Indoor unit test run.
- After rest run is completed, start the entire unit or the selected circuit by pressing the Run/Stop button.

#### ♦ Initial start-up at low outdoor ambient temperatures

During commissioning and when water temperature is very low, it is important for the water to be heated gradually. The screed drying optional function can be used for starting at low water temperature conditions:

This optional function used exclusively for the process of drying screed that has been newly applied to floor heating system. This process is based on EN1264 part 4.

The water temperature set-point follows a predetermined schedule upon activation of the floor screed drying function:

- 1 Water set-point is kept constant at 25°C (\*) for 3 days.
- 2 Water set-point is set to the Heating maximum supply temperature (but always limited to ≤ 55°C) for 4 days.
- 3 After 7 days started the floor screed drying, the water outlet temperature will return at the assigned water temperature setting, depending on the water rule selected.



#### CAUTION


- Heating at lower water temperatures (approximately 10°C to 15°C) and lower outdoor ambient temperatures (<10°C) can be damaging to the heat pump when defrosting.
- It is recommended start the unit (first power ON) with heater forced OFF (DSW4-7: ON) and compressor forced OFF in order to circulate water by water pump and remove possible air into the unit.



#### 8.3 Indoor unit test run


This option is not available on the menu. User may execute test run function by pressing the OK and Down arrow keys for 3 seconds. After that combination, the remote control will ask about the duration of this test.

Note that test run mode will be the same than unit mode selected on the global view.

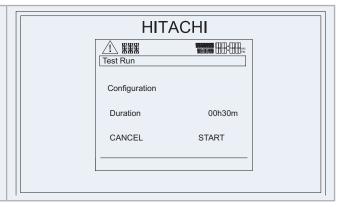


The duration will be between 00:30 and 12:00 hours. After pressing START button, Outdoor unit will begin the test run.

During the execution of this test, the following screen will be displayed.

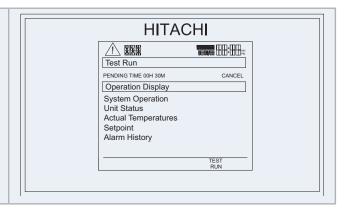

When test run is set on the outdoor unit, the test run icon will appear on the notifications bar. When test run finishes the following screen will appear.

Pressing the Exit key will take the user to the comprehensive view.

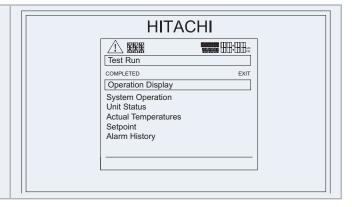



#### NOTE


- Disable Heater and Boiler operation for all the test run operation.
- Set operation to main zone only. Zone 1 has preference.
- Set Setting temperature for operation to Tmax to avoid unwanted Thermo OFF.
- If Two > Tmax, test run must be stopped and finish operation. When temperature Two < Tmax, test run will start until finishing time.
- If Pump is stopped at any moment during Test Run, Test Run must be ended. Pump order will always be ON due to Heat Pump operation.
- · Stop by protection has priority over Test Run.



#### 8.4 Outdoor unit test run

The procedure of test run from outdoor unit side is indicated below. Setting of this DIP switch is available with the power source ON.

Setting of Dip Switch (Before Shipment)

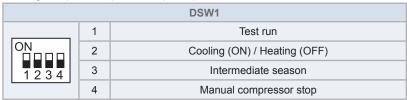



#### CAUTION

- Do not touch any other electrical components while you are setting the switches on the PCB.
- Do not attach or detach the service access panel when the power source for the outdoor unit is ON and the outdoor unit is operating.
- Set all the DIP switches of DSW1 to OFF after completing the test run.

	Dip switch seting	Operation	Remarks
Test run	1. Setting operation mode  (a) Cooling: Set DSW1-1 ON  (b) Heating SET DSW1-1 and 2 ON  (c) Cooling intermediate season: Set DSW1-1 and 3 ON  (d) Heating intermediate season: Set DSW1-1, 2 and 3 ON  ON  1 2 3 4	<ul> <li>The indoor unit automatically starts to operate when the test run of the outdoor unit is set.</li> <li>You can perform the ON/OFF operation from the remote control switch or the DSW1-1 of the outdoor unit.</li> <li>Continuous operation during 2 hours is performed without the Thermo-OFF condition.</li> </ul>	<ul> <li>Make sure that the indoor units start to operate in accord with the test run of the outdoor unit.</li> <li>If you start the test run from the outdoor unit and you stop the test run from the remote control switch, the test run function of the remote control switch is cancelled. However, the test run function of the outdoor unit is not cancelled.</li> <li>If the more than one indoor unit is connected with one remote control switch, all the units start the test run at the same time. Therefore, turn OFF the power source so that the indoor units do not perform the test run. If this is the case, the TEST RUN indication of the remote control switch may flicker. This is not abnormal.</li> <li>The setting of DSW1 is not required for the test run from the remote control switch.</li> </ul>
	2. Forced stoppage of compressor:	When DSW1-4 is ON dur-	
Manual OFF of compres- sor	Set DSW1-4 ON  ON  1 2 3 4	<ul> <li>ing the compressor operation, the compressor stops operating immediately and the indoor unit is under the Thermo-OFF condition.</li> <li>When DSW1-4 is OFF, the compressor starts to operate after the cancellation of the 3 minutes guard.</li> </ul>	Do not turn ON and OFF the compressor frequently

# 9. Electrical checks of the main parts

# Index

9.1.	Inverter		238
	9.1.1.	Specifications of inverter	238
	9.1.2.	Inverter time chart	240
	9.1.3.	Protective function	241
	9.1.4.	Overload control	242
9.2.	Therm	istor	243
	9.2.1.	Summary of thermistors	243
	9.2.2.	Diagrams of thermistors	244
9.3.	Electro	onic expansion valve	247
	9.3.1.	Electronic expansion valve for the outdoor unit and the 2nd cycle from indoor unit	247
	9.3.2.	Electronic expansion valve for the 1s cycle from indoor unit	248
9.4.	High pressure protection device		249
	9.4.1.	Outdoor unit	249
	9.4.2.	2nd cycle indoor unit	250
9.5.	Noise	filter (NF)	251
	9.5.1.	Noise filter for 1~	251
	9.5.2.	Noise filter for 3N~	252
9.6.	Capac	itor (CB1, CB2)	253
9.7.	Reactor (DCL)		254
	9.7.1.	Reactor (DCL) for 1~	254
	9.7.2.	Reactor (DCL) for 3N~	254
9.8.	R410A	(outdoor unit) and R134a (indoor unit) scroll compressor	255




# 9.1 Inverter

## 9.1.1 Specifications of inverter

Aplicable model	RAS-(4-6)HVRNME-AF / RWH-(4-6)FSVNFE	RAS-(4-6)HRNME-AF / RWH-(4-6)FSNFE
Aplicable power source	1~ 230V+10% 50Hz	3N~ 400V <u>+</u> 10% 50Hz
Input current	15-30A	6-25A
Control method	Vector	control
Range output frequency	20-1	15HZ
Accuracy of frequency	0,01 Hz at applicat	ole frequency range
Output / characteristics	Conditions  1 Power source voltage AC220/240V  2 Non-loading (free output)  3 Ammeter type volt-meter (X1.1)	Conditions:  1 Power source voltage AC380/415V 2 Non-loading (free output) 3 Ammeter type volt-meter (X1.1)
Soft start stop	0.125, 0.5, 1, 2 Hz/s (4 steps)	0.125~3.00 Hz/s
Protection function		
Excessive high or low voltage for inverter	Excessive low voltage at a voltage is lower than 194V DC  Excessive high voltage at a voltage is	Excessive low voltage at a voltage is lower than 350V DC  Excessive high voltage at a voltage is
	higher than 420V DC	higher than 750V DC
Abnormality of current sensor (0A detection)	Stoppage at a current of compressor smaller than 1.5A.  When the frequency is 15 to 18Hz after starting.  Cause of abnormality:  Failure of current sensor  Failure of IPM/DIP-IPM/ ISPM  Failure of compressor / fan motor	
	Disconnected wiring	

Protection function	RAS-(4-6)HVRNME-AF / RWH-(4-6)FSVNFE	RAS-(4-6)HRNME-AF / RWH-(4-6)FSNFE
Overcurrent protection for inverter	*) Internal protection IPM  1 Short-circuit trip of arm *) 2 Instantaneous overcurrent trip *) 3 Instantaneous overcurrent trip 4 Electronic thermal trip Condition is maintained longer than 30 seconduring 10 minutes sampling time.	Detecting current is more than 50% of the rated current.  (3) (4) (4) (20 ms) (30 s) Time
Protection of transistor module	<ol> <li>IPM has four protection function for self-protection</li> <li>Some of the output terminals between "U" and "V", "V" and "W", "W" and "U" has a short-circuit.</li> <li>Running current reaches the maximum rated current.</li> <li>Abnormal temperature is measured by internal thermistor.</li> <li>Control voltage decreases abnormally.</li> </ol>	
Overload control	Overload control as a current greater than (rated current X105%).  Overload control release at a current smaller than (rated current X 88%).	
Fin temperature increase	The unit is stopped when the fin temperature is higher than 80°C (1~) 100°C (3N~).	
Earth detection	The unit is stopped when the compressor is	earthing.

## 9.1.2 Inverter time chart

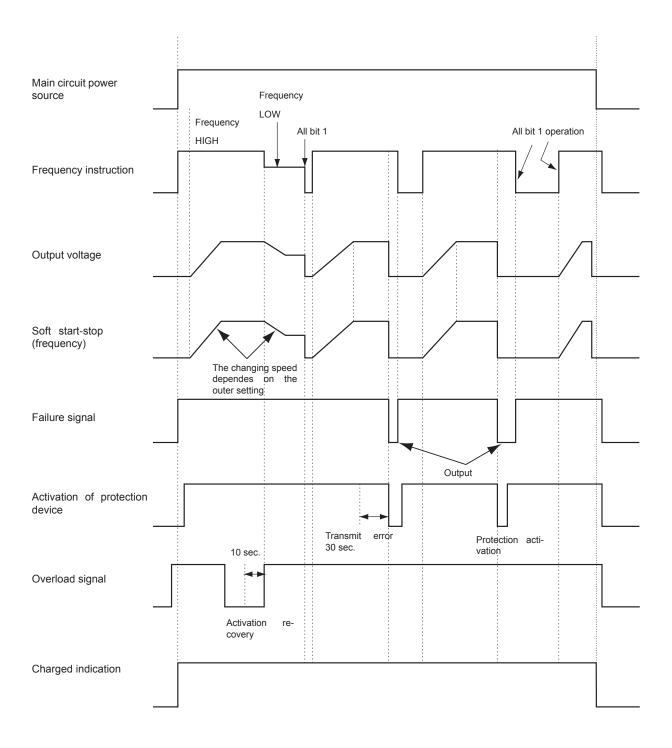

#### 9.1.3 Protective function

#### 1 Excessive high or low voltage for inverter

#### a. Level of detection

- When the voltage of direct current is greater than (A) V, abnormalities are detected.
- When the voltage of direct current is smaller than (B) V, abnormalities are detected.

Power supply	1~ 230V 50Hz	3N~ 230V 50Hz
(A)	440	750
(B)	194	350

#### b. Function

When abnormalities are detected, the inverter compressor is stopped and transmit the signal code of stoppage cause to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

#### **c.** Cancellation of protection function

Transmission for signal code of stoppage cause is cancelled when a stopping order is given or main power source is cut off.

#### 2 Abnormality of current sensor

#### a. Level of detection

When current of the inverter compressor decreases lower than 0.5A during the inverter compressor frequency between 15Hz and 18Hz, an abnormality is detected.

#### **b.** Function

When abnormalities are detected, the inverter compressor is stopped, and transmit the signal code of stoppage cause to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

## c. Cancellation of Protection Function

Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

#### 3 Overcurrent protection for inverter

## a. Level of detection

When the current detected by current sensor reaches 150% of the rated current, overcurrent is detected. (Instantaneous overcurrent)

When the current detected by current sensor exceeds 105% of the rated current continuously for 30 seconds or for 3.5 minutes in total during a 10 minutes period, overcurrent is detected. (Electric thermal relay)

### **b.** Function

When abnormalities are detected, the inverter compressor is stopped and transmit the signal code of stoppage cause to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

## c. Cancellation of protection function

Transmission for signal code of stoppage cause is cancelled by stopping order is issued or main power source is cut off.

9



#### 4 Protection of IPM/DIP-IPM/ISPM

#### a. Level of detection

When some of the output terminals between "U" and "V", "V" and "W", "W" and "U" of IPM/dip IPM/ISPM are short-circuited, an abnormality is detected.

When the running current of IPM/DIP-IPM/ISPM reaches (maximum rated current x 105%), an abnormality is detected.

When an internal temperature is measured by internal thermistor of IPM, an abnormality is detected.

When the control voltage of IPM/DIP-IPM/ISPM decreases, an abnormality is detected.

#### **b.** Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

## c. Cancellation of protection function

Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

#### 5 Fin temperature increase

#### a. Level of detection

When the temperature of internal thermistor exceeds more than 100 °C, an abnormality is detected.

#### **b.** Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

### c. Cancellation of protection function

Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off.

### 6 Earth detection

#### a. Level of detection

When the starting current of the compressor reaches 80% of the overcurrent protection value, an abnormality is detected.

## **b.** Function

When abnormalities are detected, the inverter compressor is stopped and the signal code of stoppage cause is transmitted to PCB1 (case outdoor unit) and PCB3 (case indoor unit).

#### **c.** Cancellation of protection function

Transmission for signal code of stoppage cause is cancelled when a stopping order is issued or main power source is cut off

### 9.1.4 Overload control

#### d. Level of detection

When the output current exceeds 105% of the maximum output current, an abnormality is detected.

#### e. Function

An overload signal is issued when output current exceeds 105% of the maximum output current, and the frequency decreases.

For 10 seconds after the output current decreases lower than 88% of the rated current, the operation is performed with the compressor frequency limited to the upper level frequency when the output current decreases lower than 88% of the rated one.

However, if the frequency order is smaller than the maximum value, the operation is performed according to the order.


## f. Cancellation of protection function

After the operation described in the above item b. is performed for 10 seconds, this control is cancelled.



## 9.2 Thermistor

## 9.2.1 Summary of thermistors

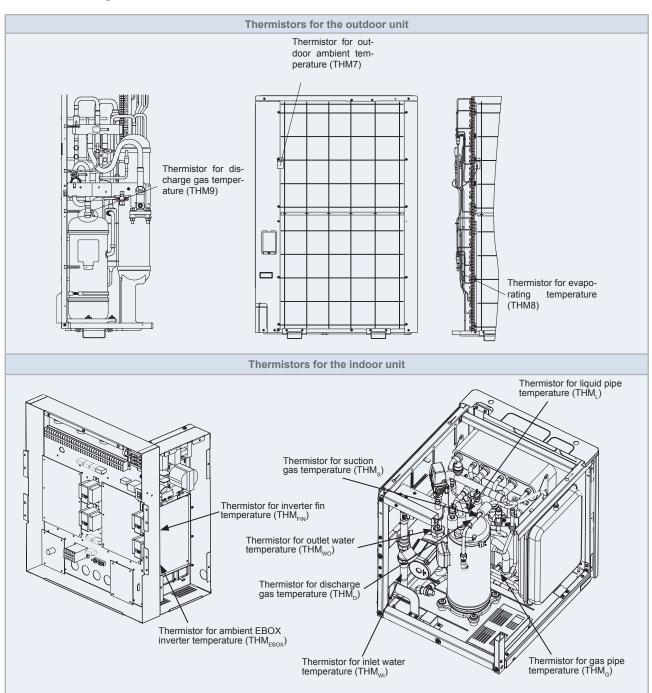

## **Additional thermistors**


- Thermistor for water outlet temperature of second cycle (THM  $_{\!\scriptscriptstyle WO2}\!)$  (ATW-WTS-02 accessory)
- Thermistor for water outlet temperature after hydraulic separator (THM<sub>wo3</sub>) (ATW-WTS-02Y accessory)
- Thermistor for second ambient temperature ( $THM_{AMB2}$ ) (supplied with the ATW-2OS-01 accessory)
- Thermistor for water temperature of the DHW tank (THM<sub>DHWT</sub>) (ATW-WTS-02Y accessory)
- Thermistor for swimming pool water temperature ( $\mathsf{THM}_{\mathsf{SWP}}$ ) (supplied with the ATW-SPS-01 accessory)



## 9.2.2 Diagrams of thermistors

# ◆ Thermistor for discharge gas temperature for: outdoor unit R410A compressor (THM9) and indoor unit R134a compressor (THM<sub>p</sub>)


(For prevention of discharge gas overheating)

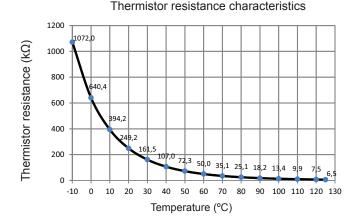

- 1 A thermistor for the upper part temperature of the compressor is installed to prevent discharge gas from overheating. If discharge gas temperature increases excessively lubricating oil deterioration occurs and lubricating properties deteriorate, resulting in short compressor life.
- 2 If discharge gas temperature increases excessively compressor temperature increases. At the worst, compressor motor winding will be burnt out.
- **3** When the upper part temperature of compressor increases during heating operation, the unit is controlled according to the following method.
  - The electronic expansion valve of the unit is opened to return the liquid refrigerant to the compressor (through the accumulator for outdoor unit), decreasing compressor temperature.
  - If the compressor upper part temperature increases exceeding 127°C (for outdoor unit) or 120°C (for indoor unit) even if the electronic expansion valve opens, the compressor is stopped, in order to protect the compressor.
  - In pump down operation, the above function is also available.
- 4 If compressor upper part temperature increases excessively, the protection control is activated and the compressor is stopped according to the following method.


Operation	Upper part temperature of compressor		Defeating navied
Operation	Outdoor unit	Indoor unit	Defecting period
Lleating	Over 127°C	Over 120°C	10 minutes (continuously)
Heating	Over	140°C	5 seconds (continuously)
Defrosting	Over 127°C	Over 120°C	5 seconds (continuously)

Thermistor resistance characteristics

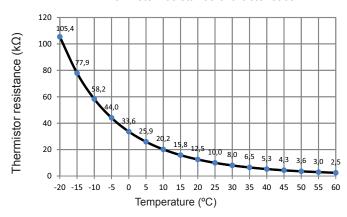


lacktriangle Thermistor for: indoor unit water inlet temperature (THM<sub>wi</sub>), indoor unit water outlet (THM<sub>wo</sub>) temperature and water outlet temperature of second cycle (THM<sub>wo2</sub>)

Thermistor resistance characteristics

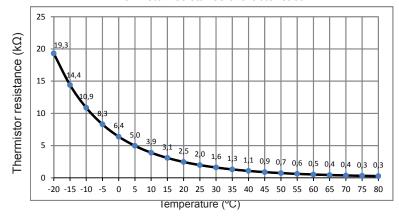


♦ Thermistor for indoor unit inverter fin temperature (THM<sub>EIN</sub>)


Thermistor resistance characteristics

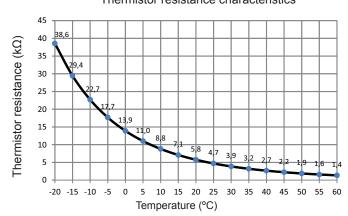

# lacktriangle Thermistor for: water outlet temperature after hydraulic separator (THM $_{wo3}$ ) and water temperature of the DHW tank (THM $_{ m DHWT}$ )

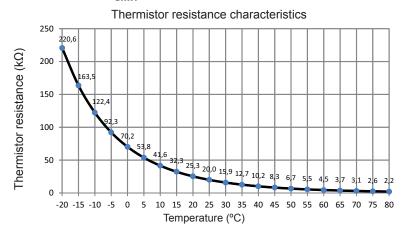



# $\spadesuit$ Thermistor for: second ambient temperature (THM $_{\rm AMB2}$ ) and swimming pool water temperature (THM $_{\rm SWP}$ )

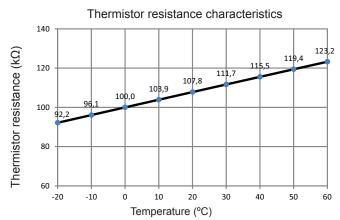

# 9.3 Electronic expansion valve

## 9.3.1 Electronic expansion valve for the outdoor unit and the 2nd cycle from indoor unit

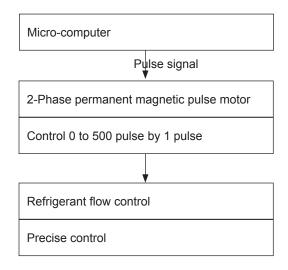


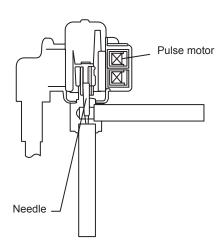


Items	Specifications		
Applicable to the models	For the main cycle of: RAS-(4-6)H(V)RNME-AF / RWH-(4-6)FS(V)NFE		
Туре	UKV(10.0 USRT) series/UKV (5.0USRT) series for MVB		
Refrigerant	R410A (Outdoor unit) / R134a (2nd cycle - Indoor unit)		
Working temperature range	-30°C ~ 65°C (operation time of the coil: less than 50%)		
Mounting direction	Drive shaft in vertical direction within an angle of 45° as maximum		
Flow direction	Reversible		
Drive method	4-Phase canned motor method		
Rated voltage	DC12V±1.8V		
Drive condition	83PPS (pulse width at ON: 36mm sec, OFF: 60mm sec) 1,2 phase excitation		
Coil resistance (each phase)	46Ω ± 10% (at 20°C)		
Wiring diagram, drive circuit and activation mode	O N OFF  Wiring diagram A B A B A B A B A B A B A B A B A B A		



## 9.3.2 Electronic expansion valve for the 1s cycle from indoor unit

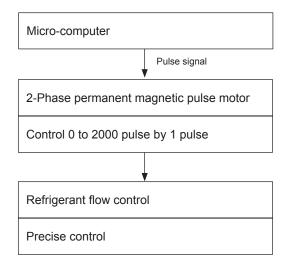

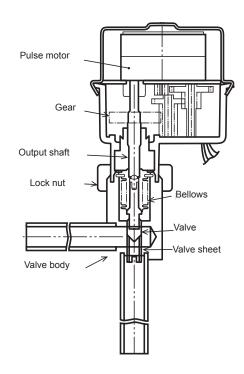


Items	Specifications
Туре	EDM type
Refrigerant	R410A
Working temperature range	-30°C ~ 70°C (with coils which are not electrified)
Mounting direction	Drive shaft in vertical direction, motor upside and 90° in four direction
Flow direction	Reversible
Drive method	4-phase pulse motor
Voltage rate	DC12V±1.2V
Drive condition	$100Ω \pm 250$ PPS (pulse width over 3mm) 2 phase excitation
Coil resistance (each phase)	$150\Omega \pm 10\%$ (at 20°C)
Wiring diagram, drive circuit and activation mode	Valve activation with a procedure 1 2 3 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1


## 9.4 High pressure protection device

## 9.4.1 Outdoor unit

If the discharge pressure is excessively high, the compressor and the component parts of the refrigeration cycle can be damaged. Therefore, in case that the discharge pressure is higher than 4.15MPa (R410A), the protection control is activated and the compressor is stopped.

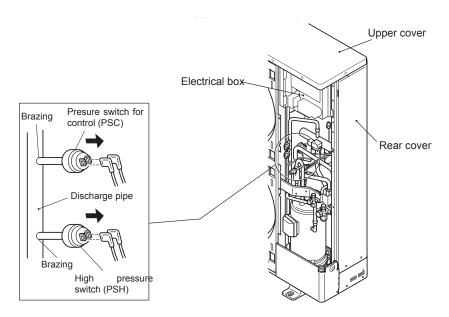


- 1 For controlling the high pressure not to increase excessively during heating operation, the gas by-pass circuit and the air volume of the outdoor fan is controlled automatically.
- 2 The gas by-pass circuit, which is composed of the solenoid valve and the capillary tube for flow adjustment, control the high pressure not to increase excessively by leading the high pressure gas to the low pressure side.

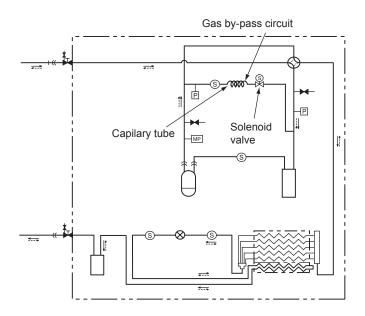


## 9.4.2 2nd cycle indoor unit

If the discharge pressure is excessively high, the compressor and the component parts of the refrigerant cycle can be damaged. Therefore, in case that the discharge pressure is higher than 3MPa (R134a), the protection control is activated and the compressor is stopped.

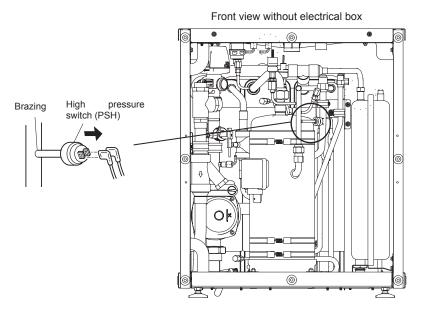

The pressure at the 2nd cycle of the indoor unit is controlled by the Low and High pressure sensors.

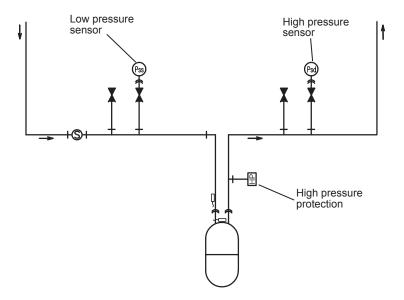


# 9.5 Noise filter (NF)


The noise filter decreases the leakage of noise made by the inverter to the power supply side. Terminals indicated with "LOAD" are connected to the inverter side and terminals indicated with "LINE" to the power supply side.

## 9.5.1 Noise filter for 1~

## ◆ RAS-(4-6)HVRNME-AF / RWH-(4-6)FSVNFE (2nd cycle) (230V 50Hz)

Items	Specifications
Model	LFB-14930-3M
Rated current	AC230V 30 A
Permissible temperature range.	-25 °C to 85 °C
Circuit diagram	Z CX1

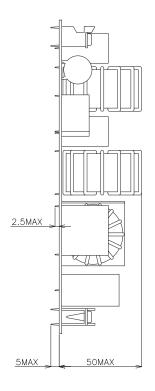

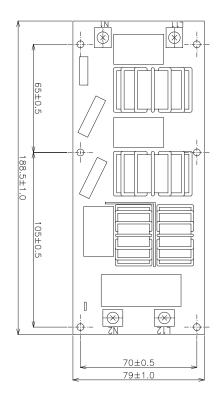




## 9.5.2 Noise filter for 3N~

## **♦** RAS-(4-6)HRNME-AF / RWH-(4-6)FSNFE (2nd cycle) (400V 50Hz)

Items	Specifications	
Model	4LFB-16830-2FA	
Rated current	AC415V 27A	
Permissible temperature range	-25°C to 85°C	
Circuit diagram	$\begin{bmatrix} 1 & 1 & 1 & 1 & 1 & 1 & 1 & 1 & 1 & 1 $	

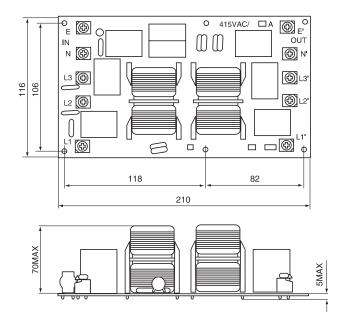


# 9.6 Capacitor (CB1, CB2)

This part is used for changing the alternative current to the direct current for the inverter. Connect two capacitor in line and used.

## **♦** RAS-(4~6)HRNME-AF / RWH-(4-6)FSNFE (2nd cycle) (400V/50Hz)

Items	Specifications
Models	LNX2G472MSEAHE
Capacity of static electricity	4700μF
Rated voltage	400 VDC
Permissible temperature range	-25°C to 95°C

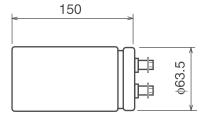






# 9.7 Reactor (DCL)


This part is used for changing the alternative current to the direct current for the inverter.

## 9.7.1 Reactor (DCL) for 1~

## ◆ RAS-(4-6)HVRNME-AF / RWH-(4-6)FSVNFE (2nd cycle) (230V 50Hz)

Items	Specifications
Character	0.59 mH±15 (at 1 kHz)
Rated current	30 A
DC Resistance	26 mΩ (at 20 °C)
Permissible temperature range	-20°C to 60°C

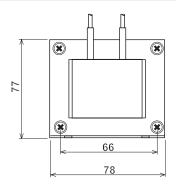

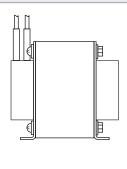



## 9.7.2 Reactor (DCL) for 3N~

## ◆ RAS-(4-6)HRNME-AF / RWH-(4-6)FSVNFE (2nd cycle) (400V 50Hz)

Items	Specifications
Character	1.0 mH+10 (at 1 kHz)
Rated current	30 A
Direct resistance	22.8 mΩ+20 (at 20 °C)
Permissible temperature range	-20 °C to 60 °C

20

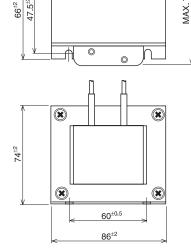

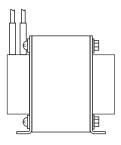



## 9.8 R410A (outdoor unit) and R134a (indoor unit) scroll compressor

### ◆ Reliable mechanism for low vibrating and low sound

- 1 The rotating direction is definite.
- 2 The pressure inside of the chamber is high pressure, and the surface temperature of the chamber is 60 °C to 110 °C.

## **♦** Principle of compression

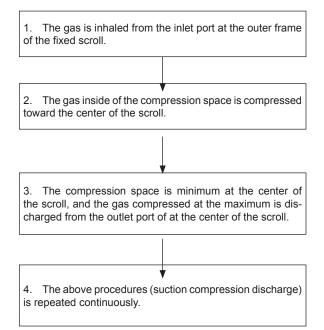

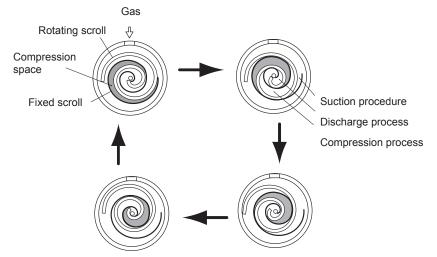



# 10. Spare parts


# Index

10.1.	Outdoor unit	.260
	10.1.1. Cycle and structural parts	260
	10.1.2. Electrical parts	261
	10.1.3. Cycle and structural parts table	263
	10.1.4. Electrical parts table	263
10.2.	Indoor unit	.264
	10.2.1. Cycle and structural parts	264
	10.2.2. Electrical parts	267
	10.2.3. Cycle and structural parts table	268
	10.2.4. Electrical parts table	270
10.3.	Domestic hot water tank (Optional accessory)	.271
	10.3.1. Structural and electrical parts	271
	10.3.2. Parts table	272

# 10.1 Outdoor unit

# 10.1.1 Cycle and structural parts


# **♦** RAS-(4-6)H(V)RNME-AF

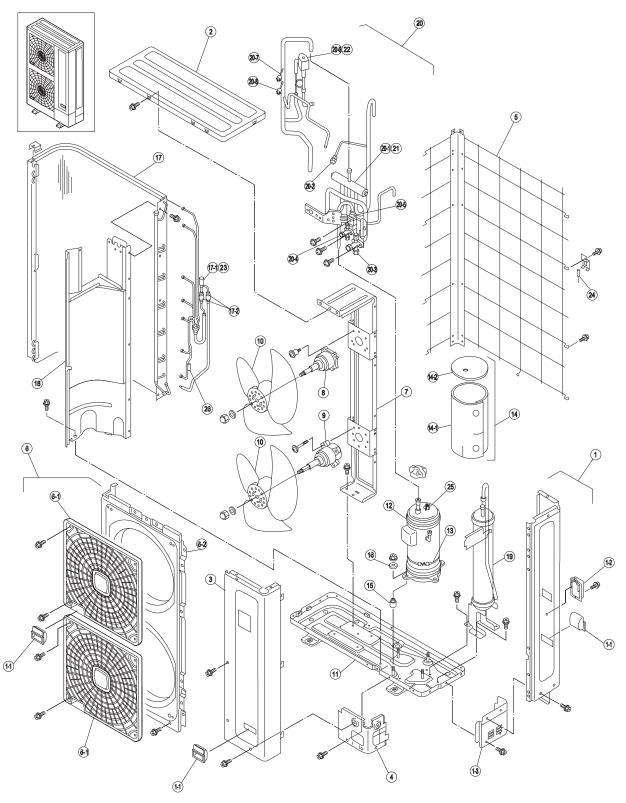



Spare Parts Document: EPN-201005E


## 10.1.2 Electrical parts

# **♦** RAS-(4-6)HVRNME-AF (1~ 230V 50Hz)

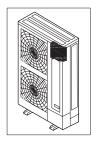

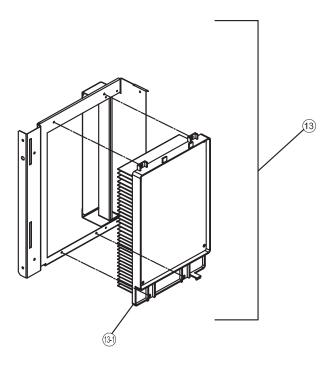

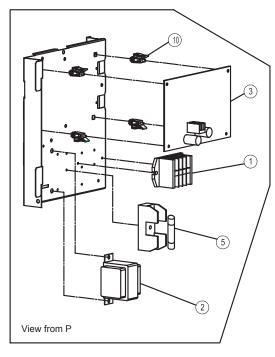


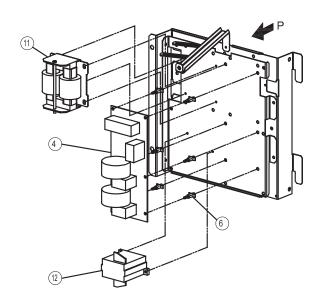



Spare Parts Document: EPN-201005E





# **♦** RAS-(4-6)HRNME-AF (3N~ 400V 50Hz)

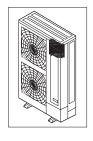

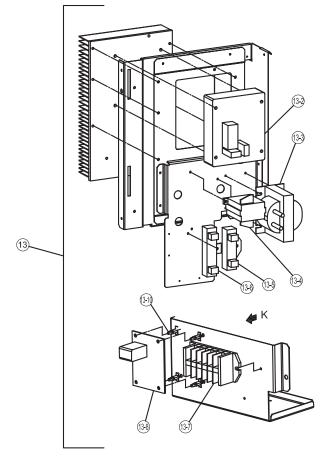

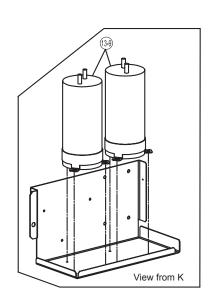

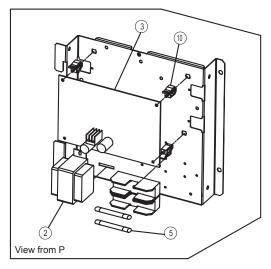

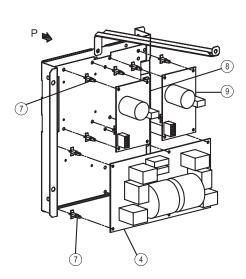

Spare Parts Document: EPN-201005E

# 10.1.3 Cycle and structural parts table

No.	Part name	Remarks
1	Rear cover S assy	Assembly
1-1	Handle	
1-2	H-cover	
1-3	Pipe cover B	
2	Upper cover assy	Assembly
3	Service cover L assy	Assembly
4	S Cover B	
5	Protector net L assy	Inlet (for Condenser)
6	Shroud S assy	Assembly
6-1	Front protector net	Outlet (for Fan)
6-2	Shroud L	
7	Motor clamp L assy	Assembly
8	Fan Motor	74W
9	Fan Motor	74W
10	Propeller fan	
11	B-Base assy	Assembly
12	Compressor	RAS-4HVRNME-AF: E306AHD-27A2 RAS-(5/6)HVRNME-AF: E406AHD-36A2 RAS-(5/6)HVRNME-AF: E406AHD-36A2 RAS-(5/6)HRNME-AF: E405AHD-36D2
13	Oil heater	40W
14	Acoustical cover + Cap	Before serial N° 4KE15426
14-1	Accoustical cover	After serial N° 4KE15426
14-2	Accoustical cover cap	

No.	Part name	Remarks
15	Vibration-proof rubber 1	
16	Vibration-proof rubber 1	
17	Condenser	Assembly
17-1	Expansion valve	
17-2	Strainer	
18	Partition assy	Assembly
19	Liquid tank	
20	Pipe assy	Assembly
20-1	4-way valve	
20-2	Check joint	
20-3	Solenoid valve (5/8")	Gas
20-4	Solenoid valve (3/8")	Liquid
20-5	Strainer	
20-6	Solenoid valve	
20-7	Pressure switch for protection	PSH
20-8	Pressure switch for control	PSC
21	Coil for 4-way valve	
22	Coil for solenoide valve	
23	Expansion valve coil	
24	Thermistor for outdoor ambient temperature	THM7
25	Thermistor for discharge gas temperature	ТНМ9
26	Thermistor for evaporating temperature	THM8

# 10.1.4 Electrical parts table


No.	Part name	Remarks
1	Terminal board	For RAS-(4-6)HVRNME-AF
2	Transformer	
3	Printed circuit board	Main PCB (PO052 assembly)
4	Noise filter	30A
5	Fuse	RAS-4HVRNME-AF: 40A RAS-(5/6)HVRNME-AF: 50A RAS-(4-6)HRNME-AF: 20x2 A
6	Spacer	For RAS-(4-6)HVRNME-AF: For noise filter
7	Spacer	For RAS-(4-6)HRNME-AF: For noise filter, PCB2
8	Printed circuit board	For RAS-(4-6)HRNME-AF: PCB2 for motor 2 (PO024 assembly)
9	Printed circuit board	For RAS-(4-6)HRNME-AF: PCB2 for motor 1 (PO024 assembly)
10	Holder	For PCB1
11	Reactor unit	For RAS-(4-6)HVRNME-AF
12	Magnetic contactor	For RAS-(4-6)HVRNME-AF
13	Power unit	Assembly

No.	Part name	Remarks
13-1	Inverter fin assy	RAS-4HVRNME-AF: DIP-IPM (17A) RAS-(5/6)HVRNME-AF: DIP- IPM (25A)
13-2	Inverter module	For RAS-(4-6)HRNME-AF: ISPM
13-3	Reactor	For RAS-(4-6)HRNME-AF
13-4	Magnetic contactor	For RAS-(4-6)HRNME-AF
13-5	Resistor	For RAS-(4-6)HRNME-AF
13-6	Resistor	For RAS-(4-6)HRNME-AF
13-7	Terminal board	For RAS-(4-6)HRNME-AF
13-8	Reversing phase pro- tection relay	For RAS-(4-6)HRNME-AF
13-9	Capacitor	For RAS-(4-6)HRNME-AF: 2700µf
13-10	Spacer	For RAS-(4-6)HRNME-AF For reversing phase protection relay

# 10.2 Indoor unit


# 10.2.1 Cycle and structural parts

## **♦** Cabinet

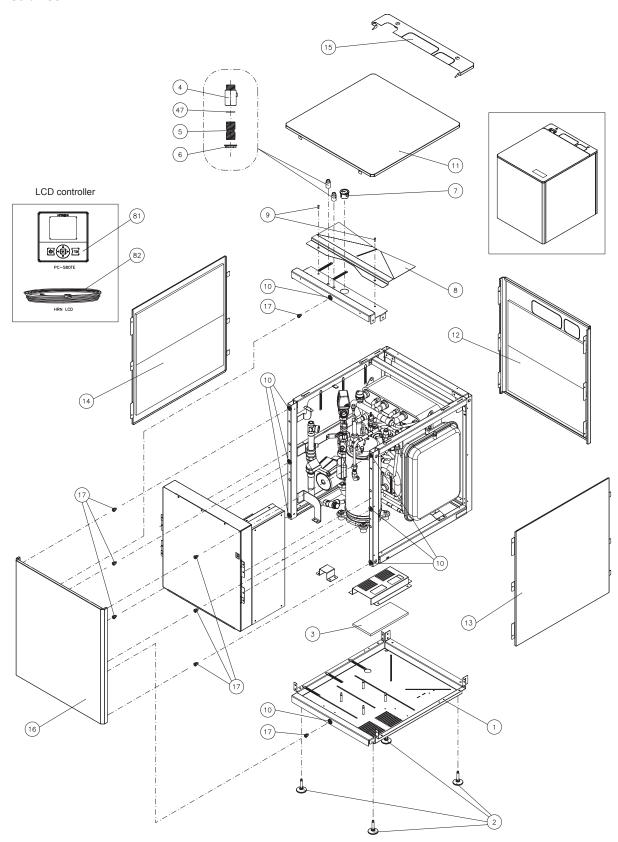


Spare Part Document: EPN-201207B-1B

# **♦** Cycle

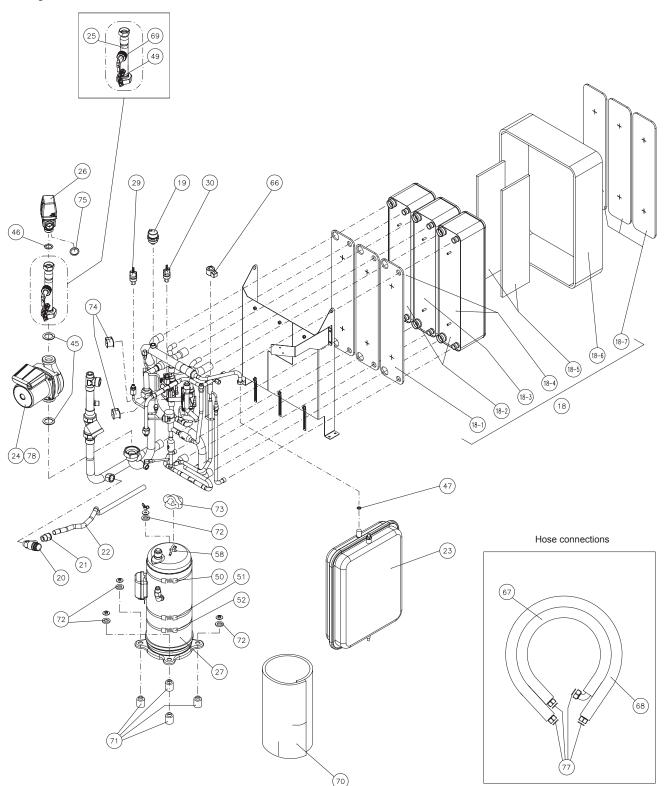


Spare Part Document: EPN-201207B-2B

## **♦** Pipe assembly

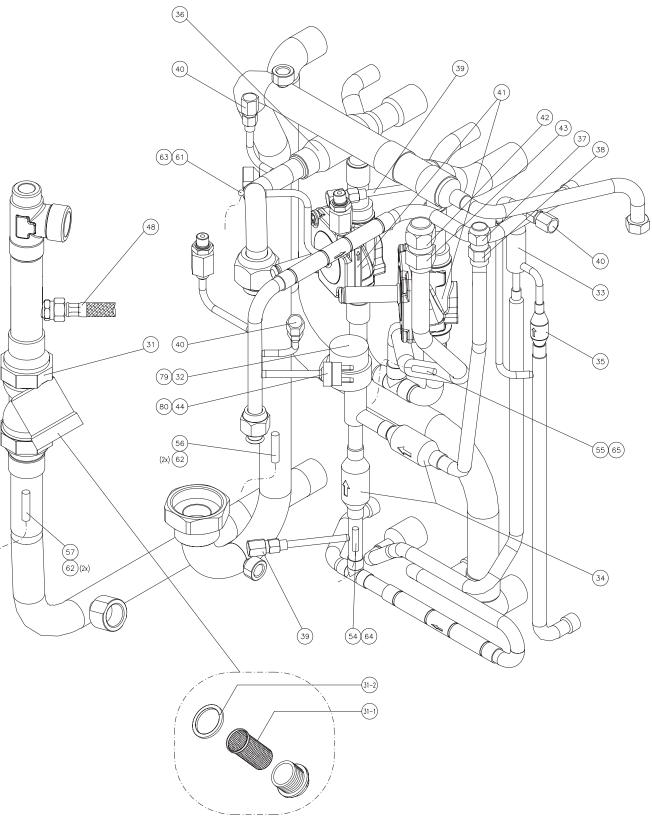


Spare Part Document: EPN-201207B-3B


## 10.2.2 Electrical parts

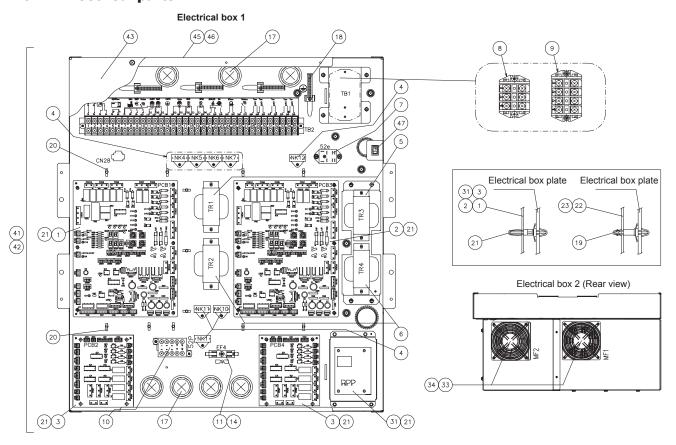

## Electrical box 2 (RWH-(4.0-6.0)FSVNFE)

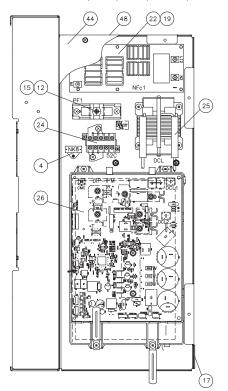

Electrical box 2 (RWH-(4.0-6.0)FSNFE)

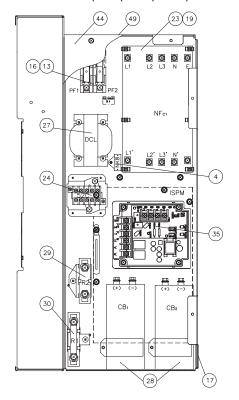

Spare Part Document: EPN-201207B-4B



# 10.2.3 Cycle and structural parts table

No.	Description	Qty	Remarks
1	B-Base	1	
2	Mounting foot	4	
3	Filter	1	
4	Mini valve (Pressure port)	2	
5	Union	2	
6	Nut	2	
7	Manometer	1	
8	Partition plate	1	
9	Screw (M5)	2	For partition plate
10	Coupling	8	
11	Upper cover assembly	1	Insulation included
12	Back cover assembly	1	Insulation included
13	Right cover assembly	1	Insulation included
14	Left cover assembly	1	Insulation included
15	Indoor unit cover for upper piping outlet	1	
16	Front cover	1	
17	Pin	8	
18	Plate heat exchanger unit	1	Assembly from (18-1 ~ 18-7)
18-1	Insulation	3	
18-2	Plate heat exchanger	2	For RWH-(5.0/6.0)FS(V)NFE
18-3	Plate heat exchanger	1	
18-4	Plate heat exchanger	2	For RWH-4.0FS(V)NFE
18-5	Insulation	2	
18-6	Insulation	1	
18-7	Insulation	3	
19	Air purger	1	
20	Safety valve	1	
21	Union	1	
22	Drain pipe	1	
23	Expansion vessel (12L)	1	Gasket 47 not included.
24	Water pump	1	Gaskets 45 not included.
25	Pipe 1 assembly	1	
26	3-way valve	1	Gaskets 46 and 75 not included.
27	Compressor	1	RAS-(4.0-6.0)FSVNFE: H405DHD-64A1 RAS-(4.0-6.0)FSNFE: H405DHD-64D1
29	Pressure sensor	1	Discharge pressure (Pd)
30	Pressure sensor	1	Suction pressure (Ps)
31	Water strainer	1	
31-1	Mesh	1	
31-2	Gasket	1	
32	Expansion valve	1	1st cycle
33	Expansion valve	1	2nd cycle
34	Strainer	2	
35	Strainer	1	
36	Strainer	1	
37	Flare nut	1	Liquid connection
38	Union	1	Liquid connection
39	Check joint	2	R410A

No.	Description	Qty	Remarks
40	Check joint	3	R134a
41	Solenoid valves (SV1, SV2)	2	
42	Flare nut	1	Gas connection
43	Union	1	Gas connection
44	Pressure switch (High)	1	
45	Gasket	2	For pump connections.
46	Gasket	1	3-way valve
47	Gasket	2	For expansion vessel and mini valve connection.
48	Flexible pipe for water pressure port	1	
49	Flexible pipe for water pressure port	1	
50	Crankcase heater	1	
51	Crankcase heater	1	
52	Crankcase heater	1	
54	Thermistor for liquid pipe temperature (THM <sub>L</sub> )	1	
55	Thermistor for gas pipe temperature (THM <sub>G</sub> )	1	
56	Thermistor for outlet water temperature (THM <sub>wo</sub> )	1	
57	Thermistor for inlet water temperature (THM <sub>wi</sub> )	1	
58	Thermistor for discharge gas temperature (THM <sub>D</sub> )	1	
61	Thermistor for suction gas temperature (THM <sub>s</sub> )	1	
62	Pipe brace	4	
63	Pipe brace	1	
64	Pipe brace	1	
65	Pipe brace	1	
66	Expansion valve coil	1	
67	Space heating inlet pipe (With elbow)	1	
68	Space heating outlet pipe (Without elbow)	1	
69	Water flow switch	1	
70	Acoustical cover	1	
71	Vibration proof rubber 1	4	
72	Vibration proof rubber 2	4	
73	Rubber cap	1	
74	Solenoid valve coil (SV1, SV2)	2	
75	Special gasket	1	For 3-way valve reduction union
77	Gasket	5	(4x) For flexible water pipe connections, (1x) Extra
78	Harness for the water pump	1	Pump wire connection
79	Expansion valve cord	1	Expansion valve wire (MV1)
80	Harness 63H	1	High pressure switch wire connection (63H)
81	LCD controller	1	For indoor unit alone (without tank) or indoor unit with non HITACHI tank, the LCD controller is needed.
82	LCD controller cable	1	(4000mm)

10




## 10.2.4 Electrical parts table

No.	Description	Qty	Remarks
1	Printed circuit board 1	1	PCB1
2	Printed circuit board 3	1	PCB3
3	Printed circuit board 2 & 4	2	PCB2&4
4	Spark killer	9	
5	Transformer	2	
6	Transformer	2	
7	Relay	1	15 A
8	Terminal board	1	1~: For RWH-(4.0-6.0)FSVNFE
9	Terminal board	1	3N~: For RWH-(4.0-6.0)FSNFE
10	Magnetic contactor	1	16 A
11	Fuse	1	3.15 A
12	Fuse	1	For RWH-(4.0-6.0)FSVNFE: 50 A
13	Fuse	2	For RWH-(4.0-6.0)FSNFE: 20 A
14	Fuse holder	1	
15	Fuse holder	1	For RWH-(4.0-6.0)FSVNFE
16	Fuse holder	2	For RWH-(4.0-6.0)FSNFE
17	Rubber bush	9	
18	Clamp	4	
19	Spacer	6	
20	Harness lifter	12	
21	Spacer	20 24	For RWH-(4.0-6.0)FSVNFE For RWH-(4.0-6.0)FSNFE
22	Noise filter	1	For RWH-(4.0-6.0)FSVNFE
23	Noise filter	1	For RWH-(4.0-6.0)FSNFE
24	Magnetic switch	1	
25	Reactor assembly	1	For RWH-(4.0-6.0)FSVNFE
26	Inverter PCB assembly	1	For RWH-(4.0-6.0)FSVNFE
27	Reactor assembly	1	For RWH-(4.0-6.0)FSNFE
28	Capacitor	2	For RWH-(4.0-6.0)FSNFE
29	Resistor	1	For RWH-(4.0-6.0)FSNFE
30	Resistor	1	For RWH-(4.0-6.0)FSNFE
31	Reverse phase protection relay (RPP)	1	For RWH-(4.0-6.0)FSNFE
33	Fan	2	
34	Guard grille	2	
35	Inverter PCB assembly	1	For RWH-(4.0-6.0)FSNFE
41	Electrical box	1	For RWH-(4.0-6.0)FSVNFE Assembly (Components + harness).
42	Electrical box	1	For RWH-(4.0-6.0)FSNFE Assembly (Components + harness).
43	Electrical box cover assembly	1	(Plate + labels)
44	Inverter electrical box cover assembly	1	(Plate + labels)
45	Electrical box sub-assembly	1	For RWH-(4.0-6.0)FSVNFE Only plate (without components)
46	Electrical box sub-assembly	1	For RWH-(4.0-6.0)FSNFE Only plate (without components)
47	Switch for DHW tank heater operation (SW1)	1	
48	Inverter electrical box sub-assembly	1	For RWH-(4.0-6.0)FSVNFE Only plate (without components)
49	Inverter electrical box sub-assembly	1	For RWH-(4.0-6.0)FSNFE Only plate (without components)

# 10.3 Domestic hot water tank (Optional accessory)

## 10.3.1 Structural and electrical parts

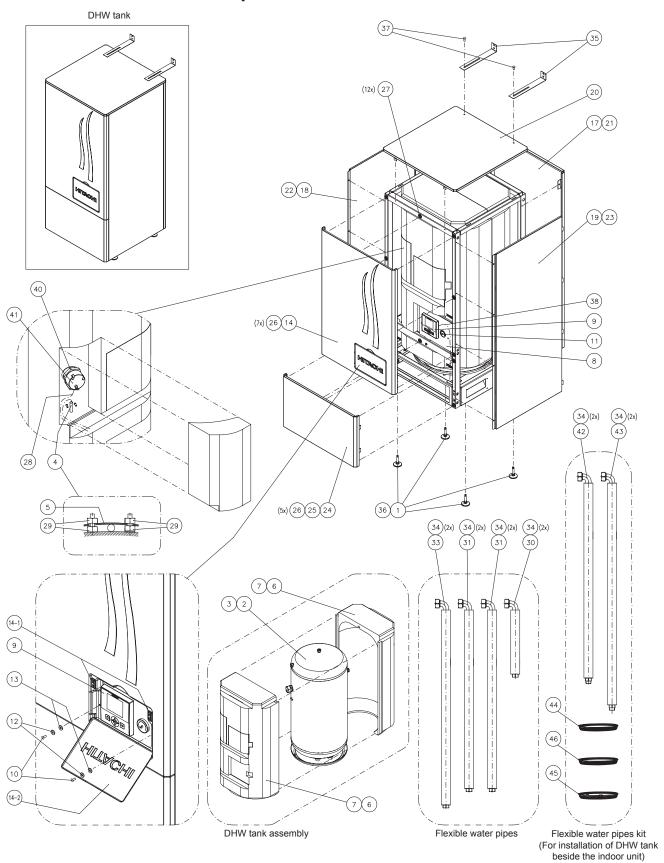

Spare Part Document: EPN-201210B-1B



## 10.3.2 Parts table

No.	Description	Qty	Remarks
1	Mounting foot	4	For floor mounted tank (beside the indoor unit)
2/3	DHW tank	1	DHWS(195/260)S-2.0H1E
4	Water temperature sensor	1	
5	Attaching plate	1	
6/7	Tank insulation	1	DHWS(195/260)S-2.0H1E
8	Control support	1	
9	LCD controller	1	
10	Screw	2	
11	Manometer	1	
12	Washer	2	
13	Nylon washer	2	
14	Upper front cover assembly	1	
14-1	Magnet	2	
14-2	LCD controller cover	1	
17	Rear cover for small tank	1	For DHWS195S-2.0H1E
18	Left cover for small tank	1	For DHWS195S-2.0H1E
19	Right cover for small tank	1	For DHWS195S-2.0H1E
20	Upper cover	1	
21	Rear cover for large tank	1	For DHWS260S-2.0H1E
22	Left cover for large tank	1	For DHWS260S-2.0H1E
23	Right cover for large tank	1	For DHWS260S-2.0H1E
24	Lower front cover for small tank	1	For DHWS195S-2.0H1E
25	Lower front cover for large tank	1	For DHWS260S-2.0H1E
26	Pin	12	
27	Coupling	12	
28	DHW tank heater connection cable	1	
29	Nut	4	
30	Flexible water pipe	1	Heating coil inlet pipe
31	Flexible water pipe	2	Heating coil outlet pipe and DHW outlet pipe
33	Flexible water pipe	1	DHW inlet pipe
34	Gasket	9	(8x) for flexible water pipe connections, (1x) Extra.
35	Wall support	2	
36	Bolt	4	To fix with indoor unit
37	Screw M5	2	To fix wall support
38	LCD connection cable	1	1800mm
40	DHW tank heater	1	2.0 kW
41	Heater thermostat	1	
42	Flexible water pipe	1	Kit pipe for heating coil outlet (For ATW-FWP-01 accessory. In case of DHW tank beside the indoor unit)
43	Flexible water pipe	1	Kit pipe for heating coil inlet (For ATW-FWP-01 accessory. In case of DHW tank beside the indoor unit)
44	Extension cable for the electric heater	1	(For ATW-FWP-01 accessory. In case of DHW tank beside the indoor unit)
45	Extension cable for the LCD controller	1	(For ATW-FWP-01 accessory. In case of DHW tank beside the indoor unit)
46	Extension cable for the thermistor	1	(For ATW-FWP-01 accessory. In case of DHW tank beside the indoor unit)

# 11. Servicing

# Index

11.1.	Outdoo	or unit		275
	11.1.1.	Removing	covers	275
		11.1.1.1.	Removing service cover	275
		11.1.1.2.	Removing air outlet grille	275
		11.1.1.3.	Removing upper cover	276
		11.1.1.4.	Removing the lower part of service panel and rear panel	276
	11.1.2.	Removing	electrical components	277
		11.1.2.1.	Opening electrical box (P-mounting plate)	277
		11.1.2.2.	Removing electrical box components	277
		11.1.2.3.	Removing "W" electrical components surface	279
		11.1.2.4.	Removing other electrical components	280
		11.1.2.5.	Removing outdoor fan motor	281
		11.1.2.6.	Removing expansion valve coil	282
		11.1.2.7.	Removing the coils for the reversing and solenoid valves (SVA1, SVA2 and SVF)	283
	11.1.3.	Removing	refrigerant parts	284
		11.1.3.1.	Removing the R-410A compressor	284
		11.1.3.2.	Removing high pressure switch and control pressure switch	287
		11.1.3.3.	Removing reversing valve	288
		11.1.3.4.	Removing expansion valve	289
		11.1.3.5.	Removing solenoid valve	289
11.2.	Indoor	unit		290
	11.2.1.	Removing	service covers	290
		11.2.1.1.	Removing the indoor unit front cover	290
		11.2.1.2.	Removing the indoor unit upper cover	290
		11.2.1.3.	Removing the indoor unit left cover	291
		11.2.1.4.	Removing the indoor unit right cover	291
		11.2.1.5.	Removing the auxiliary indoor unit covers	292
	11.2.2.	Removing	indoor unit electrical box	293
		11.2.2.1.	Removing the electrical box	293
		11.2.2.2.	Removing the internal electrical box covers	294
	11.2.3.	Replacem	ent of electrical components	295
		11.2.3.1.	Removing electrical box components	295
		11.2.3.2.	Replacing the electrical box	296
		11.2.3.3.	Replacing thermistors	300
		11.2.3.4.	Replacing LCD controller	301
		11.2.3.5.	Replacing the DIP-IPM (Inverter module - 1~ 230V 50Hz)	302

	11.2.3.6.	Replacing the ISPM (Inverter module - 3N~ 400V 50Hz)	303
	11.2.3.7.	Replacing the Relay PCB (only for 3N~ 400V 50Hz)	304
	11.2.3.8.	Replacing the noise filter (Inverter module - 1~ 230V 50Hz)	305
	11.2.3.9.	Replacing the noise filter (Inverter module - 3N~ 400V 50Hz)	306
11.2.4.	Replacing	hydraulic components	307
	11.2.4.1.	Replace water flow switch (WFS)	307
	11.2.4.2.	Replace water pump (WP1)	308
	11.2.4.3.	Replacement of the manometer	309
	11.2.4.4.	Replacement of the safety valve	311
	11.2.4.5.	Replacement of the air purger	312
	11.2.4.6.	Replacement of the water strainer	313
	11.2.4.7.	Replacement of the expansion vessel	315
	11.2.4.8.	Replacement of the space heating pipes	317
	11.2.4.9.	Replacement of the DHW pipes	319
	11.2.4.10.	Replacement of the heating coil pipes (DHW tank over the indoor unit)	320
	11.2.4.11.	Replacement of the heating coil pipes (DHW tank beside the indoor unit)	323
	11.2.4.12.	Replacement of the flexible water pipes kit (ATW-FWP-01)	324
11.2.5.	Replacing	refrigerant parts	327
	11.2.5.1.	Replace the R-134a compressor	327
	11.2.5.2.	Replacement of R134a high pressure switch (PHS)	330
	11.2.5.3.	Replacement of the R134a pressure sensors	331
	11.2.5.4.	Replace the coils for R410A solenoid valves	332
	11.2.5.5.	Replacement of R410A solenoid valves	334
	11.2.5.6.	Replacement of R134a electronic expansion valve coil	335
	11.2.5.7.	Replacement of R410A electronic expansion valve coil	336
	11.2.5.8.	Replacement of R134a expansion valve	338
	11.2.5.9.	Replace R410A expansion valve	338
	11.2.5.10.	Replacement of R410A-R134a plate heat exchanger	339
	11.2.5.11.	Replacement of R134a-water plate heat exchanger	341
	11.2.5.12.	Replace R410A-water plate heat exchanger	343
DHW 1	Гаnk		345
11.3.1.	Removing	service covers	345
	11.3.1.1.	Removing the tank lower front cover	345
	11.3.1.2.	Removing the tank upper front cover	
	11.3.1.3.	Removing the tank insulation protecting the thermostat	
11.3.2.		electrical components	
	11.3.2.1.	Replace thermistor	
	11.3.2.2.	Replacement of the electric heater	
	11.3.2.3.	Replacement of the LCD controller	

11.3.

# 11.1 Outdoor unit

# 11.1.1 Removing covers

# 11.1.1.1 Removing service cover

Remove the main parts according to the following procedures.



# NOTE

- To reassemble perform the procedures in reverse.
- To prevent contamination of the refrigerant with water or foreign particles, do not expose open to atmosphere for long periods.
- If necessary, seal pipe ends using caps or tape.
  - 1 Remove the four (4) fixing screws.
  - 2 Slide the service cover downward and remove it.

Pay attention of not falling off the service cover.



# 11.1.1.2 Removing air outlet grille

- 1 Remove the eight (8) fixing screws.
- 2 Lift the air outlet grille holding the lower parts.
- 3 Release the extruded hook of the air outlet grille from the shroud.



# 11.1.1.3 Removing upper cover


1 Remove all the screws fixing the upper cover, both on the front and back of the machine.

2 Lift the upper cover upwards.



# 11.1.1.4 Removing the lower part of service panel and rear panel

1 Remove the five (5) fixing screws at the lower part of the service panel and remove the lower part of the service panel by pulling towards the front side.

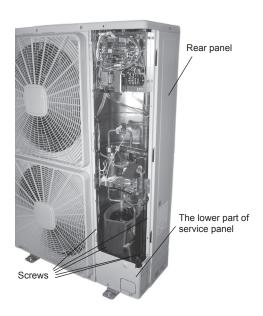

2 Remove the upper cover according to section *Removing upper cover* in this chapter.




The length of fixing scews for the outdoor temperature thermistor is different than all other screws in the machine, as an assembly poka-yoke.

# 11.1.2 Removing electrical components

#### 11.1.2.1 Opening electrical box (P-mounting plate)

- 1 Remove the service cover according to the section *Removing the service cover* in this chapter.
  - 2 Remove the six (6) screws fixing the electrical box.



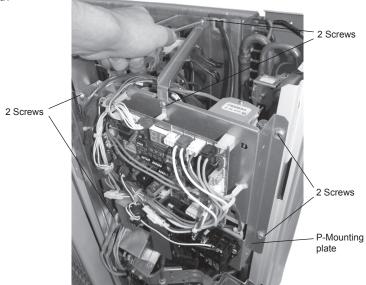



- Check that the LED201 (red) located on the "W" surface PCB is OFF when opening the P-mounting plate.
- Do not touch the electrical components when LED201 (Red) located on the "W" surface PCB is ON in order to avoid an electrical shock.
  - 3 Open the P-mounting plate by rotating it 90 degrees to the left.




#### 11.1.2.2 Removing electrical box components





# ! DANGER


- Do not touch the electrical components of the PCB directly.
- When handling the PCB, take care of components. Do not apply excesive force to them, in order to avoid damaging the motherboard and failures
- 1 Remove the service cover according to section *Removing service cover* in this chapter.
- 2 Disconnect all the connectors in the PCB.

- 3 Remove the PCB by sliding four (4) holders in the arrow direction.
- **4** Remove the PCB for power distribution of the compressor and the motor.

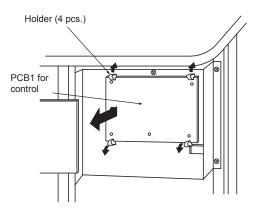


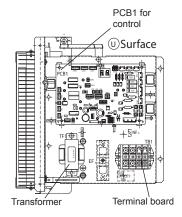

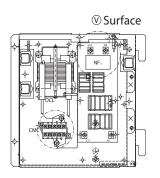

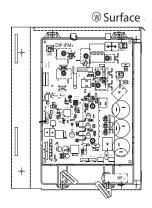

- **5** Removing the relay PCB
- Remove the service cover according to the section Removing Service Cover in this chapter.
- Disconnect all the wires connected to the relay PCB.

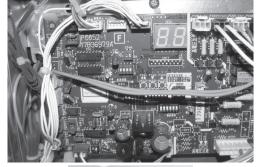



#### 11.1.2.3 Removing "W" electrical components surface

- 1 Remove the service cover according to the section Removing service cover in this chapter.
- 2 Open the P-mounting plate by rotating 90 degrees to the left according to the section *Opening electrical box* (P-Mounting Plate) in this chapter.



#### DANGER


- · Check that the LED201 (red) located on the "W" surface PCB is OFF when opening the P-mounting plate.
- Do not touch the electrical components when LED201 (Red) located on the "W" surface PCB is ON in order to avoid an electrical shock.
- Identify the terminal numbers with mark band. When reassembling, the terminals have to be connected to the correct numbers. If incorrectly connected, malfunctions or damages will occur.
- In case of replacing control PCB, set all the dip switches as the same position before replacing. If not, malfunction may occur. Refer to the manual attached with the service PCB.
- Do not apply strong force to the electric components and PCBs to avoid damage.
- 3 Use a screw driver to push and release the plastic holders retaining the "W" electrical components surface.





#### NOTE

Check to ensure that the electrical wires will not be caught between the assembled electrical components and the mounting plates when the "W" electrical components surface is reassembled.

#### Electrical Box

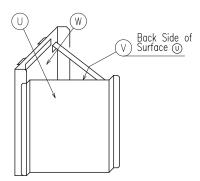

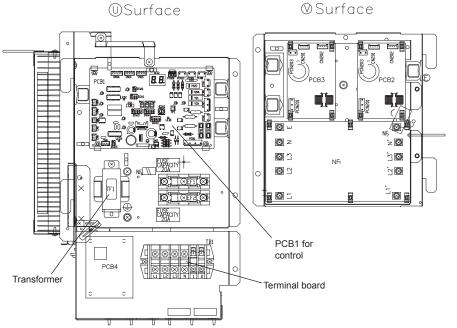

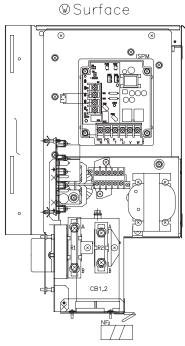

11



#### 11.1.2.4 Removing other electrical components

- 1 Remove the service cover according to the section Removing service cover in this chapter.
- 2 Open the P-mounting plate by rotating it 90 degrees to the left according to the section Opening electrical box (P-Mounting Plate) in this chapter.
- 3 Check to ensure the LED201 (Red) of the inverter PCB is OFF when opening P-mounting plate.
- 4 Remove other electrical components according to the procedure below.




#### **DANGER**

- Check that the LED201 (red) located on the "W" surface PCB is OFF when opening the P-mounting plate.
- Do not touch the electrical components when LED201 (Red) located on the "W" surface PCB is ON in order to avoid an electrical shock.
- Identify the terminal numbers with mark band. When reassembling, the terminals have to be connected to the correct numbers . If incorrectly connected, malfunctions or damages will occur.
- 5 Disconnect all the wires connected with the smoothing capacitor (CB, CB1, CB2, CA).
- **6** The wire has polar characters. Identify the wire mark band and the indication on the smoothing capacitor when wire connecting.
- 7 Remove the two (2) screws fixing the smoothing capacitor and remove the smoothing capacitor.
- 8 Disconnect all the wires connecting with the magnetic contactor (CMC1).
- 9 Remove the two (2) screws fixing the magnetic contactor and remove the magnetic contactor.
- **10** Remove the four (4) screws fixing the reactor and remove the reactor (DCL).
- 11 Disconnect all the wires connected with the noise filter (NF1).
- 12 Remove the noise filter by clamping the top of the holder (6 portions) with a pincher.

#### 11.1.2.5 Removing outdoor fan motor


- 1 Remove the service cover according to the section Removing service cover in this chapter.
- 2 Remove the air outlet grille according to the section Removing air outlet grille in this chapter.
- 3 Remove the upper cover according to the section *Removing upper cover* in this chapter.
- 4 Disassembly the fan blade by removing the cap nuts and washers fixing the fan blade onto the motor shaft.

If the fan blade get stuck when trying to remove it, use a puller to disassembly the fan.

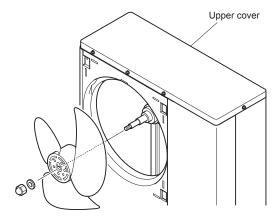


Fan components and technical features				
Power supply		1~ 230V 50Hz 3N~ 400V 50Hz		
		DIP IPM		
	DC fan motor UP	PCN202		
For motor		CN202		
Fan motor		DIP IPM		
	DC fan motor DOWN	PCN201		
		CN201		
Carou for motor fiving	DC Fan Motor UP	M4 Screw with spacer x 4		
Screw for motor fixing	DC Fan Motor DOWN	M4 Screw with spacer x 4		
Motor clamp and wiring fixing position		DC fan motor lead wire  DC fan motor UP  DC fan motor DOWN		

- 5 Remove the fan motor connector from the PCN202 and PCN203 at the electrical box.
  - **a.** Cut off the cable tie that fixes the lead wire of the fan motor.
  - **b.** Remove the four (4) screws that fix the motor to the motor clamp.

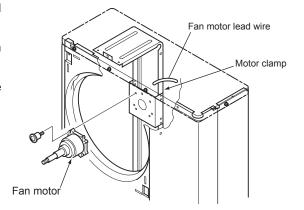

**6** Fix the motor wire with the cable tie or the cord clamp. If not, it may cause the disconnection of the fan motor's lead wire.

In order to avoid cutting edges, mount the rubber bush at the partition plate when inserting the motor wire through it. If not, it may cause the disconnection to the fan motor's lead wire.

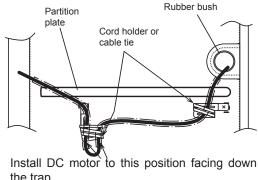

the trap



- When assembling the motor, ensure the cables section directly downwards. Fix the protection tube edge end downwards to ensure water from keeping inside it.
- Fix the motor wires onto the motor clamp with a cable tie to prevent them from collisioning the fun blades.
- Assembling the fan blade: Insert the skidding protection part of fan boss in accordance with the cutting part of the motor shaft, and fix the screw after dismounting the screwed part of the shaft. (Tightening Torque of 20 N.m)
- When connecting the motor wire, check to ensure that the colors of the connectors on the PCN201 and PCN202 are matched with the wires.
- Fix the air outlet grille firmly to the shroud.

#### 11.1.2.6 Removing expansion valve coil

- Remove the service cover according to the section *Removing service cover*.
- 2 Open the P-mounting plate according to the section Opening electrical box (P-Mounting Plate) in this chapter.




# 😃 DANGER

- Check that the LED201 (red) located on the "W" surface PCB is OFF when opening the P-mounting plate.
- Do not touch the electrical components when LED201 (Red) located on the "W" surface PCB is ON in order to avoid an electrical shock.
- 3 Remove the CN5A connector on the control PCB of the electrical box.
- 4 Hold the expansion valve coil and slightly rotate, then pull it up. Refer to the figure below to replace the electrical valve. The lock mechanism is equipped with the expansion valve coil. Check to ensure that the expansion valve coil is locked.




# 11.1.2.7 Removing the coils for the reversing and solenoid valves (SVA1, SVA2 and SVF)

- 1 Remove the service cover according to the section *Removing service cover* in this chapter.
- 2 Open the P-mounting plate according to the section Opening electrical box (P-Mounting Plate) in this chapter

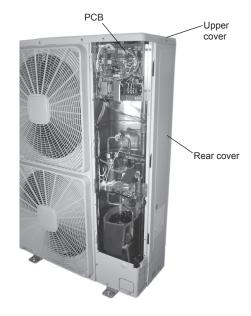

3 Remove the connectors on the control PCB of the electrical box.

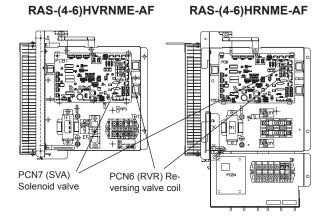



#### NOTE

Do not touch the electrical components when the LED201 (Red), located on surface "W" PCB is ON in order to avoid electrical shock.


**4** Remove the reversing valve coil by removing the screw fixing the coil.




# 11.1.3 Removing refrigerant parts

#### 11.1.3.1 Removing the R-410A compressor

- 1 Remove the service cover and the lower part of the service panel according to the section Removing service cover and the section Removing lower part of service panel and rear panel. In case that the outdoor unit is installed close to a wall closely, separate first the outdoor unit from the wall.
- **2** Collect the refrigerant from the liquid stop valve, the gas stop valve and the check joint at the piping.

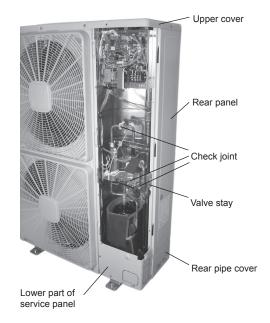


3 Open the sound insulation cover wrapped around the compressor and remove the terminal box cover at the compressor fixed by one (1) screw. Disconnect the compressor wires in the terminal box and remove the sound insulation cover.

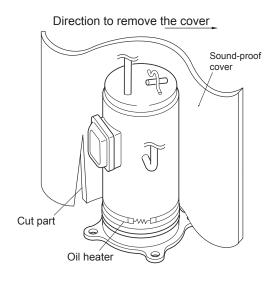





Check and take note of each terminal number and indications for its correct connection at the reasembling process. If wires are connected in incorrect order, it will lead to a compressor failure.

- **4** Remove the rubber cap and the thermistor on the top of the compressor.
- 5 Remove the crankcase heater.(Oil heater on the lower case).

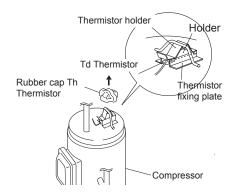

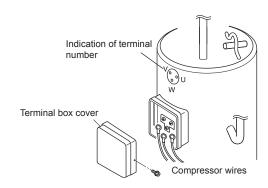

Details for compressor terminals

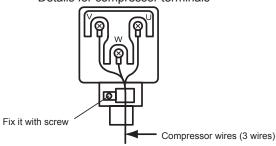



#### NOTE

- The compressor is connected by brazing. Check to ensure whether there are flammable things around or not when using a burner for pipe connections. If you do not', oil existing pipe inside may ignite.
- Do not expose the refrigerant cycle to the atmosphere for a long period in order to avoid water and foreign particles entering into the refrigerant cycle. After removing the compressor, replace it quickly. If it is exposed to the ambiance for a long period, seal both suction and discharge pipes.
- Remove the cap for the compressor just before replacing the compressor. Before assembling the compressor, seal the suction pipe and discharge pipe with tape to protect the compressor interior from foreign particles. Remove the tape when connecting the pipes.
- Match the terminal No. with the mark band No. when reassembling. If the wiring is connected incorrectly, the compressor may be damaged due to reverse rotation.
- If there is a clearance between the oil heater and the compressor due to wire overlapping, excessive heat is generated there. Then the oil heater is failed due to overheating. When mounting the reassembled oil heater, this point should be taken into account.
- If the oil heater lead wire is caught on the spring, the lead wire may be cut due to vibration. When reassembling, attention should be paid to the lead wire.



#### CAUTION

All compressor pipes must be brazed to be connected to the refrigerant circuit. Ensure that all the surrounding is free of flammable objects and liquids when performing piping brazing work.

**6** Remove the suction pipe and the discharge pipe from the compressor. Isolate the wires and electrical components to protect them from the burner flame when brazing the connection pipes.

When replacing the compressor, the brazed material used for connecting the compressor and refrigerant pipes can drop into the pipes and get sucked into the compressor, causing a compressor failure. To avoid this, take the following points into account when replacing the compressor:


**a.** File away brazing material remaining on the end of the refrigerant pipes.



# CAUTION

Be careful to avoid filed brazing material entering into the pipes.

**b.** Insert the pipes fully in to prevent brazing material from entering them.

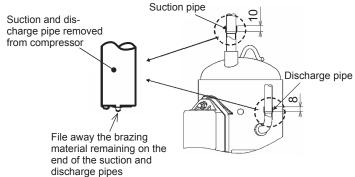

**c.** Refer to the table for the recommended amount of brazing material. If using more brazing material than the recommended amount, it may drop into the pipes.




# CAUTION

When brazing the pipes, prevent oxidized scale formation by nitrogen substitution.

Thick- ness of	Piping diameter (refrigerant cycle side) (mm)						
brazing material	Ø6.35	Ø9.52	Ø12.7	Ø15.88	Ø19.05	Ø22.2	Ø28.2
Ø1.6mm	25	30	35	75	100	110	225
Ø2.0mm	15	15	20	45	55	70	135
Ø2.4mm	10	10	15	30	35	45	90

7 Remove the two (2) nuts fixing the compressor and remove the compressor from the unit by lifting it. Slightly incline it forward and lift.

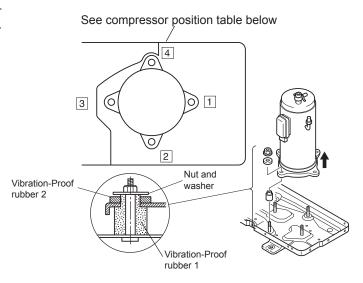

Fixation of the compressor to the bottom plate				
Compressor position	1	2	3	4
Vibration-proof rubber 1	0	0	0	0
Vibration-proof rubber 2	0	0	_	_
Nut	0	0	_	-

- 8 Reassemble the parts in the reverse order of the indicated removing procedures.
- Tighten the screws (U, V and W) for compressor wires with 2.5 N.m.
- Fix the lead wire firmly.
- Attach the oil heater firmly to the compressor and fix it with the spring.




# NOTE


Fix the lead wire for the compressor firmly using a cable tie to avoid contacting the metal sheet sharp edges and the high temperature piping.


#### 11.1.3.2 Removing high pressure switch and control pressure switch

- 1 Remove the service cover according to the section *Removing service cover* in this chapter.
- 2 Collect the refrigerant from the check joint according to the section *Removing the compressor* in this chapter.

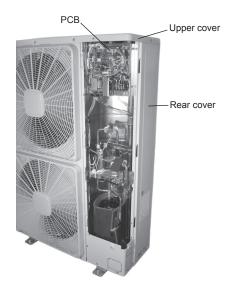

- 3 Disconnect the fasten terminals from the pressure switches.
- **4** Cut the high pressure switch and control pressure switch from the brazing neck using a burner.

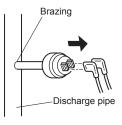

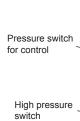





11

#### 11.1.3.3 Removing reversing valve

- 1 Remove the service cover and the rear service panel according to the section *Removing Service Cover* and the section *Removing lower part of service panel and rear service panel* in this chapter.
- 2 Collect the refrigerant from the check joint according to the section *Removing compressor*.
- 3 Remove the reversing valve coil according to the section Removing reversing valve coil.
- 4 Remove one (1) fixing screw for the valve-mounting plate.
- **5** Remove the stop valve at the gas side from the valve-mounting plate by removing the two (2) screws.
- **6** Remove the reversing valve assemblies from the 4 brazed parts where it is fixed. Remove the brazing of the reversing valve and the stop valve at the gas using a blowtorch. Cool down the piping side covering it with wet cloth, in order to avoid brazing material entering the reversing valve. Protect the connecting wires and pipe insulation from the brazing frame.
- 7 Remove the reversing valves from its assemblies 4 brazed parts.
- **8** Perform the brazing with a blowtorch to remove and reassemble the reversing valve by cooling the pipes first with wet cloth in order to avoid brazing material entering the reversing valve.

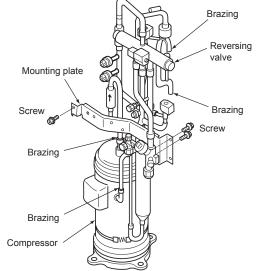


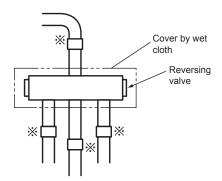

**9** Reassemble the parts in the reverse order of removing procedures contained in this chapter. When SFV is removed, fix it according to the section *Removing the Reversing Valve and the Solenoid Valve* contained in this chapter.

#### 11.1.3.4 Removing expansion valve

- 1 Remove the service cover and rear service panel according to the section Removing Service Cover and the section Removing Lower Part of Service Panel and Rear Service Panel.
- 2 Collect the refrigerant from the check joint according to the section Removing Compressor.
- 3 Remove the coils according to the section Removing Electronic Expansion Valve Coil.
- 4 Remove the brazing as shown in the figure below.
- Electronic Expansion Valve (EVO): 2 brazing parts.
- Perform the brazing to remove and reassemble the electronic expansion valve by cooling with wet cloth.
- · Protect the connecting wires and pipe insulation from brazing flame.

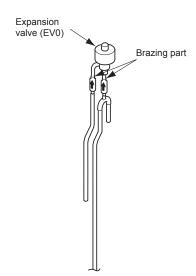

**5** Reassemble the parts in the reverse order of removing procedures.

#### 11.1.3.5 Removing solenoid valve

- 1 Remove the service cover and the rear service panel according to the sections *Removing Service Cover* and *Removing lower part of service panel and rear panel*, described in this chapter.
- 2 Collect the refrigerant from the check joint according to the section *Removing compressor* in this chapter.
- **3** Remove the solenoid valve coil according to the section *Removing coils for reversing valve and solenoid valve* in this chapter.
- **4** Remove the brazing and flare nuts as shown. Using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the reversing valve.
- **5** Perform the brazing to remove and reassemble the solenoid valve.
- **6** Protect the connecting wires and pipe insulation from the brazing flame.
- 7 Remove the flare nuts with two spanners to avoid twisting.
- 8 Reassemble the parts in the reverse order of removing procedures.

# 11.2 Indoor unit



#### CAUTION

- Before performing any of the service operations described in this chapter, turn all the main switches off and place security lockers or convenient warning indicators in order to prevent them from turning on accidentally.
- In case of blocked or sticked parts, use appropriated tools and eventually lubricants to release them.
- In case of sharped edged parts, as covers, use security gloves to avoid getting injured.
- · When performing brazing work, besides security gloves it is a must to wear convenient eye protection.

#### 11.2.1 Removing service covers



# NOTE

- Front cover needs to be removed for any task inside the indoor unit.
- · Back cover no needs to be removed.

#### 11.2.1.1 Removing the indoor unit front cover

1 Remove the indoor unit front cover by pulling it, preferably by lower part of the front cover.



#### 11.2.1.2 Removing the indoor unit upper cover

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 2 front fixing screws



3 Pull the indoor unit upper cover forward and then remove it.



# 11.2.1.3 Removing the indoor unit left cover

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 3 screws.



3 Remove the indoor unit left cover.



#### NOTE

When reassembling, take into account that this cover is not symmetric. Upper and lower hooks are not at the same distance from the central hook.



# 11.2.1.4 Removing the indoor unit right cover

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 3 screws.




**3** Remove the indoor unit right cover.



#### NOTE

When reassembling, take into account that right and left covers are not symmetric. Upper and lower hooks are not at the same distance from the central hook.

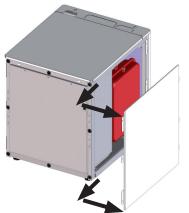

# 11.2.1.5 Removing the auxiliary indoor unit covers

There are other indoor unit covers which its removing can ease the service work.

# **♦** Removing the indoor unit cover for upper piping outlet

1 Unscrew the 2 upper side fixing screws.



**2** Pull the indoor unit cover for upper piping outlet backward and remove it.



# **♦** Removing the indoor unit cover's protection for the draining of the tank

- 1 Remove the indoor unit front cover.
- 2 Remove the indoor unit upper cover.
- 3 Unscrew the 2 wing screws.



4 Remove the indoor unit cover's protection.




# 11.2.2 Removing indoor unit electrical box




# DANGER

- Disconnect the unit from the power supply before touching any of the parts in order to avoid an electrical shock.
- Do not touch the switch for DHW tank heater operation when handling the electrical box. Keep the position of this switch in factory setting position ("Automatic" operation).

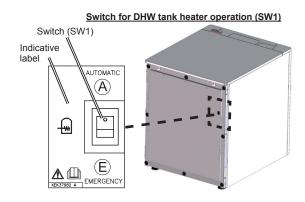


#### 11.2.2.1 Removing the electrical box

- 1 Remove the indoor unit front cover.
- 2 Unscrew the 4 front screws of the electrical box.
- 3 Undo the power wiring looping that must be done in the installation procedure before rotating/removing the electrical box.

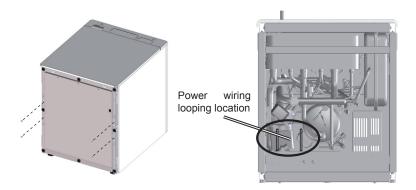

- 4 Take out the electrical box from the indoor unit until it has passed the edge. Choose one of the following steps:
  - **a.** Electrical box can be rotated 90° approximately, making easy the indoor unit component's accessibility, without the necessity to remove all the electrical box.
  - b. If it is needed, the electrical box can be completely extracted by disconnecting all the necessary wiring.

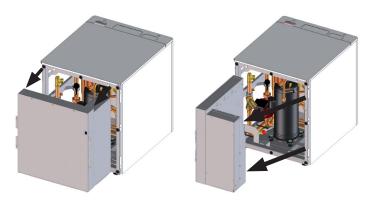

# 11.2.2.2 Removing the internal electrical box covers




# CAUTION


When handling the internal electrical or inverter box, take care of components in order to avoid damaging it.

# ♦ Internal electrical box cover (Front cover)

1 Unscrew the 7 screws of the internal electrical box cover.

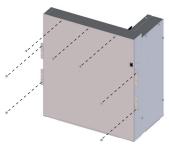


2 Remove the internal electrical box cover.

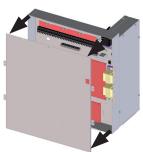


# **♦** Internal inverter box cover (Right cover)

1 Unscrew the 5 screws of the internal inverter box cover.

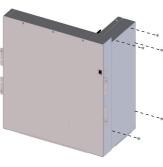

2 Remove the internal inverter box cover.

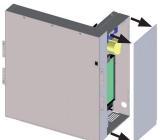



# 11.2.3 Replacement of electrical components



# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.



#### NOTE

To properly disconnect components from the Electrical box, see the Electrical wiring diagram chapter of this manual.


#### 11.2.3.1 Removing electrical box components

Remove the indoor unit front cover and remove the electrical box cover for accessing to the electrical components following the removing procedure explained in *Removing service covers* and *Removing indoor unit electrical box* section:

- Internal electrical box cover: (x7 screws).
- Internal inverter box cover: (x5 screws).


#### **♦** Electrical box components

Item	Part name	Remarks
1	Printed Circuit Board (PCB1)	Main printed circuit board for control of the unit.
2	Printed Circuit Board (PCB2/PCB4)	Secondary printed circuit board for additional control signals.
3	Printed Circuit Board (PCB3)	Main printed circuit board for control of the 2nd cycle.
4	Transformers (TR1/TR2/TR3/TR4)	Current transformer.
5	Fuse	Fuses for electrical heater protection.
6	Terminal Board (TB1)	Terminal board for power supply.
7	Terminal Board (TB2)	Terminal board for indoor/outdoor communication and Intelligent room thermostat and accessory devices.
8	Clamp	For wire tightening
9	Relay power	Power relay
10	Relay	Domestic hot water tank relay
11	Reverse Phase Protection Relay	Only for 3-phases machine
11	Switch for DHW tank heater operation	For selecting between Automatic or Manual operation of the DHW tank electric heater. Refer to the section <i>DHW tank troubleshooting</i> in <i>Troubleshooting</i> chapter for more information.

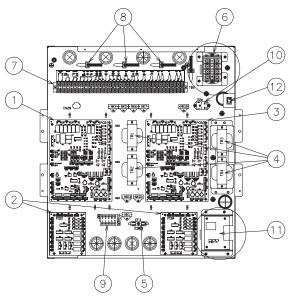


#### 11.2.3.2 Replacing the electrical box


- 1 Remove the indoor unit front cover.
- 2 Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box rotated 90° to the left in order to make easier the access to the internal components of the indoor unit.
- 3 Removing the electrical box:
  - a. Disconnect all power supply from Terminal Board 1.
  - **b.** Disconnect all external devices from Terminal Board 2.
  - c. Disconnect all internal unit devices as explained below:
    - i. Indoor unit devices
    - Water pump (WP1): Disconnect the CN22 connector from the water pump, loosen the clamp and cut the cable ties to ease the release of the connector when removing the electrical box.

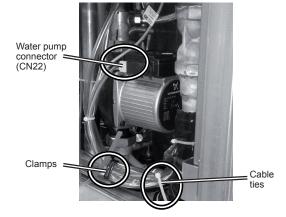

 Water flow switch (WFS), Solenoid valves (SV1, SV2) and oil heaters (OH1, OH2, OH3): Disconnect all these connectors (WFS, SV1/2, OH1/2/3) from the front lower side of the indoor unit electrical box.

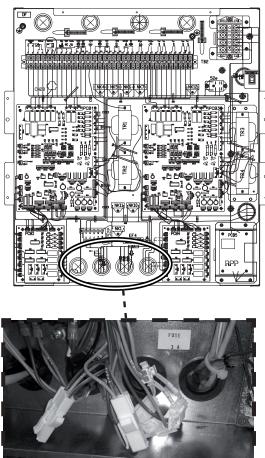


- Expansion valve R410A (MV1): Disconnect the MV1 cable from the CN7A connector of the indoor unit PCB1.
- Expansion valve R134a (MV2): Disconnect the MV2 cable from the CN7A connector of the indoor unit PCB3.

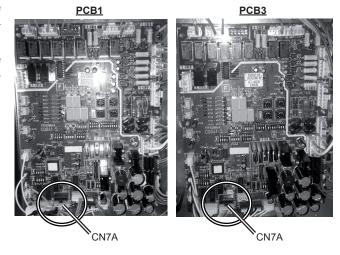


PCB<sub>2</sub>

- ii. Indoor unit sensors
- Water inlet temperature thermistor (THM<sub>wi</sub>): Disconnect it from connector CN9 in PCB2.
- Water outlet temperature thermistor (THM<sub>wo</sub>): Disconnect it from connector CN13 in PCB2.
- Liquid pipe temperature thermistor (THM<sub>L</sub>): Disconnect it from connector CN11 in PCB2.
- Gas pipe temperature thermistor (THM<sub>G</sub>): Disconnect it from connector CN12 in PCB2.
- R-134a suction gas temperature thermistor (THM<sub>s</sub>): Disconnect it from connector CN11 in PCB4.
- R-134a discharge gas temperature thermistor (THM<sub>D</sub>): Disconnect it from connector CN15 in PCB4.

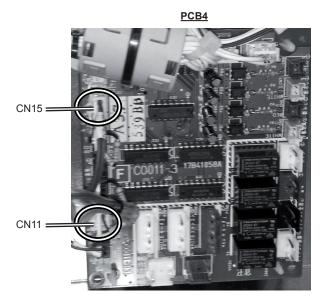

11

- R134a low pressure sensor (PS(L)): Disconnect it from connector CN3 in PCB3.
- R134a high pressure sensor (PS(H)): Disconnect it from connector CN4 in PCB3.

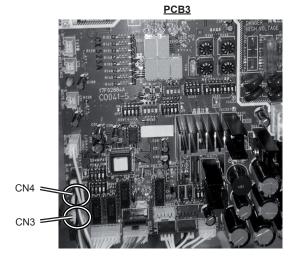




#### NOTE


If extra accessories have been installed (DHW tank, boiler, 2nd temperature kit) with its respective sensors, remember to remove them before extracting the electrical box.

#### iii. LCD controller


 LCD controller wire (CN28): Disconnect it from connector the wire-to-wire connector CN28 in the rear side of the indoor unit electrical box.

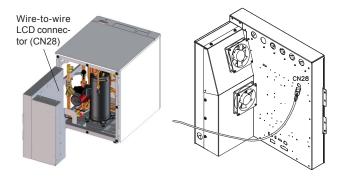

**4** Disconnect the inverter compressor wires of the terminals +, -, U, V, W placed in compressor:

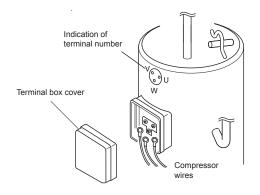


Details for compressor terminals

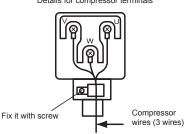

- **5** After disconnecting all internal devices from the electrical box, remove electrical box as shown:
  - a. Remove wires
  - Remove all cables through the electrical box holes (upper and lower sides) from the electrical box rear side. To do this, remove all the cables from the various harness lifters and cable ties of the PCB's before extracting the electrical box.



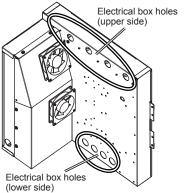

#### **b.** Handle

- After disconnecting the electrical wires, handle with care the electrical box to avoid damaging other components because of its shape and weight.
- **6** Assembly the new electrical box by performing the procedure above in reverse way.




#### 11.2.3.3 Replacing thermistors



# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- Cover the thermistors with the cork tape or pipe insulation according to each location. Both materials are factory supplied. Replace them if damaged during the servicing.
- Remove service covers.
- 2 Remove the electrical box covers.

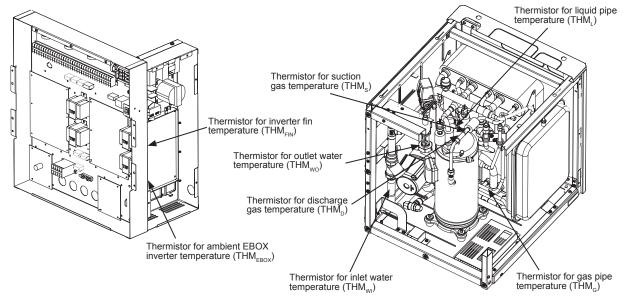


3 Disconnect these components properly from the corresponding connector PCB.

Item	Connector
THM <sub>wi</sub>	CN9 (PCB2)
THM <sub>wo</sub>	CN13 (PCB2)
THM <sub>L</sub>	CN11 (PCB2)
THM <sub>G</sub>	CN12 (PCB2)
THM <sub>s</sub>	CN11 (PCB4)
THM <sub>D</sub>	CN15 (PCB4)
THM <sub>EBOX</sub>	CN10 (PCB4)

**4** Take out the thermistor cables through the lower electrical box holes.

Item	Connector	
THM <sub>wo2</sub>	CN16 (PCB2)	
THM <sub>wo3</sub>	CN14 (PCB2)	
THM <sub>AMB2</sub>	CN4 (PCB1)	
THM <sub>DHWT</sub>	CN10 (PCB2)	
THM <sub>SWP</sub>	CN3 (PCB1)	
THM <sub>FIN</sub>	Internal	

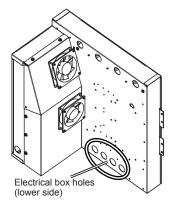

5 Remove the pipe insulation of thermistor.


6 Remove special clamp that is attached with copper pipe and sensor.



#### CAUTION

In case of P-Spring deforming, it needs to be replaced.

7 Install new thermistor using P-Spring and Butyl Sheet as shown in the following drawing:
Replacing water thermistor
Replacing refrigerant thermistor

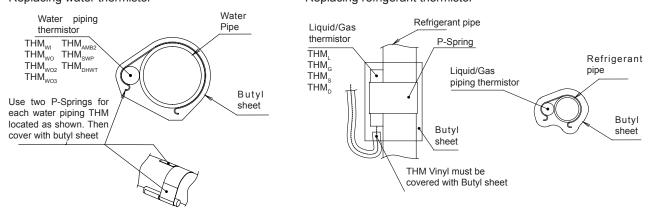


8 Install thermistor wire by perform the process in reverse.

#### 11.2.3.4 Replacing LCD controller



# CAUTION

- Pay attention to do not touch the micro and other components on LCD controller PCB. (This is malfunction protection by static electricity).
- Pay attention to do not disconnect the flat cable between LCD Buttons and LCD PCB.
- 1 Using a flat-head screwdriver, separate the control unit bracket from the front section as indicated.

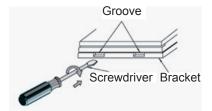

2 Disconnect LCD's connector CN1



3 Replace LCD controller by a new one.




#### 11.2.3.5 Replacing the DIP-IPM (Inverter module - 1~ 230V 50Hz)




# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- 1 Remove the indoor unit front cover.
- **2** Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Remove the internal inverter box cover (right cover) (x5 screws).

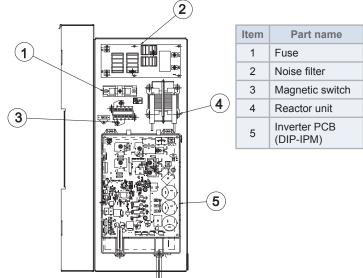

- **4** Disconnect all the wirings connected to the module:
  - Disconnect the wirinigs of the terminals +, -, U, V, W
  - Disconnect the wirinigs of connector CN206
  - Disconnect the wirinigs of the terminals +, -, R, S
  - Disconnect the wirinigs of reactor DCL1 and DCL2
  - Disconnect the wirinigs of connector CMC
- **5** Remove the four fixing screws on the DIP-IPM.

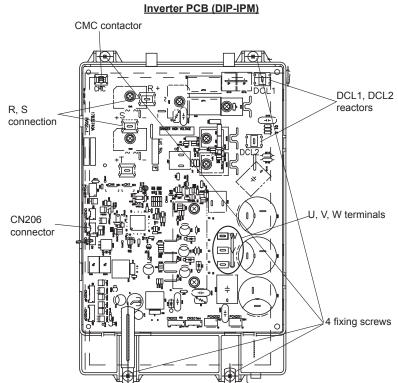


# 11.2.3.6 Replacing the ISPM (Inverter module - 3N~ 400V 50Hz)




# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- 1 Remove the indoor unit front cover.
- 2 Following the explanation of Removing the electrical box section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Remove the internal inverter box cover (right cover) (x5 screws).

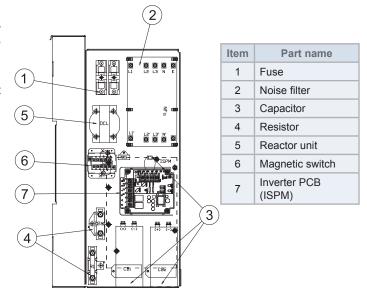

- 4 Disconnect all the wirings connected to the module:
  - Disconnect the wirinigs of the terminals +, -, U, V, W
  - Disconnect the wirinigs of connector CN206
  - Disconnect the wirinigs of the terminals +, -, R, S, T
  - Disconnect the wirinigs of P1, TB3, RB
  - Disconnect the wirinigs of P, C ,N
- 5 Remove the four fixing screws on the DIP-IPM.

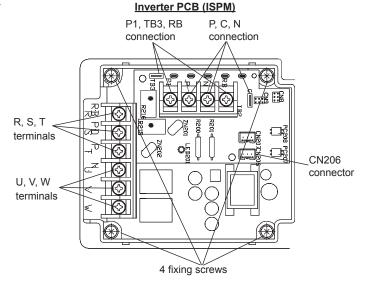




# 11.2.3.7 Replacing the Relay PCB (only for 3N~ 400V 50Hz)




# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- 1 Remove the indoor unit front cover.
- 2 Remove the internal electrical box cover (Front cover) (x7 screws).

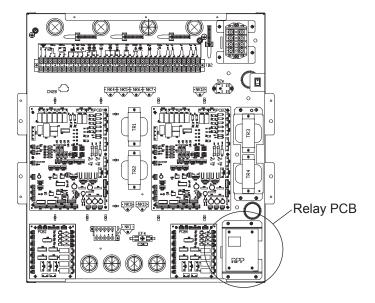

3 Remove holders from the Relay PCB. When reassembling the components, pass those holders again through the holes of the inverter module.

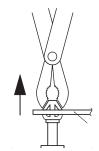


Extraction of the holders

#### 11.2.3.8 Replacing the noise filter (Inverter module - 1~ 230V 50Hz)




# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- 1 Remove the indoor unit front cover.
- 2 Following the explanation of Removing the electrical box section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Remove the internal inverter box cover (right cover) (x5 screws).

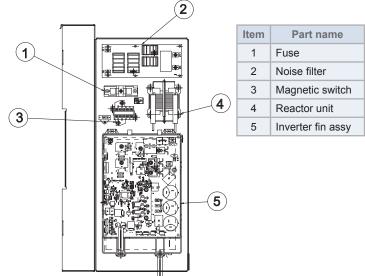

- 4 Disconnect all the wirings (9) connected to the electrical noise filter:
- 5 Remove the six holders from the inverter module. When reassembling the components, pass those holders again through the holes of the inverter module.

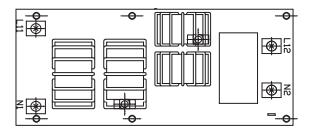




#### 11.2.3.9 Replacing the noise filter (Inverter module - 3N~ 400V 50Hz)




# DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- When handling the electrical box, take care of components. Do not apply excessive force to them, in order to avoid damaging the electrical components and failures.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.
- 1 Remove the indoor unit front cover.
- 2 Following the explanation of Removing the electrical box section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Remove the internal inverter box cover (right cover) (x5 screws).

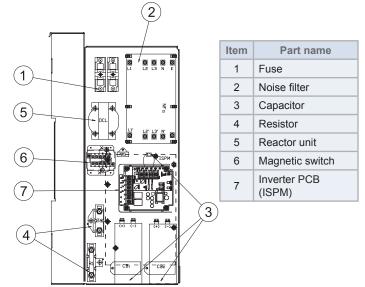

- 4 Disconnect all the wirings (15) connected to the electrical noise filter:
- 5 Remove the six holders from the inverter module. When reassembling the components, pass those holders again through the holes of the inverter module.

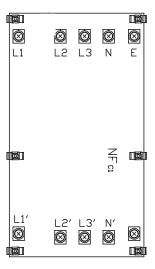

# 11.2.4 Replacing hydraulic components



# **DANGER**

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- Wait minimum 10 minutes or more from all power supplies have been turned OFF.
- In case of replacing Hydraulic parts, drain water from the unit its needed. Close Shutdown valves and open the drain valves.
- Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.





#### **IMPORTANT NOTES**

- All the hydraulic components can be replaced by the front side. For this purpose, remove the indoor unit service cover and the electrical box.
- To properly disconnect components from the Electrical box, see the Electrical wiring diagram chapter of this manual.


#### 11.2.4.1 Replace water flow switch (WFS)

- 1 Remove the indoor unit front cover.
- **2** Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Disconnect the water flow switch (WFS) connector from the front lower side of the indoor unit electrical box.

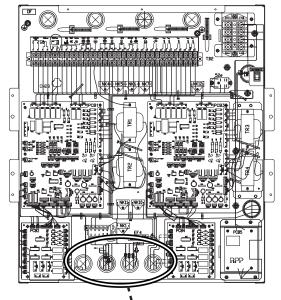

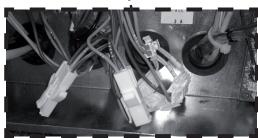

4 Unscrew the flow switch nut.

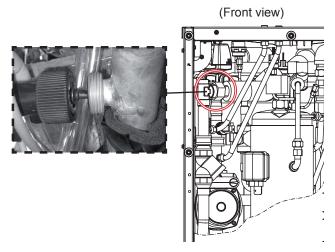


5 Install the new one by performing the procedures above in reverse way.



# NOTE

- Be sure of the position of the flow switch. The arrow has to look down to indicate the correct flow direction.
- Be careful, do not lose the gasket of the water flow switch
- Check the gasket. If it is defective, replace by a new one.

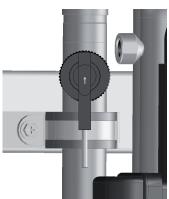


#### 11.2.4.2 Replace water pump (WP1)




# **IMPORTANT NOTE**

Water pump can be replaced by the front side. For this purpose, remove the indoor unit front cover and the electrical box. But, if possible, do the procedure by the left side to ease it and to avoid removing the electrical box.

1 Disconnect the water pump 1 by pulling upwards the faston connection (CN22 connector).

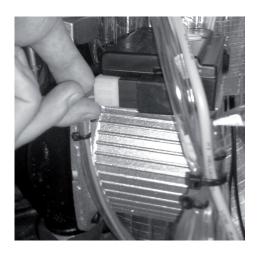

2 Unscrew the both water piping nuts that fix the water pump. Prepare two spanners. Hold one nut with one spanner and loosen the other nut with another spanner by turning the lock nut.

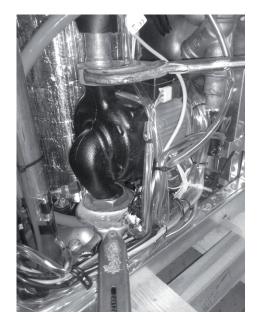


3 Install the new one by performing the procedures above in reverse way.



# NOTE

- Be sure of the position of the water pump.
- Be careful, do not lose the gaskets of the water pump.
- Check the gaskets. If it is defective, replace by a new ones.
- Remember to put pump insulation before pump installation.

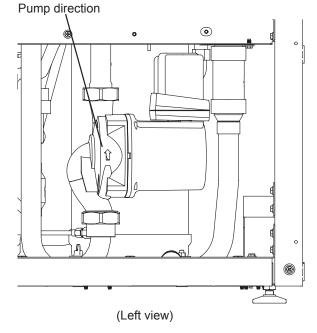

# 11.2.4.3 Replacement of the manometer

- 1 Remove the indoor unit front cover.
- **2** Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.




# NOTE

If possible, remove the upper or left service covers to ease the procedure.

11

3 Remove the three clamps which attach the Manometer capillary pipe with the water pipe.

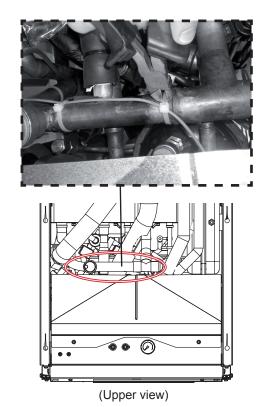

4 Unscrew manometer capillary joint from the water pipe.



**5** Press two rings of the manometer rear side and remove it passing the capillary through the hole of the steel support.



6 Install the new one by performing the procedures above in reverse way.



- Be sure of the position of the manometer.
- Apply teflon to the thread of union before assembling.


# 11.2.4.4 Replacement of the safety valve




# **IMPORTANT NOTE**

Safety valve can be replaced by the front side. For this purpose, remove the indoor unit front cover and the electrical box. But, if possible, do the procedure by the left side to ease it and to avoid removing the electrical box.

1 Unscrew the safety valve's drain pipe from the safety valve and remove it from the drain hole.

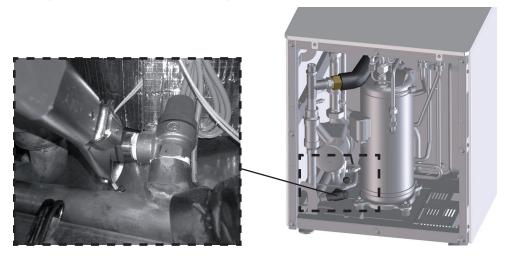

2 Unscrew safety valve from the water pipe.

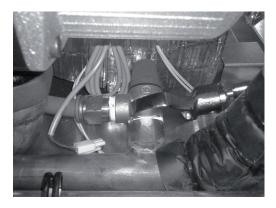


3 Install the new one by performing the procedures above in reverse way.



#### NOTE

- Be sure of the position of the safety valve and its drain pipe.
- · Apply teflon to the thread of unions before assembling.
- For a correct drainage, remember taking the drain pipe connected to the safety valve and pass it through the base hole near the heat exchanger. Place it as far as possible from the indoor unit (\*).

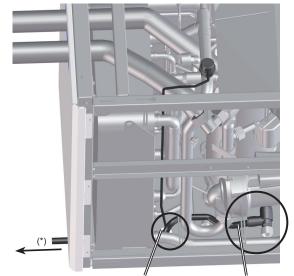

Base hole for drainage

Drain pipe for safety valve

11




# 11.2.4.5 Replacement of the air purger




# **IMPORTANT NOTE**

Air purger can be replaced by the front side. For this purpose, remove the indoor unit front cover and the electrical box. But, if possible, do the procedure by the upper or left sides to ease it and to avoid removing the electrical box.

1 Disconnect drain hose of the air purger as shown in the picture:

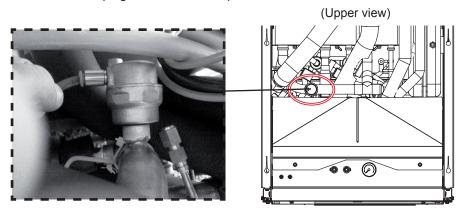

2 Unscrew the air purger from the top of the water pipe

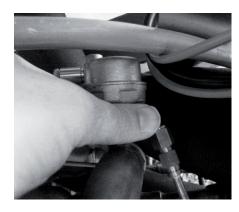


3 Install the new one by performing the procedures above in reverse way.



#### NOTE

- Be sure of the position of the air purger and of its drain hose:
- For a correct drainage, remember taking the drain pipe connected to the air purger and pass it through the base hole near the heat exchanger, together with the drain pipe for safety valve (\*).

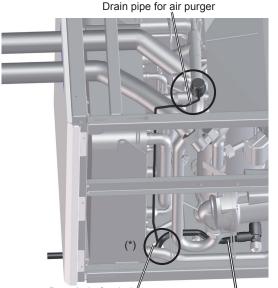


Base hole for drainage Drain pipe for safety valve

# 11.2.4.6 Replacement of the water strainer


#### In case of maintenance (cleaning) or replacing mesh:

The water strainer mesh should be cleaned or replaced depending on its work state.

- 1 Remove indoor unit front service cover.
- **2** Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- **3** Unscrew the water strainer as shown.

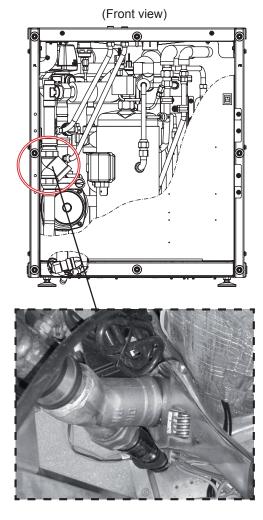

4 Replace or clean the mesh.

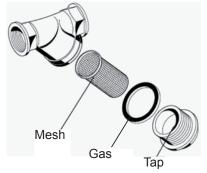

5 Install new mesh if necessary by performing the procedures above in reverse way.




Check the gasket, it is recommended to replace by a new one.




# In case of replacing the entire water strainer.

- 1 Remove indoor unit front service cover.
- **2** Following the explanation of *Removing the electrical box* section until the point 4a, leave the electrical box slightly extracted and rotated 90° to the left.
- 3 Remove insulation of water strainer pipes.

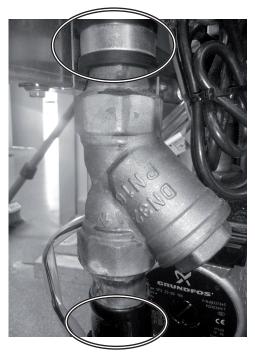

**4** Remove brazing from the two places, and then remove water strainer.

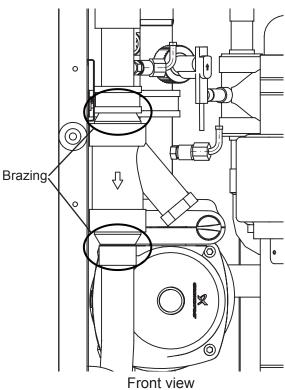

5 Install water strainer by performing the procedures above in reverse way.


# 11.2.4.7 Replacement of the expansion vessel




# **IMPORTANT NOTE**

Water pump can be replaced by the front side. For this purpose, remove the indoor unit service cover and the electrical box. But, if possible, do the procedure by the right side to ease it and to avoid removing the electrical box.

- 1 Close the shut off valves.
- **2** Drain water from the bottom side of the expansion vessel by unscrewing the drain cap.

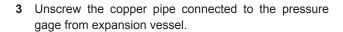

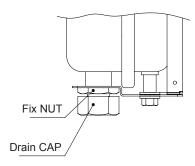

(Right view)



(Right view)



4 Unscrew the expansion vessel as shown in the picture. If the indoor unit right cover is not removed, remove the screws with a little spanner or a torque wrench.



# NOTE

Be sure that the expansion vessel is being subjected all the time.

**5** Remove the expansion vessel with the metal plate by pulling it up in order to remove the hook from the structure.



# NOTE

Be sure that the expansion vessel is being subjected all the time.



6 Install new one by performing the procedures above in reverse way.



# NOTE

- Be careful do not lose the gasket of the expansion vessel.
- Check the gasket (2), if it is defective, replace by a new one.

# 11.2.4.8 Replacement of the space heating pipes


- 1 Remove indoor unit front cover.
- 2 Remove the electrical box.



#### NOTE

If possible, remove the indoor unit upper and left covers to ease the removing procedure.

- 3 If necessary, disconnect the 3-way valve motor (upper part) to ease the removing procedure.
- 4 Disconnect the space heating pipes from the space heating.
- 5 Disconnect the space heating outlet pipe (without elbow) (1") from the T-branch connection for space heating outlet.

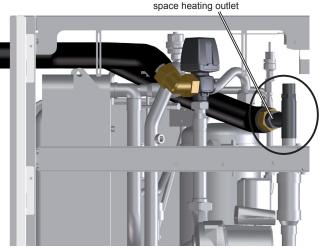

T-branch connection for


(Left side view)

**6** Remove the space heating outlet pipe passing it under the suction compressor and air purger's pipes.




# NOTE

Be careful with the low pressure sensor on the suction pipe when disconnecting the flexible water pipes.

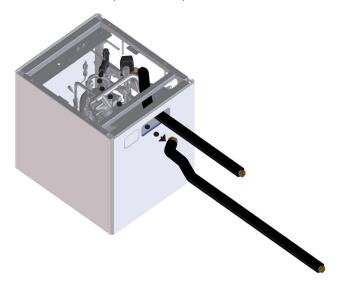


7 Disconnect the space heating inlet pipe (with elbow) (1") from the elbow end to the 3-way valve connection for space heating inlet.

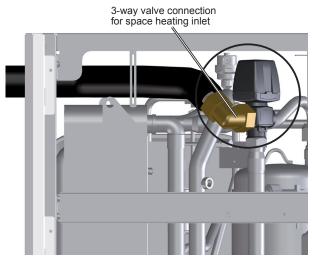

(Left side view)

**8** Remove the space heating inlet pipe from the indoor unit.

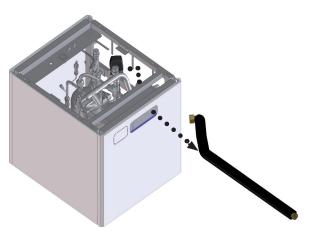


9 Install new ones by performing the procedures above in reverse way.

# 11.2.4.9 Replacement of the DHW pipes

- Remove tank lower front service cover.
- Drain the DHW tank according to its Draining procedure explained in *Maintenance notes* chapter.
- 3 Disconnect the DHW pipes from the space heating.
- 4 Disconnect the DHW pipes from DHW outlet and inlet connections of the tank.



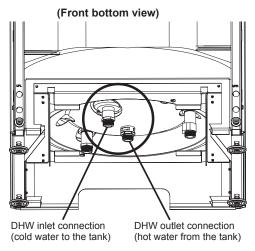

5 Install new ones by performing the procedures above in reverse way.



# 11.2.4.10 Replacement of the heating coil pipes (DHW tank over the indoor unit)

- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.




# NOTE

If possible, remove the indoor unit left cover to ease the removing procedure.

- 3 Remove the tank lower front cover.
- 4 Drain the heating coil according to its Draining procedure explained in *Maintenance notes* chapter.
- **5** Disconnect the heating coil pipes from the heating coil inlet and outlet connections of the tank.



6 Remove the indoor unit cover's protection

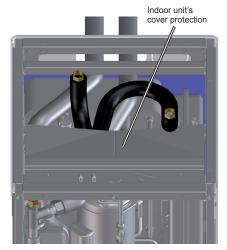


7 If necessary, disconnect the 3-way valve motor (upper part) to ease the removing procedure.

8 Disconnect the heating coil outlet pipe (long pipe 960 mm tube length) (3/4") by its elbow end from the Tbranch connection for heating coil outlet.




# NOTE

Be careful with the low pressure sensor on the suction pipe when disconnecting the flexible water pipes.

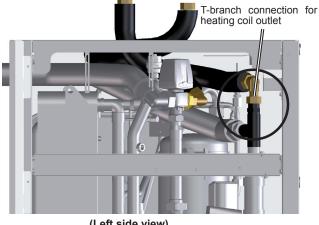


(Left side view)


**9** Remove the heating coil outlet pipe from the indoor unit.

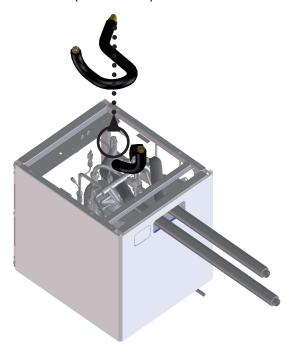

10 Disconnect the heating coil inlet pipe (short pipe 365 mm tube length) (3/4") by its elbow end from the 3-way valve connection for heating coil outlet.

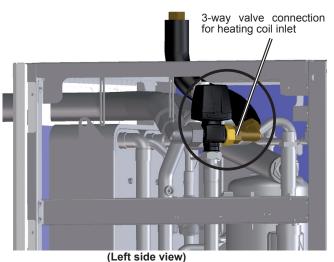


11 Remove the heating coil inlet pipe from the indoor unit.

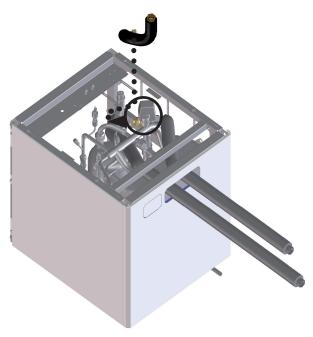

12 Install new ones by performing the procedures above in reverse way.

# 11.2.4.11 Replacement of the heating coil pipes (DHW tank beside the indoor unit)

- 1 Remove the tank lower front cover.
- 2 Drain the heating coil according to its Draining procedure explained in *Maintenance notes* chapter.
- 3 Separate the indoor DHW tank from the indoor unit to ease access to the heating coil pipes.
- 4 Disconnect the the heating coil pipes (connected to the heating coil inlet and outlet of the tank) from the flexible water pipes of the kit ATW-FWP-01 (connected to the 3-way valve and T-branch in the indoor unit)

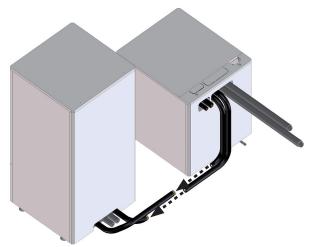

**5** Disconnect the heating coil pipes from the heating coil inlet and outlet connections of the tank.





# 11.2.4.12 Replacement of the flexible water pipes kit (ATW-FWP-01)


- 1 Remove indoor unit front cover.
- 2 Remove the electrical box.




# NOTE

If possible, remove the indoor unit upper and left or right service covers to ease the removing procedure.

- 3 Drain the heating coil according to its Draining procedure explained in *Maintenance notes* chapter.
- 4 Separate the DHW tank from the indoor unit to ease access to the heating coil pipes.
- 5 Disconnect the the heating coil pipes (connected to the heating coil inlet and outlet of the tank) from the flexible water pipes of the kit ATW-FWP-01 (connected to the 3-way valve and T-branch in the indoor unit)

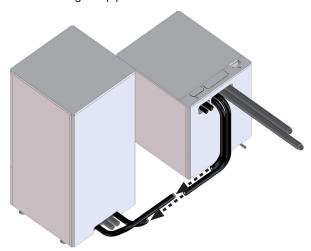

6 Remove the indoor unit cover's protection

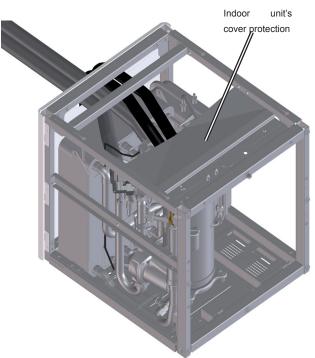

7 If necessary, disconnect the 3-way valve motor (upper part) to ease the removing procedure.

T-branch connection for


heating coil outlet

8 Disconnect the kit pipe for heating coil outlet (1400 mm tube length) (3/4") by its elbow end from the T-branch connection for heating coil outlet.




# NOTE

Be careful with the low pressure sensor on the suction pipe when disconnecting the flexible water pipes.

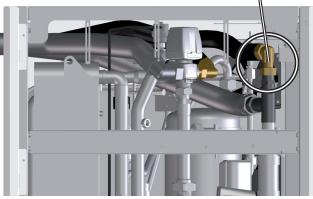


(Left side view)

**9** Remove the kit pipe for heating coil outlet from the indoor unit.

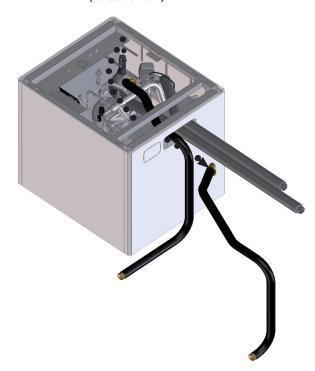


**10** Disconnect the kit pipe for heating coil inlet (1600 mm tube length) (3/4") by its elbow end from the 3-way valve connection for heating coil outlet.

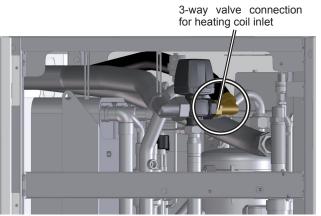

(Left side view)

11

11 Remove the kit pipe for heating coil inlet from the indoor

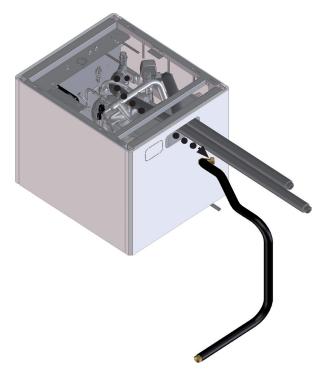

12 Install new ones by performing the procedures above in reverse way.



#### 11.2.5 Replacing refrigerant parts



#### DANGER

- Disconnect the YUTAKI S80 from the power supply before touching any of the parts. Do not touch the electrical box before disconnecting it in order to avoid an electrical shock.
- · Wait minimum 10 minutes from all power supplies have been turned OFF.



#### NOTE

- To properly disconnect components from the Electrical box, see the Electrical wiring diagram chapter of this manual.
- In case of replacing Refrigerant parts, in some cases it is needed to drain water from the unit. Close the shutoff valves and open the drain valves.
- In case of replacing refrigerant parts, collect if necessary R410A and R134a refrigerant according to the pump down procedures explained in Refrigerant and water piping chapter.
- Most of refrigerant parts are connected by brazing. Check to ensure whether there are flammable things around or not when using a burner for pipe connections, if not, oil existing pipe inside may ignite.
- Do not expose the refrigerant cycles to the atmosphere for a long period in order to avoid mixing the water and foreign particles into the refrigerant cycle. After removing refrigerant parts, replace it quickly. If exposed for a long period, seal the liquid pipe and gas pipe.

#### 11.2.5.1 Replace the R-134a compressor

- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.



#### NOTE


If possible, remove the indoor unit upper cover to ease the removing procedure.

- 3 Collect the R134a refrigerant.
- 4 Open the sound insulation cover wrapped around the compressor. Remove the terminal box cover of the compressor. Disconnect the compressor wires connected to the terminal box and remove the sound insulation cover.




#### NOTE


Check and take note of each terminal number and indications for its correct connection at the reassembling process. If wires are connected in incorrect order, it will lead to a compressor failure.

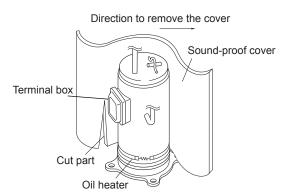

5 Remove the rubber cap and the thermistor on the top of the compressor (THM<sub>D</sub>).

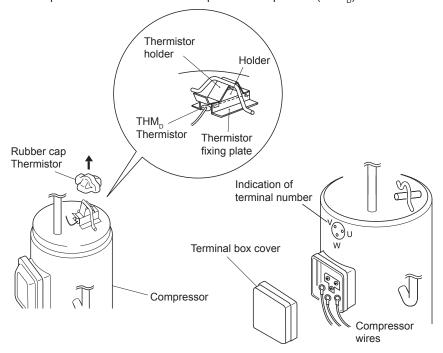

Details for compressor terminals

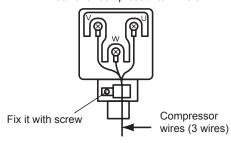

**6** Remove the three (3) crankcase heaters (oil heater on the compressor housing). There are two on the lower part and one on the upper.



7 Remove the suction pipe and the discharge pipe from the compressor. Isolate the wires and electrical components to protect them from the burner flame when brazing the connection pipes.

When replacing the compressor, the brazed material used for connecting the compressor and refrigerant pipes can drop into the pipes and get sucked into the compressor, causing a compressor failure. To avoid this, take the following points into account when replacing the compressor:


**a.** File away brazing material remaining on the end of the refrigerant pipes.



# CAUTION

Be careful to avoid filed brazing material entering into the pipes.

**b.** Insert the pipes fully in to prevent brazing material from entering them.

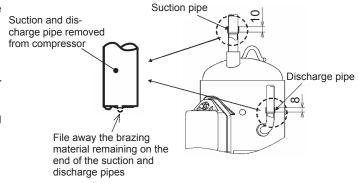

c. Refer to the table for the recommended amount of brazing material. If using more brazing material than the recommended amount, it may drop into the pipes.




# CAUTION

When brazing the pipes, prevent oxidized scale formation by nitrogen substitution.

Thick- ness of brazing material	Piping diameter (refrigerant cycle side) (mm)								
	Ø6.35	Ø9.52	Ø12.7	Ø15.88	Ø19.05	Ø22.2	Ø28.2		
Ø1.6mm	25	30	35	75	100	110	225		
Ø2.0mm	15	15	20	45	55	70	135		
Ø2.4mm	10	10	15	30	35	45	90		

8 Remove the four (4) nuts fixing the compressor and remove the compressor from the unit by lifting it. Slightly incline it forward and lift.

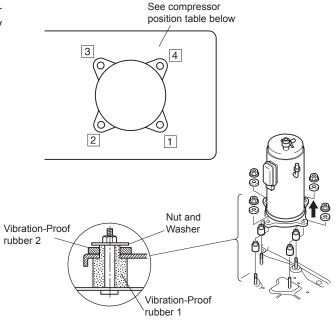

Fixation of the compressor to the bottom plate							
Compressor position	1	2	3	4			
Vibration-proof rubber 1	0	0	0	0			
Vibration-proof rubber 2	0	0	0	0			
Nut	0	0	-	0			
Wind Nut	-	-	0	-			

11



- **9** Reassemble the parts in the reverse order of the indicated removing procedures.
  - Tighten the screws (U, V and W) for compressor wires with 2.5Nm.
  - Fix the lead wire firmly.



#### NOTE

Fix the lead wire for the compressor firmly using a cable tie to avoid the contact between the metal sheet sharp edges and the high temperature piping.

# 11.2.5.2 Replacement of R134a high pressure switch (PHS)





# **IMPORTANT NOTE**

R134a high pressure switch can be replaced by the front side. For this purpose, remove the indoor unit front cover and the electrical box. But, if possible, do the procedure by the upper side to ease it and to avoid removing the electrical box.

- 1 Collect the R134a refrigerant.
- **2** Disconnect the faston terminals from the pressure switch.

High pressure switch structure

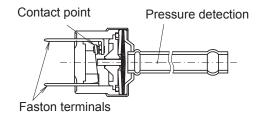

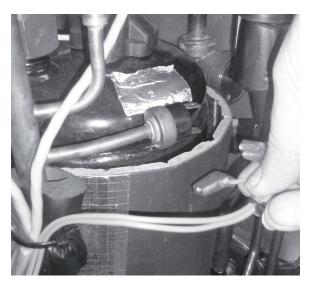

3 Cut the high pressure switch from the brazing neck using a burner.



#### CAUTION

Protect the connecting wires and pipe insulation from the brazing flame.

4 Install new one by performing the procedures above in reverse way.



#### CAUTION

- Do not change the high pressure switch locally or change the high pressure cut-out set value locally. If changed, it will cause serious injury or death due to explosion by high pressure.
- · Do not attempt to turn service valve rod beyond its stop.

#### 11.2.5.3 Replacement of the R134a pressure sensors

- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.



#### NOTE


If possible, remove the indoor unit upper service cover to ease the removing procedure.

- **3** Remove the vibration protection from both pressure sensors:
  - One green (low pressure)
  - One black (high pressure)



4 Remove the pressure sensors:

Prepare two spanners. Hold the fitting with one spanner and loosen the lock nut with another spanner by turning it.

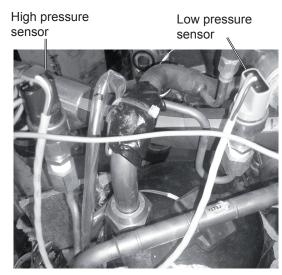


- 5 Disconnect the R134a pressure sensors from the following PCB connectors:
  - R134a low pressure sensor (PS(L)): CN3 (PCB3)
  - R134a high pressure sensor (PS(H)): CN4 (PCB3)




#### CAUTION

Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.

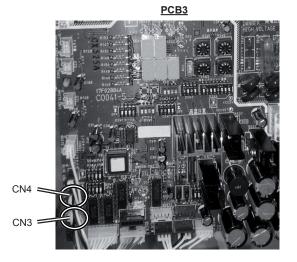

11

**6** Remove all the cables from the various harness lifters and cable ties of the PCB's and then pass the sensor cables to inside the unit through the lower electrical box holes from the electrical box rear side.

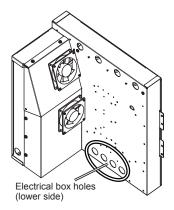

7 Replace the sensors by new ones by performing the procedures above in reverse way.

# 11.2.5.4 Replace the coils for R410A solenoid valves


- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.




#### NOTE

If possible, remove the indoor unit upper or left service covers to ease the removing procedure.


3 Remove the screw fixing the coils to the solenoid valves.

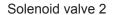

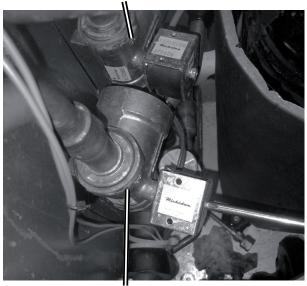

Solenoid valve 1

**4** Remove the solenoid valve coils by pulling them from the solenoid valves.

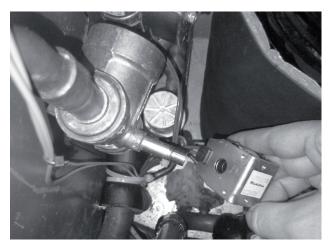


**5** Disconnect the cable of the R410A solenoid valves (SV1, SV2) from the front lower side of the electrical box.



# CAUTION

Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.

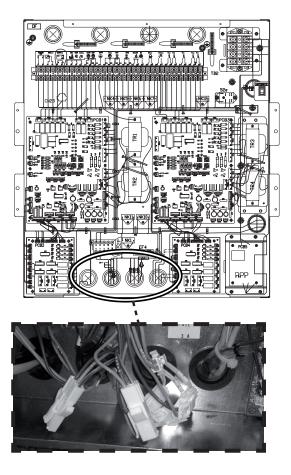

6 Replace the solenoid valve coils by new ones by performing the procedures above in reverse way.




# 11.2.5.5 Replacement of R410A solenoid valves

- 1 Remove the indoor unit left cover.
- 2 Collect the R410A refrigerant according to the instructions of Refrigerant and water piping chapter.
- 3 Remove the solenoid valve coils according to the procedure Replace the coils for R410A solenoid valves.
- 4 Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the solenoid valve.



# **!**\ CAUTION

Protect the connecting wires and pipe insulation from the brazing flame.

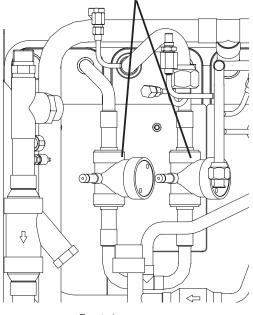

Solenoid valves

Front view

5 Install new ones by performing the procedures above in reverse way.

# 11.2.5.6 Replacement of R134a electronic expansion valve coil

- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.



#### NOTE


If possible, remove the indoor unit upper or right service covers to ease the removing procedure.


- **3** Remove the R134a expansion valve cable (MV2) from its PCB connector:
  - R134a expansion valve (MV2): CN7A (PCB3)





# CAUTION

Electrical hazard. Risk of electrical shock. Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.

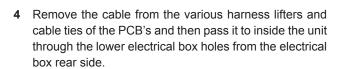

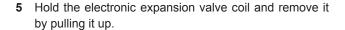

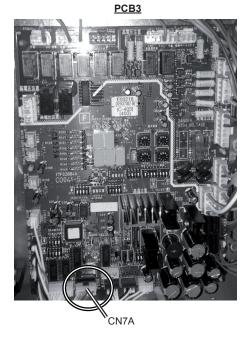

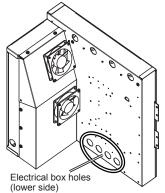



6 Replace the expansion valve coil by new ones by performing the procedures above in reverse way.

# 11.2.5.7 Replacement of R410A electronic expansion valve coil


- 1 Remove the indoor unit front cover.
- 2 Remove the electrical box.



# NOTE

If possible, remove the indoor unit upper or left service covers to ease the removing procedure.

3 The R410A electronic expansion valve (MV1) has an intermediate connector (CN26B) located under the water pump. Remove the cable ties and the Velcro tape for accessing to this connector.

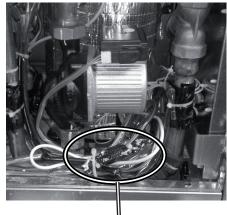



4 Disconnect the CN26B connector.



**5** Prepare two spanners. Hold the part of the valve body with one spanner and loosen the lock nut with another spanner by turning the lock nut counterclockwise.



- **6** Turn the lock nut by a few turns. Then, the drive part separates from the screw and can be removed.
- 7 Prepare the new drive part for replacement (servicing part) with the position of the driver drive screw) already adjusted.



# NOTE

During replacement work, pay attention to the separation part and prevent the dust, foreign particle, etc. from entering into the separation part (the sensitive part of the valve is its mechanical system). Do not damage the junction part of the valve with the tools.



Direction of drive part

- 8 Put the drive part onto the valve body, hold them with their axes matching and attach the lock nut to the screw part of the valve body.
- 9 Tighten the lock nut with spanner after tightening lightly by hand. The tightening torque must be within the range of: 12 Nm 15 Nm.



# NOTE

Do not apply great forces, such as the rotating torque and the bending load, to the motor by holding the motor by hand when you are tightening the lock nut. Although the direction of the eccentric part of the motor is assembled with the eccentric part of the motor directed toward the counter direction of the fittings for piping at the valve body, the alteration of this direction does not affect the open/close function of the valve.


#### 11.2.5.8 Replacement of R134a expansion valve

- 1 Remove the front service cover.
- 2 Remove the electrical box.
- 3 Collect the R134a refrigerant according to the instructions of Refrigerant and water piping chapter.
- 4 Remove the R134a expansion valve coil according to the procedure Replace R134a expansion valve coil.
- **5** Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the expansion valve.



# CAUTION

Protect the connecting wires and pipe insulation from the brazing flame.

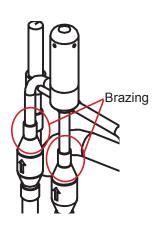

6 Install new one by performing the procedures above in reverse way.


#### 11.2.5.9 Replace R410A expansion valve

- 1 Remove indoor unit left cover.
- 2 Collect the R410A refrigerant according to the instructions of Refrigerant and water piping chapter.
- 3 Remove the R410A expansion valve coil according to the procedure Replace R410A expansion valve coil.
- 4 Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the expansion valve.



#### CAUTION


Protect the connecting wires and pipe insulation from the brazing flame.

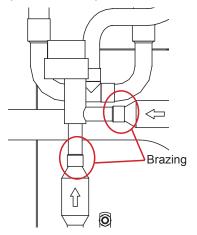

5 Install new one by performing the procedures above in reverse way.

# 11.2.5.10 Replacement of R410A-R134a plate heat exchanger

- 1 Remove the indoor unit rear, left, right and upper covers.
- 2 Collect the R134a and R410A refrigerants according to the instructions of Refrigerant and water piping chapter.
- 3 Remove the expansion vessel according to the procedure Replace expansion vessel.
- **4** Remove refrigerant liquid thermistor (THM<sub>1</sub>) from pipe according to the procedure *Replacing thermistors*.
- 5 Remove refrigerant gas thermistor (THM<sub>G</sub>) from pipe according to the procedure *Replacing thermistors*.
- 6 Remove the affected wires from the clamps.
- **7** Remove the isolation protection affecting the heat exchanger to remove. Cut it and remove the adhesive.

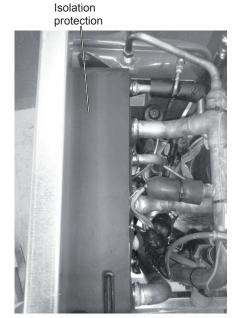


Upper view

8 Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the expansion valve.





# CAUTION

Protect the connecting wires and pipe insulation from the brazing flame. Remove pipe insulation if necessary.

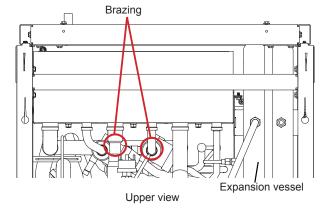

- **9** Remove the two screws fixing the heat exchanger to the heat exchanger support:
  - 1 screw at upper side.
  - 1 screw at bottom side.

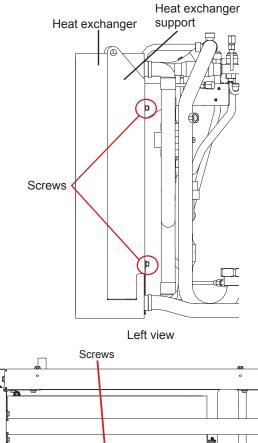

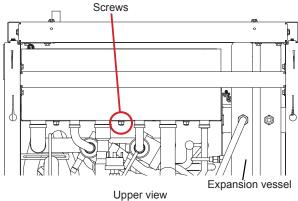

- 10 Remove plate heat exchanger.
- 11 Install new one by performing the procedures above in reverse way.




#### NOTE

Be careful when removing the heat exchanger because of its shape and weight.

#### 11.2.5.11 Replacement of R134a-water plate heat exchanger

In case removing plate heat exchanger and components.

- 1 Remove indoor unit rear, left, right and upper service covers.
- 2 Collect the R134a refrigerant according to the instructions of Refrigerant and water piping chapter.
- 3 Remove refrigerant evaporation heating thermistor (THM<sub>EH</sub>) from pipe according to the procedure Replacing thermistors.
- **4** Remove refrigerant evaporation cooling thermistor (THM<sub>EC</sub>) from pipe according to the procedure *Replacing thermistors*.
- 5 Remove water inlet thermistor (THM<sub>w</sub>) from pipe according to the procedure *Replacing thermistors*.
- 6 Remove water outlet plate heat exchanger thermistor (THM<sub>WO</sub>) from pipe according to the procedure Replacing thermistors.
- 7 Remove the affected wires from the clamps.
- **8** Remove the insulation protection affecting the heat exchanger to remove. Cut it and remove the adhesive.

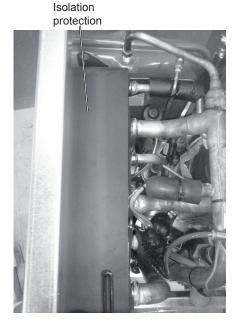


Upper view

**9** Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the expansion valve.




#### CAUTION

Protect the connecting wires and pipe insulation from the brazing flame. Remove pipe insulation if necessary.

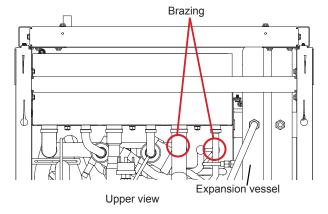

Expansion vessel

- **10** Remove the two screws fixing the heat exchanger to the heat exchanger support:
  - 1 screw at upper side.
  - 1 screw at bottom side.

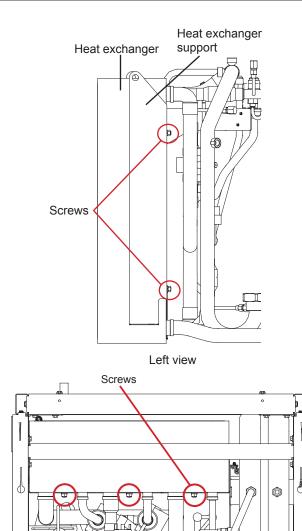

Upper view

- 11 Remove plate heat exchanger.
- 12 Install new one by performing the procedures above in reverse way.




#### NOTE

Be careful when removing the heat exchanger because of its shape and weight.

#### 11.2.5.12 Replace R410A-water plate heat exchanger

In case removing plate heat exchanger and components.

- 1 Remove indoor unit rear, left, right and upper service covers.
- 2 Collect the R134a refrigerant according to the instructions of Refrigerant and water piping chapter.
- **3** Remove refrigerant liquid thermistor (THM<sub>1</sub>) from pipe according to the procedure *Replacing thermistors*.
- 4 Remove refrigerant gas thermistor (THM<sub>c</sub>) from pipe according to the procedure *Replacing thermistors*.
- **5** Remove water inlet thermistor (THM<sub>wi</sub>) from pipe according to the procedure *Replacing thermistors*.
- **6** Remove water outlet plate heat exchanger thermistor (THM<sub>wo</sub>) from pipe according to the procedure *Replacing thermistors*.
- 7 Remove the affected wires from the clamps.
- **8** Remove the insulation protection affecting the heat exchanger to remove. Cut it and remove the adhesive.

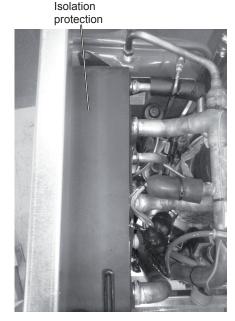


Upper view

9 Remove the brazing as shown in the figure using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the expansion valve.





# CAUTION

Protect the connecting wires and pipe insulation from the brazing flame. Remove pipe insulation if necessary.

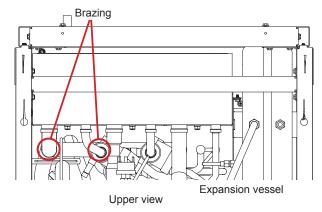

- **10** Remove the two screws fixing the heat exchanger to the heat exchanger support:
  - 1 screw at upper side.
  - 1 screw at bottom side.

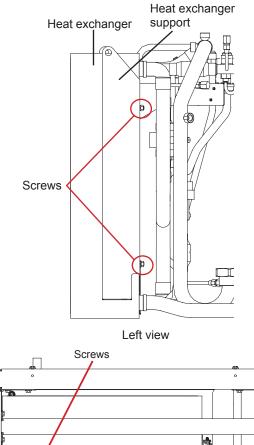

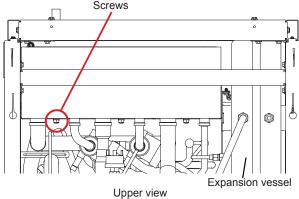

- 11 Remove plate heat exchanger.
- 12 Install new one by performing the procedures above in reverse way.



#### NOTE

Be careful when removing the heat exchanger because of its shape and weight.

# 11.3 DHW Tank



#### CAUTION

- Before performing any of the service operations described in this chapter, turn all the indoor unit main switches off and place security lockers or convenient warning indicators in order to prevent them from turning on accidentally.
- In case of blocked or sticked parts, use appropriated tools and eventually lubricants to release them.
- In case of sharped edged parts, as covers, use security gloves to avoid getting injured.
- When performing brazing work, besides security gloves it is a must to wear convenient eye protection.

# 11.3.1 Removing service covers



#### NOTE

- Front cover needs to be removed for any task inside the tank.
- Back cover, left cover, right cover and upper cover do not need to be removed unless tank's insulation is wanted to be removed.

# 11.3.1.1 Removing the tank lower front cover

1 Remove the tank lower front cover only by pulling it out.





#### NOTE

When reassembling, take into account that this cover is not symmetric. Upper and lower hooks are not at the same distance from the upper and lower cover edges.

#### 11.3.1.2 Removing the tank upper front cover

1 Open the LCD user's interface service cover.



11

2 Unscrew the 2 screws with the nylon washers between the screw and the cover.

3 Remove the tank lower front cover only by pulling it out.





#### NOTE

Take care, do not damage the LCD when removing the service cover.

# 11.3.1.3 Removing the tank insulation protecting the thermostat

**1** Open the tank insulation protecting the thermostat placed near the LCD with the hand.





### 11.3.2 Replacing electrical components



Disconnect the YUTAKI \$80 from the power supply before touching any of the parts.



## NOTE

To properly disconnect components from the Electrical box, see the Electrical wiring diagram chapter of this manual.

#### 11.3.2.1 Replace thermistor

- 1 Remove indoor unit front service cover.
- 2 Remove electrical box.
- 3 Remove the tank upper front service cover.
- 4 Properly disconnect the Tank thermistor THM<sub>DHWT</sub> wires from the 28 and 29 connections of the Terminal Board 2 of the electrical box.
- 5 Remove the two screws of the clamp attaching the thermistor to the tank surface



6 Remove the thermistor by hand and remove the wire sensor from the tank.



7 Install new one by performing the procedures above in reverse way.

## 11.3.2.2 Replacement of the electric heater

- 1 Remove indoor unit front service cover.
- 2 Remove electrical box.
- 3 Remove the tank upper front service cover.
- **4** Disconnect the electric wires (N and L) by unscrewing them from the thermostat.



5 Unscrew the electric heater from the tank and remove it.




6 Install new one by performing the procedures above in reverse way.

## 11.3.2.3 Replacement of the LCD controller




## CAUTION

- Pay attention to do not touch the micro and other components on LCD controller PCB. (This is malfunction protection by static electricity).
- Pay attention to do not disconnect the flat cable between LCD Buttons and LCD PCB.
- 1 Remove the tank upper front service cover.
- **2** Using a flat-head screwdriver, separate the control unit bracket from the front section as indicated.

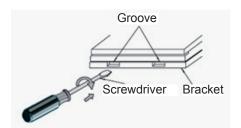

3 Disconnect LCD's connector CN1

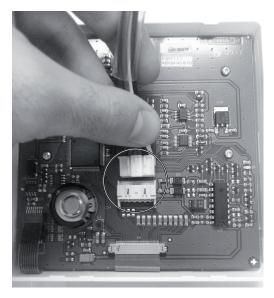

4 Replace LCD controller by a new one.



# 12. Troubleshooting

## Index

12.1.	Normal operation	352
	12.1.1. Normal operation display on PCB1	352
	12.1.2. Normal operation display on PCB3	353
	12.1.3. Normal operation display on LCD controller	353
12.2.	Initial troubleshooting	354
	12.2.1. Unit and System controller - Power supply failure	354
	12.2.2. Abnormal operation of the devices	356
	12.2.3. DHW tank troubleshooting	361
12.3.	Troubleshooting procedure by alarm code	362
	12.3.1. Alarm display	362
	12.3.2. Alarm codes	363
	12.3.3. Troubleshooting by alarm code	367
12.4.	Troubleshooting in check mode	443
	12.4.1. Check mode display	443
	12.4.2. Troubleshooting using the 7 segment display (indoor unit)	443
	12.4.3. Troubleshooting using the 7 segment display (outdoor unit)	447
12.5.	Checking procedure for main parts	453
	12.5.1. Procedure for checking the DIP-IPM inverter for indoor and outdoor units	453
	12.5.2. Procedure for checking the ISPM inverter for indoor and outdoor units	455
	12.5.3. Checking capacitors CB1 & CB2 (RAS-(4-6)HRNME-AF)	457
	12.5.4. Fault diagnosis of DC fan motor.	458
	12.5.5. Checking procedure for the electronic expansion valve for indoor and outdoor units	459




## **12.1 Normal operation**

## 12.1.1 Normal operation display on PCB1

## ◆ Seven Segment display

	Segmen	t Display
	Upper (2 char)	Lower (3 char)
Proceeding initialization (Prduct software XXX)	RH	
Waiting for pump feedback (during unit operation)	РИ	
Unit OFF	ωF	
Heating – Demand OFF		5Ł
Heating – Thermo OFF	, ,	οF
Heating – Thermo ON	hE	on
Heating – Boiler ON		bo
Hot Sanitary Water – Thermo OFF	h5	ωF
Hot Sanitary Water – Thermo ON	בת	on
Swimming Pool – Thermo OFF	SP	οF
Swimming Pool – Thermo ON	זר	ρn
Alarm	AL	Alarm code
Test Run Heating	Łh	
Test Run Cooling (Refrigerant recovery function)	Ec	
Tariff function enabled	HE	ŁAr

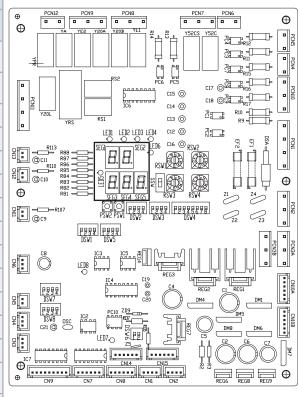


#### **♦ LED indication**

Name	Colour	Indication
LED 1	Green	Pump operation
LED 2	Green	System heater or boiler operation
LED 3	Green	DHW heater operation
LED 4	Red	Heat pump operation (Thermo ON/OFF)
LED 5	Yellow	Operation: Indicates power supply to the unit
LED 6	Red	Alarm (Flickering with 1 sec interval)
LED 8	Yellow	H-Link indication transmission

## 12.1.2 Normal operation display on PCB3

## ♦ Seven Segment display

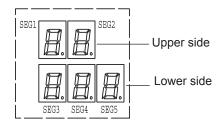

General Indication		Content		
8	8	Proceeding Initialization		
8	8	Power ON (During unit stoppage)		
٥	F	Stoppage by Thermo-OFF		
н	Ε	Heating operation (Normal operation)		
HE←	→PØ	Heating operation (Activation of forced compressor frequency control due to low pressure difference: forced up)		
НЕ←	→P (	Heating operation (Activation of forced compressor frequency control due to high pressure difference:forced down)		
НЕ←	<i>→P2</i>	Heating operation (Activation of forced compressor frequency control due to excessively high discharge pressure: forced down)		
HE←	→P3	Heating operation (Activation of forced compressor frequency control due to excessively high current :forced down)		
HE←	<b>→</b> P4	Heating operation (Activation of forced compressor frequency control due to excessively high inverter fin temperature: forced down)		
HE←	→P5	Activation of forced compressor frequency control due to low pressure		
₽-←	→ <b>0</b> 5	Retry operation (by alarm 02-91, t1 on 7segments)		
₽-←	→ 1 1	Retry operation (by alarm 02-E1 on 7segments)		
₽-↔ 12		Retry operation (by alarm 02-h1 on 7segments)		
₽-←	→ 1 <sup>-</sup> 7	Retry operation (by alarm 51, 52, 53, 54 on 7segments)		
₽-←	→ 18	Retry operation (by alarm 04, 06 on 7segments)		
EΩ	(Flickering)	Initializing electronic expansion valve		

## **♦ LED** indication

Name	Colour	Indication		
LED 1	Green	Power supply indication		
LED 2	-	Not used		
LED 3	-	Not used		
LED 4	Red	Heat pump operation (compressor 2)		
LED 5	Yellow	Alarm (flickering with 1 sec interval)		
LED 6	-	Not used		
LED 8	Yellow	H-Link indication transmission		

## 12.1.3 Normal operation display on LCD controller

The LCD display is an interactive interface that shows all the operation status at real time.



NOTE

Please, refer to chapter LCD user's interface.



## 12.2 Initial troubleshooting

## 12.2.1 Unit and System controller - Power supply failure

If the fuses are blown out or a circuit breaker is activated, investigate the cause of the overcurrent and take the necessary action.

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Power failure or power is not ON			Measure the voltage using a voltmeter	Supply the power
Blown out fuse or activa-	Accidental grounding for live cables		Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
tion of the breaker at the power source	Failure of com	pressor motor	Measure the interphase	Replace compressor and fuse
	Failure of	fan motor	resistance, insulation resistance	Replace fan motor and fuse
	Live cables	short circuit	Check for any un-insulated part of the wires	Remove the cause of the short circuit and replace the fuse
	Short circuit of the co	ontrol circuit to earth	Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
	Failure of the magne- tothermic switch for the compressor	Insufficient contact	Check for magnetother- mic switch to activate correctly	Replace magnetother- mic switch and fuse
		Coil failure	Measure coil resistance	
	Failure of the magne- tothermic switch for the pump	Insufficient contact	Check for magnetother- mic switch to activate correctly	Replace magnetother- mic switch and fuse  Replace auxiliary relay and fuse
		Coil failure	Measure coil resistance	
Blown out fuse at the control circuit	Failure of auxiliary relay  Failure of solenoid valve coil	Insufficient contact	Check for magnetother- mic switch to activate correctly	
		Coil failure	Measure coil resistance	
		Coil failure	Measure coil resistance	Replace coil and fuse
	Short circuit in PCB		Check for the existance of any conductive contaminants	Remove the particles and replace fuse
	Oil heater failure		Meassure resistance	Replace heater and fuse
	Failure of freeze protection heater for water piping		Meassure resistance	Replace heater and fuse
Failure of the transformer			Check the transformer voltage output	Replace the transformer

Observed failure	Cause	Check item	Action (Turn OFF the main switch)
Syste	em controller cable disconnected	Connect the cable	Replace the cable or repair the cable
One (or several) phase t	chase failure, or inverted phase order ("#5" alarm). Only in three phase unit.  Check the connection of R,S and T phase.		Reorder the phases
Failure of remote/le	ocal switch or remote/local switch set at "local"	Check remote/local switch	Turn the switch to "re- mote" or replace switch
Deficient contact at	Insufficient connection or incorrect connection of the PCB	Check the connectors and terminals	Remove rust, dust or any contaminants, check the correct tightening of the terminals
terminal controller con- nectors	Insufficient connection or incorrect connection of the terminal in remote controller		
F	ailure of the system controller	Refer to "Troubleshooti	ng of system controller"
Lindefined DCD feiture	Unconnected wires to PCB	Check the connectors	Correctly connect the wires
Undefined PCB failure	Failure of PCB	Check PCB through its self-diagnostic mode	Replace PCB if it failed
Incorrect wiring connection		Take action according to played in "	the procedure that is dis- FEST RUN"



## 12.2.2 Abnormal operation of the devices

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Blown out fuse at the	Pump block		Check water freezing or clogging	Removes the clogging
pump suction	Over current	t of the pump	Check pump current	Replace the pump
	Insufficient	t water flow	Check inlet and outlet water temperature difference	Increase the water flow
	Pump reve	erse rotation	Check pump running direction	Connect correctly the pump wiring
	Air mixed i	in the water	Check air purger	Empty the air contained
	Water inlet and outlet tem	nperature themistor failure	Measure the thermistor resistance	Replace the thermistor
	Pump reve	erse rotation	Check the rotation di- rection	Change rotation direction
Freeze protection control activated	Water outlet temperature excessively low		Check that water outlet temperature is not out of working range	Check correct installa- tion
	Clogging of the water strainer		Check the water strainer	Remove the clogging
	Clogging of the water side heat exchanger		Check the water side heat exchanger	Chemical cleannig
	Malfunction of the low pressure sensor		Sensor wiring - Check the sensor characte- ristics	Fix wire.  Replace low pressure sensor
	Gas leakage or low quantity of refrigerant		Check leakage and super-heat	Charge correctly the refrigerant quantity
		Insufficient water flow	Check the water tem- perature difference bet- ween inlet and outlet	Increase the water flow
		Too much refrigerant	Check clogging of dis- charge side pipe	Remove the clogging
		Clogging of the expansion valve	Check clogging of dis- charge side pipe	Remove the clogging
Unit stopped in heating operation	High cut caused by Pd (high pressure) surpas- sing	Clogging strainer (not water)	Check the temperature difference before/after strainer	Replace or cleaning strainer
		Clogging of the 3-way valve	Check the clogging	Remove the clogging or replace the 3-way valve
		Water scale attaching inside the water side heat exchanger	Check the water side exchanger	Chemical cleaning
		Excessively high water outlet temperature	Check water tempera- ture	Check the installation

Observed failure	Car	use	Check item	Action (Turn OFF the main switch)
		Malfunction of the 3-way	Check gas leakage or shortage of refrigerant	Replace the 3-way valve
			Malfunction of check valve	Replace check valve
		valve and also internal leakage	Clogging of the expansion valve	Remove the clogging
	Excessively high discharge gas temperature		Clogging of the refrige- rant side strainer	Replace or clean the strainer
	(too much super-heat)	Failure discharge gas temperature thermistor	Measure the resistance of thermistor	Replace the thermistor
		Failure liquid bypass solenoid valve	Check solenoid valve	Replace the solenoid valve
		Clogging of the solenoid liquid solenoid bypass capilary	Clogging of capilary	Replace capilary
		Excesive current consumption	Voltage supply too high/	Check the limits in "wor-king range".
	Over current compressor			(I-III phase)
Unit stopped in heating			Check the interface impedance or power supply	Measure each interface voltage & contact the electrical coMPany
operation			Excessively high pressure in the high pressure sensor	Check the cause
		Single or double phase operation (only 3 phase model)	Check the main fuse	Replace the fuse
			Check the loose of the screw power supply terminal	Tighten the screw
			Check contact point or magnetic contact for compressor	Replace magnetic contact
		Failure compressor bearing	Check bearing seal state	Replace the compressor
	Over current compressor	Failure in the compressor motor insulation	Check insulation resistance	Replace the compres- sor (option "replace the insulation")
		Failure current sensor for compressor	Check the connector	Repair the wiring con- nection or replace the current sensor
	Blown out fuse at the	Blocked pump	Check if there exist any solid particle, or iced water	Chemical cleaning of the foreign particle
	pump circuit	Failure of the magnetic contact of the pump	Check the magnetic contact	replace the magnetic contact



Observed failure	Cause		Check item	Action (Turn OFF the main switch)
	Automatic defrost is de- activated	Failure of the thermistor	Measure the resistance of the thermistor	Replace the thermistor
		Failure of the 3-way valve	Check the activation 3-way valve	Replace the 3-way valve
A lot of ice is attached on the airside	Short circuited		Check obstacles around the unit	Remove the obstacles
(heating mode heat exchanger)	Failure of the low pressure sensor		Check the display pressure and actual pressure	Remove the low pressu- re sensor
	Unit is in ice condition		-	Perform manual defrosting
Unit is stopped by high- cut in defrost operation	Failure of high pressure sensor		Check the pressure & actual value of the high pressure sensor	Replace high pressure sensor

Observed failure	Ca	use	Check item	Action (Turn OFF the main switch)
	Heating load is higher	than heating capacity	Check the heating load	Install an adequate size unit
	Excessively low suction pressure	Gas leakage	Check gas leakage & super-heat	Charge correctly the quantity of refrigerant
	Clogging of the	expansion valve	Check the clogging of expansion valve	Remove clogging
	Clogging of	the strainer	Check temperature difference before/after strainer	Clean or replace the strainer
	Clogging of side	low pressure pipe	Check the temperature difference of each pipe	Remove the clogging
	Malfunction of	the check valve	Check the difference temperature before/after check valve	Replace the check valve
	Shortage air flow in the air side heat exchanger		Excessively dust in airside heat exchanger	
			Clogging of the inlet/ outlet at the air side heat exchanger is clock	Remove it
Insufficient heating pro-			Shortage the service space for YUTAKI unit	Secure service space
cess			Device rotation fan motor	Correct wiring of the fan motor
	Air temperature through heat exchanger air flow		Check the air short circuit	Repair short circuit
	Defrosting it is not enough		Check the evaporating thermistor	Replace the thermistor
			Check the 3-way valve	Replay 3-way valve
		Shortage of waterflow	Check the difference of temperature between inelet/outlet of the unit	Increase the water flow
		Pump reverse rotation	Check the rotation di- rection	Correct the direction
	Excessively high dis- charge pressure	Air mixing in the water	Check air purger	Empty the air contained
		Excessively high hot water temperature	Check the water ther- mistor of the unit	Replace the water ther- mistor or PCB
		Refrigerant excessively discharged	Check refrigerant cycle temperature	Charge the correct quantity



Observed failure	Cause		Check item	Action (Turn OFF the main switch)
		Non-condensable gas in the refrigerant cycle	Turn off the unit & check the relation between temperature and pressure	Evacuate and charge refrigerant again
	Excessively high discharge pressure	Clogging of the high pressure pipe	Check the clogging	Remove ghe clogging
		Clogging of the expansion valve	Check the clogging	Remove the clogging
Insufficient heating pro		Clogging of the strainer	Check the difference temperature before/after strainer	Replace the strainer
Insufficient heating pro- cess		Water scale is attached in the water side heat exchanger	Check the heat exchanger	Chemical cleaning
		Malfunction or internal leakage of the 3-way valve	Check the difference temp. between inlet & outlet of the 3-way valve	Replace the 3-way valve
		Wiring failure of the 3-way valve	Check the electrical continuity at the termilnals	Repair wiring or replace 3-way valve
		Failure compressor	Check pressure cycle temperature & running current	Replace the compressor
Unit is running but does not make any sound	Unit propeller fan i	it propeller fan is hitting the shroud Visually in		Adjust the position of the propeller fan
	Abnormal sound form the compressor	Faulty installation	Check that each part is tightly fixed	Tightly fix each part
		Liquid ref. compression	Adjust the suction gas temperature and pressure	Ensure super-heat
		Wear or breakage of the internal compressor parts	Abnormal sound from the inside of the compressor	Replace the compressor
		No heat by the oil heater	Check the resistance of the oil heater and it's fuse	Replace the oil heater and the fuse
	Humming sound from t	Humming sound from the magnetic conductor		Replace the magne- tothermic switch
	Abnormal vibration	on of the cabinets	Check each fixing screw	Tightly fix each screw


#### 12.2.3 DHW tank troubleshooting

Observed failure	Cause	Check item	Action		
		procesure (< 0.4MD)			
		(must be >0, mira)	, , ,		
Problems in water circuit due to low water pressure or no water in water circuit	Water pressure < 0,1 MPa	(must be >0,1MPa)  Check if water circuit is locked  Check if there is water leaks  Check connection between indoor TB2 and DHWT  Check if water circuit is locked  Check security and check valves and water circuit to ensure water circuit, Flexible pipes and pipe connections and repair leaks if exist  Terminals 28&29 from TB2 connected to DHWT Thermisto connection	ves and water circuit to ensure		
Problems in water circuit due to	Thermostat cut-out activated		connected to DHWT Thermistor		
excesive water temperature in water circuit	(Excesive water temperature higher than 90°C)	Check if water circuit is locked  Check if there is water leaks  Check connection between indoor TB2 and DHWT  Check water temperature and thermostat state  Ves and water circuit to ensure water circuit, Flexible pipes and pipe connections and repair leaks if exist  Terminals 28&29 from TB2 connected to DHWT Thermisto connection  Push reset button for thermostat re-start			
		Check set temperature	Set it at the correct temperature		

#### **♦ DHW tank electric heater "emergency" operation**

The domestic hot water tank can be heated by means of an internal heater in the event of malfunction of either the outdoor or the indoor unit. A dedicated switch (SW1) is used to activate this function. This switch (SW1) is located at the front cover of the electrical box (accessible by removing the indoor unit front cover) and it is in "Automatic" operation by factory setting.

In order to activate the internal heater of the tank, select the "Emergency" operation in the switch. In this case, the temperature setting shall be performed through the heater's thermostat. Select the temperature with the temperature regulator located at the front side of the tank (maximum position is 85°C).

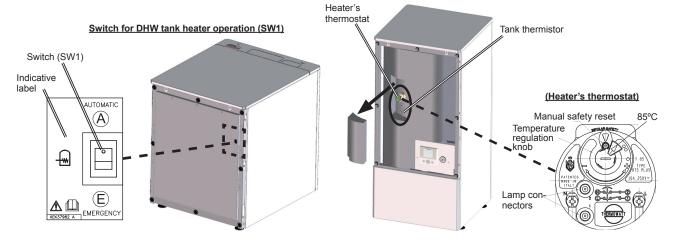




## 12.3 Troubleshooting procedure by alarm code

#### 12.3.1 Alarm display


#### **♦** Alarm code indication on LCD controller

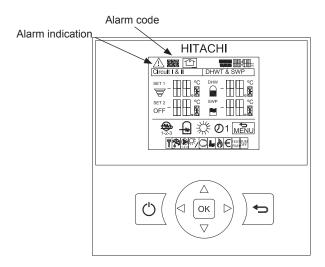

#### ◆ Alarm code indication on 7 segment


#### **Indoor unit**

Position of the 7 segment at the indoor PCB1:

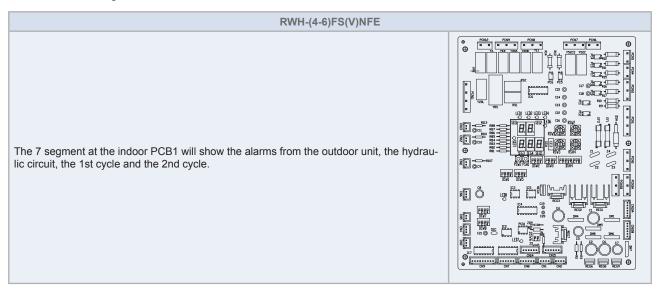

#### **Oudoor unit**

Position of the 7 segment at the outdoor PCB:

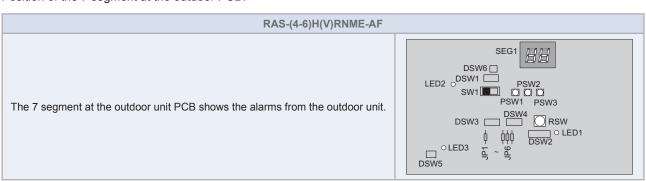

## 12.3.2 Alarm codes

LCD display	7 segment display	Origin	Detail of abnormality	Main factors
02	02	Outdoor	Activation of outdoor unit protection device (Except for alarm code 41, 42)	High pressure interrupting device activated
03	03	Outdoor - 1st cycle	Transmission error	Outdoor fuse meltdown, Indoor/outdoor connection wiring (breaking, wiring error, etc.)
04	<u> </u>	Outdoor	Inverter transmission abnormality	Control PCB – Inverter PCB connection wiring (breaking, wiring error, etc.)
05	85	Outdoor	Power phase detection abnormality	Power source wiring open phase in indoor units
06	05	Outdoor	Undervoltage, overvoltage	Outdoor PCB abnormality, inverter PCB abnormality, DM, CB abnormality
07	רם	Outdoor	Abnormal decrease of discharge gas superheat degree	Excessive refrigerant, expansion valve open-locked, fan motor locked
08	08	Outdoor	Compressor-Top temperature over-increase	Shortage or leakage of refrigerant, piping clogging, fan motor lock
11	11	Hydraulic	Water inlet thermistor abnormality (THM <sub>WI</sub> )	Loose, disconnected, broken or short-circuited connector
12	12	Hydraulic	Water outlet thermistor abnormality (THM <sub>WO</sub> )	Loose, disconnected, broken or short-circuited connector
13	13	1st cycle	Indoor liquid pipe temperature thermistor abnormality (THM, )	Loose, disconnected, broken or short-circuited connector
14	14	1st cycle	Indoor gas pipe temperature thermistor abnormality (THM <sub>G</sub> )	Loose, disconnected, broken or short-circuited connector
15	<i>1</i> 5	1st cycle	Water outlet circuit 2 thermistor abnormality (THM <sub>WO2</sub> )	Loose, disconnected, broken or short-circuited connector
16	15	1st cycle	Water DHWT thermistor abnormality (THM <sub>DHWT</sub> )	Loose, disconnected, broken or short-circuited connector
17	17	1st cycle	Water swimming pool thermistor abnormality (THM <sub>SWP</sub> )	Loose, disconnected, broken or short-circuited connector
18	18	1st cycle	Water outlet 3 thermistor abnormality (THM <sub>WO3</sub> )	Loose, disconnected, broken or short-circuited connector
20	20	Outdoor	Compressor-Top temperature thermistor abnormality (THM9)	Loose, disconnected, broken or short-circuited connector
21	21	1st cycle	2nd ambient thermistor abnormality (THM <sub>AMB2</sub> )	Loose, disconnected, broken or short-circuited connector
22	22	Outdoor	Outdoor temperature thermistor abnormality (THM7)	Loose, disconnected, broken or short-circuited connector
24	24	Outdoor	Failure of outdoor unit refrigerant evaporation temperature thermistor (THM8)	Loose, disconnected, broken or short-circuited connector
31	3 I	Outdoor	Indoor/Outdoor combination setting error	Outdoor/Indoor unit capacity setting error, indoor total capacity excessively large/small
35	35	Outdoor	Indoor unit number setting error	Indoor units with the same number exist in a refrigerant piping system
38	38	Outdoor	Outdoor protection detection circuit abnormality	Outdoor PCB abnormality, error in wiring to outdoor PCB
41	41	Outdoor	Pump down overload	Outdoor heat exchanger clogging/short circuit, broken outdoor fan
42	42	Outdoor	Heating overload	Outdoor heat exchanger clogging/short circuit, expansion valve close-locked
47	47	Outdoor	Suction pressure decrease prevention activated	Shortage or leakage of refrigerant, piping clogging, expansion valve close-locked, fan motor locked
48	48	Outdoor	Overload operation protection activation	Cycle abnormality, Inverter PCB abnormality, DM abnormality, heat exchanger clogging, etc.
51	5 /	Outdoor	Inverter current sensor abnormality	Error in CT wiring, outdoor PCB abnormality, Inverter PCB abnormality
53	53	Outdoor	Inverter module error	Compressor, ISPM abnormality, heat exchanger clogging, etc.
54	54	Outdoor	Inverter fin temperature abnormality	Fin thermistor abnormality, heat exchanger clogging, fan motor abnormality
55	55	Outdoor	Inverter non-operation	Inverter not operating or broken

LCD display	7 segment display	Origin	Detail of abnormality	Main factors
57	57	Outdoor	Abnormality of fan motor protection (DC fan motor)	-
63	53	Comuni- cation	Transmission error between central control interface (KNX, etc) and indoor units	Indoor fuse meltdown, wiring connection of indoor/central control interface (breaking, wiring error, etc.)
EE (100)	EE	Outdoor	Compressor factor alarm	Alarm to notify damage to compressor occurs 3 times within 6 hours
70	םר	1st cycle	Hydraulic alarm	Water pressure or water flow is not detected in the hydraulic cycle
73	73	1st cycle	Mixing over-temperature limit protection for mixed circuit	Circuit 2 supply temperature > Target temperature + offset
74	74	1st cycle	Unit over-temperature limit protection	Water supply temperature (Two) is 5°C more than maximum water circuit temperature for 20 sec.
75	75	Hydraulic	Freeze protection by cold water inlet temperature detection	The inlet water temperature is lower than 2 °C.
76	75	Hydraulic	Freeze protection stop by indoor liquid refrigerant temperature thermistor	-
77	77	1st cycle	Opentherm communication failure	No Opentherm communication for a continuous period of 1 minute
78	78	1st cycle	RF communication failure	There is no communication for 1 hour with one or two RF receivers which are bound to the RF-Bridge.
79	79	1st cycle - outdoor	Unit capacity setting error	There is no concordance between indoor out-door unit capacity
80	80	1st cycle - LCD	LCD H-link transmission error	No H-LINK communication for a continuous period of 1 minute between Indoor and LCD User control by connection wiring (breaking, wiring error, etc.)
101	DZ↔H I	2nd cycle	Activation of high pressure switch	The high pressure (Pd) is higher than 3 MPa.
102	DZ↔h (	2nd cycle	Activation of protection control for excessively high pressure	The high pressure (Pd) is higher than 2.78 MPa during 10 seconds.
103	Ø2↔L 1	2nd cycle	Activation of protection control for excessively low pressure	The suction pressure (Ps) is lower than 0.15 MPa during 1.5 minutes.
104	<b>□</b> 2↔⊾ 1	2nd cycle	Activation of low pressure control	The suction pressure (Ps) is lower than 0.1 MPa during 3 seconds.
105	DZ↔E I	2nd cycle	Excessively low pressure difference	The pressure ratio calculated from high pressure (Pd) and low pressure (Ps) is lower than 1.8 MPa during 3 minutes.
106	02↔51	2nd cycle	Excessively high discharge gas temperature	The discharge gas temperature is increased to 120 °C during 10 minutes or is higher than 140 °C at least 5 seconds.
124	21	2nd cycle	Abnormality of fixed resistance 1 (THM <sub>DUMMY</sub> )	The fixed resistance short-circuited or cut.
125	22	2nd cycle	Failure of inverter ebox ambient temperature thermistor (THM <sub>EBOX</sub> )	The ambient temperature thermistor is short-circuited or cut.
126	23	2nd cycle	Failure of discharge gas temperature thermistor (THM $_{\rm D}$ )	The discharge gas temperature thermistor is short-circuited or cut.
127	514	2nd cycle	Abnormality of fixed resistance 2 (THM <sub>DUMMY</sub> )	The fixed resistance short-circuited or cut.
128	25	2nd cycle	Failure of suction gas temperature thermistor (THM <sub>s</sub> )	The suction gas temperature thermistor is short-circuited or cut.
129	27	2nd cycle		The high pressure sensor is short-circuited or cut.
130	28	2nd cycle	Failure of suction gas pressure sensor	The low pressure sensor is short-circuited or cut.
132	ДЧ	2nd cycle	Abnormal transmission between Inverter PCB and Main PCB	The communication between Main PCB (PCB1) and Inverter (DIP - IPM/ISPM) is not performed correctly during 30 seconds.
134	05	2nd cycle	Abnormality of Power Supply Phase	The power source phases are reversely connected or one phase is not connected.
135	30	2nd cycle	Incorrect PCB Setting	Wrong settings are performed in DIP switches on PCB.



LCD display	7 segment display	Origin	Detail of abnormality	Main factors
136	40	2nd cycle	Incorrect PCB operation	Wrong settings are performed in DIP switch on PCB or prohibited operation is performed.
151	05	2nd cycle	Excessively low voltage or excessively high voltage for the inverter	The voltage between terminal "P" and "N" of ISPM is insufficient.
152	5 (	2nd cycle	Abnormal operation of the current sensor	The compressor frequency is maintained at 15 - 18 Hz after the compressor's start up, one of the absolute values of the running current at each phase U+, U-, V+ and V- is lower than 1.5 A.
153	52	2nd cycle	Activation of protection for inverter instantaneous over current	The compressor current is higher than the set value.
154	53	2nd cycle	Transistor module protection activation	The transistor module detects an abnormality 3 times in 30 minutes.
155	54	2nd cycle	Increase in the inverter fin temperature	The temperature of the thermistor for inverter fin exceeds 100 °C.



## **♦** Cause of compressor stop

When the compressor stops due any of the factors below, Stop Reason Code (d1 Code) is sent to Indoor Unit.

The Code will be overridden when another Code is sent before it.

Stop Reason Code	Stop Factors	52C Process
02	Alarm	OFF
03	Freeze protection	ON
05	Momentary power failure detection in Outdoor Unit	OFF
07	Outdoor air temperature and indoor suction temperature for heating (Overload condition)	ON
07	Stop due to outdoor heating temp. lower than -20 °C (Low temp. condition)	ON
10	Demand (external input)	ON
40	Discharge pressure increase prevention for heating	ON
13	Discharge pressure increase prevention for heating by control of former refrigerant piping	ON
	Gas shortage detection (detected by pipe temperature: gas shortage detection I)	OFF
15	Gas shortage detection (detected by compressor-top temperature: gas shortage detection II)	OFF
	Compressor-top overheating	OFF
16	Abnormal decrease of discharge gas superheat degree	ON
17	Inverter trip (Instantaneous overcurrent, Electronic thermal activation, Current sensor abnormality)	OFF
18	Inverter trip (Inverter undervoltage, Overvoltage, Transmission error, Microcomputer reset)	OFF
19	Prevention Control for expansion valve opening deviance	OFF
22	Outdoor unit Heat Start Control	OFF
24	Energy saving mode Thermo OFF	ON


### 12.3.3 Troubleshooting by alarm code

Alarm code



Activation of the safety device in the outdoor unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm is indicated when one of safety devices is activated during compressor running.

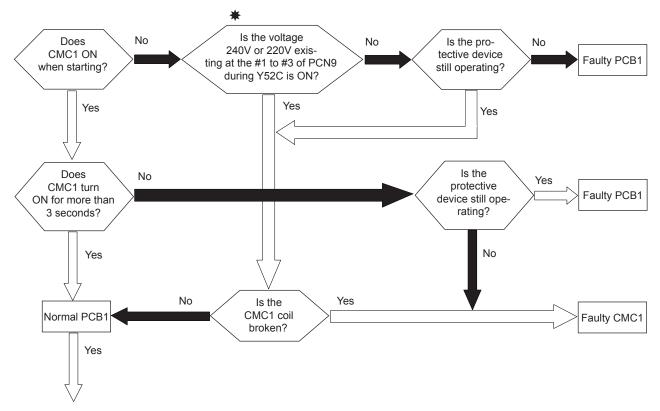

Check activation of the following safety devices and the power source wiring.

Remove the cause after checking.

(1) High pressure switch


(PSH: 4.15MPa (41.5 kgf/cm<sup>2</sup>G))


(2) Is the power source line reverse phase or open phase?

If the wiring is incorrect, perform the wiring correctly again.

\* Check item

Connector No.	Pin No.
PCN9	#1 to #3

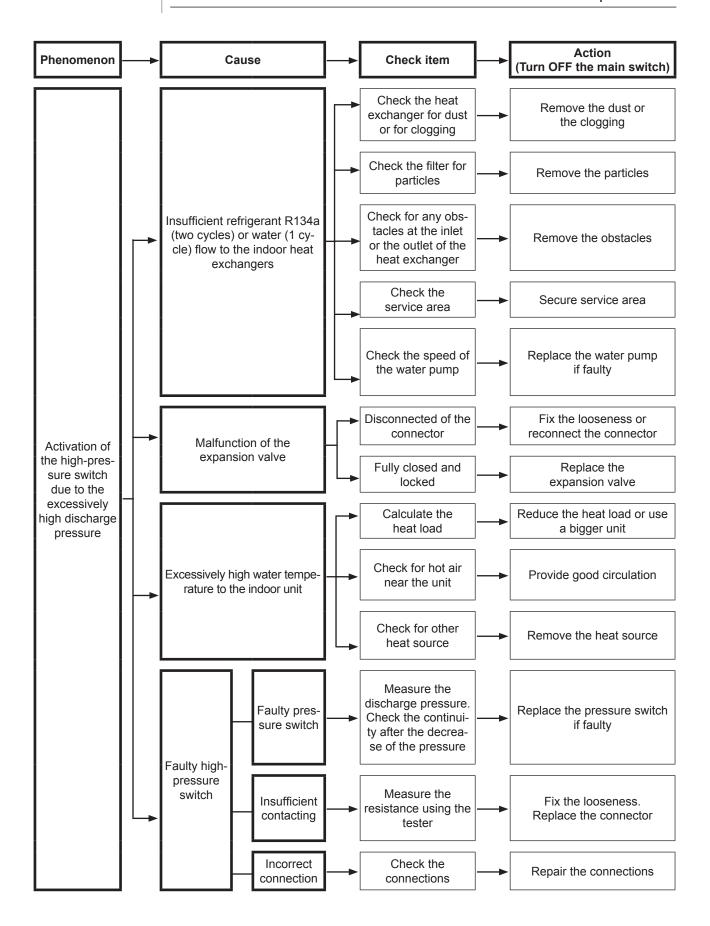

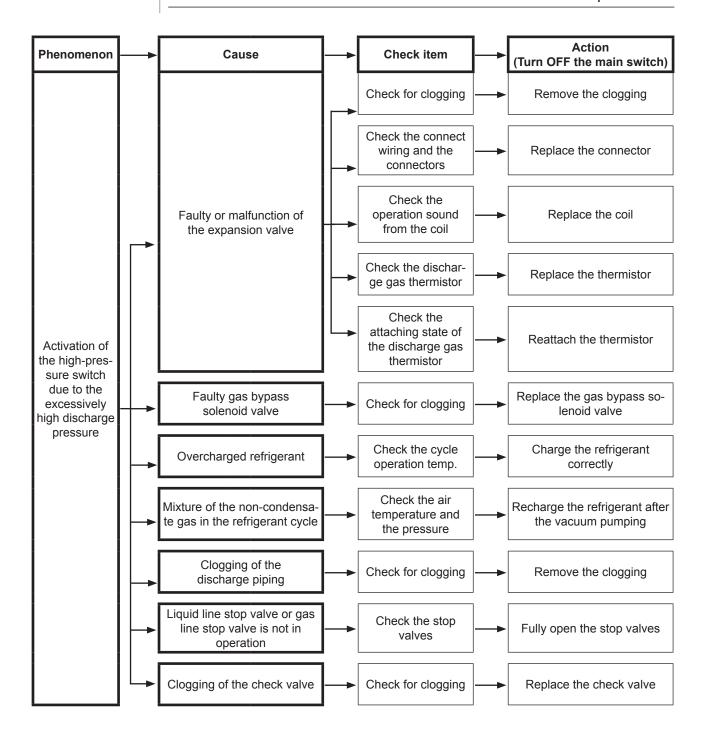






Abnormal transmission between the indoor unit and the outdoor unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm is displayed when an abnormal operation is maintained for three minutes after the normal transmission between the indoor unit and the outdoor unit. Also, an abnormal operation is maintained for 30 seconds after the micro-computer is automatically reset. The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the outdoor unit.
  - Investigate the cause of the overcurrent and take the necessary action when the fuses are blown out or the breaker for the outdoor unit is activated.

(Refer to the next page)

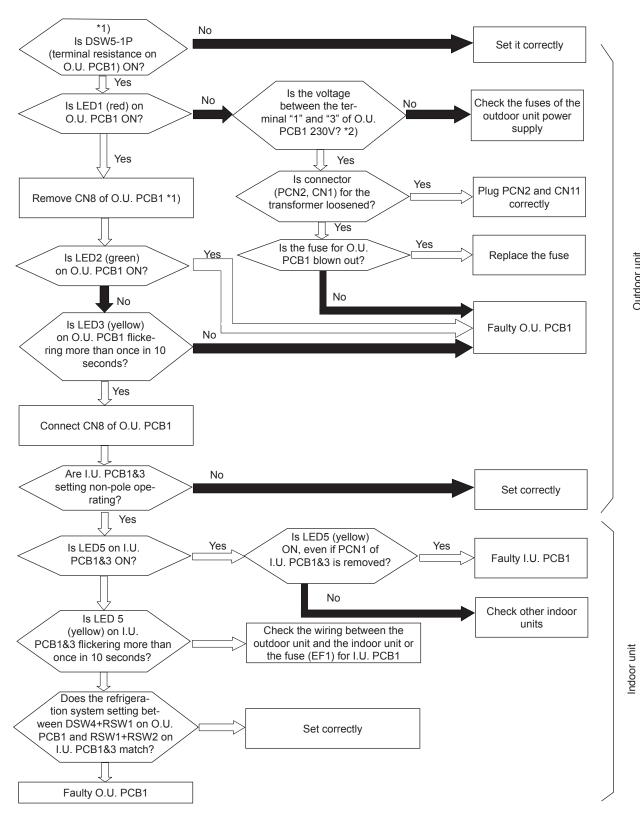

- \*1) In case that terminal resistance (DSW5-1P) is OFF when H-Link II connection is performed.
- · Set the terminal resistance to ON when CN8 is removed.
- Set the terminal resistance to OFF when CN8 is reconnected.
- \*2) Check item

Power supply	Faston terminal
1~ 230V 50Hz 3N~ 400V 50Hz	Between 1 and 3 of PCN1 on O.U. PCB
	1




*	1	١
	ı	)


PCB1 output voltage	Voltage
Vcc 12 - GND2	12VDC
Vcc 05 - GND1	5 VDC
Vcc 15 - GND1	15 VDC
Vcc 24 - GND1	24 VDC
Vcc 12T - GND1	12 VDC



Abnormal transmission between Inverter PCB2 and Outdoor PCB1

- · The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm is displayed when the abnormal operation is maintained for 30 seconds after the normal transmission between the outdoor unit PCB1 and inverter PCB2. Also, the abnormal operation is maintained for 30 seconds after the micro-computer is automatically reset. The alarm is displayed when the abnormal transmission is maintained for 30 seconds from the starting of the outdoor unit.

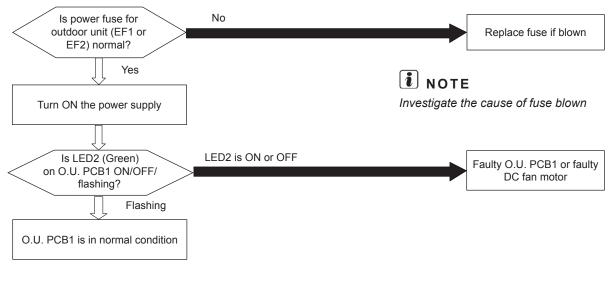


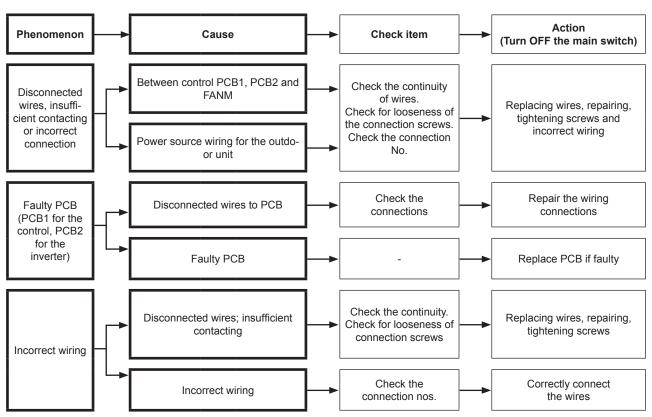



Code abnormal operation of picking up phase signal


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm is displayed when the main power source phase is reversely connected or one phase is not connected.

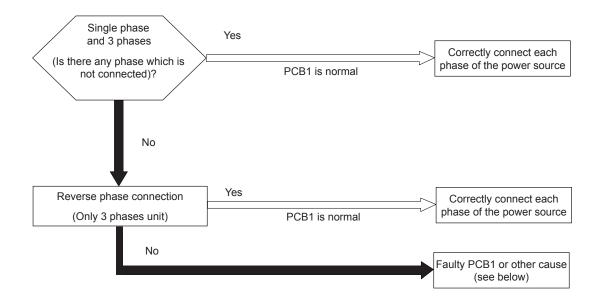

#### RAS-(4-6)HVRNME-AF

#### RAS-(4-6)HRNME-AF




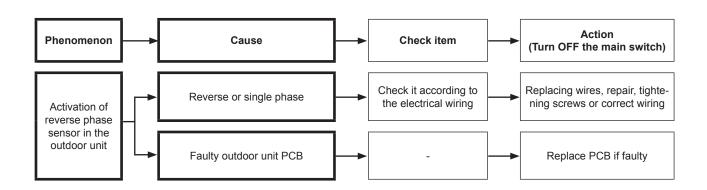



Excessively low voltage or excessively high voltage for the inverter (RAS-(4-6)HVRNME-AF)

- · The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section.
   The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is displayed when the voltage between terminal "P" and "N" of Dip IPM is insufficient and the alarm has three occurrences in 30 minutes. If the number of occurrences is smaller than two, the retry operation is performed. The alarm code "06" means fan controller Abnormal Operation.

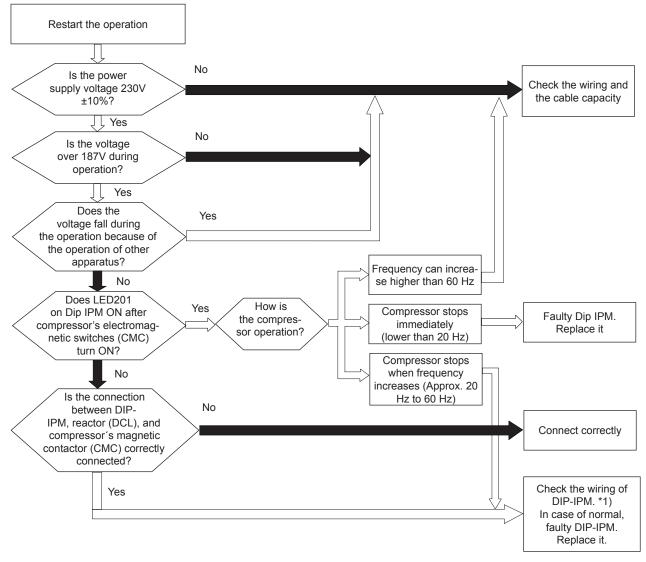




\*1): Regarding replacing or checking method for the inverter PCB (DIP-IPM), refer to the item Procedure of checking other main parts.



Excessively low voltage or excessively high voltage for the inverter (RAS-(4-6)HRNME-AF)

- · The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is displayed when the voltage between terminal "P" and "N" of ISPM is insufficient and the alarm has three occurrences in 30 minutes. If the number of occurrences is smaller than two, the retry operation is performed. The alarm code "06" means fan controller abnormal operation.

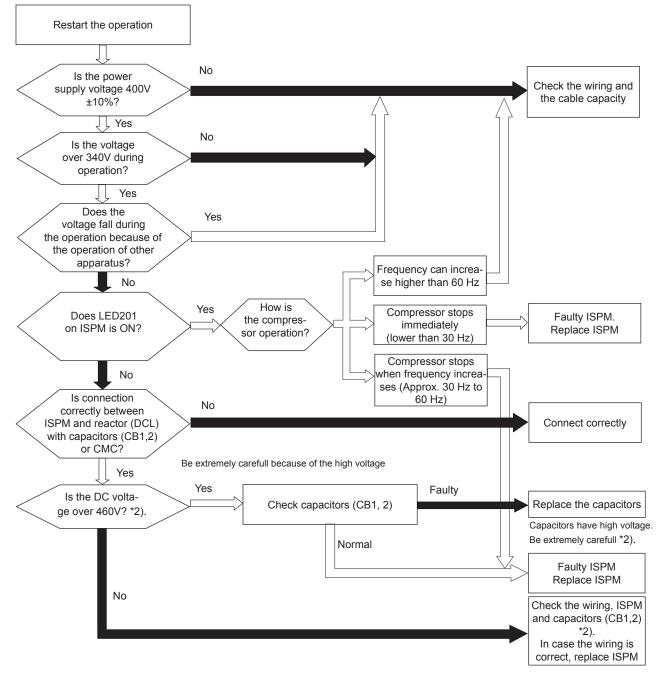

## i

#### NOTES

- \*1): Be especially careful because of high voltage.
- \*2): Regarding replacing or checking method for the inverter PCB (ISPM) and capacitors, refer to the item Procedure
  of checking other main parts.





#### Decrease of Discharge Gas Superheat

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.

This alarm code is indicated as follows:

- The temperature on the top of compressor is less than the target and also the O.U. expansion valve opening is under 70 pls at heating operation for 30 minutes.
- The compressor is stopped and then the retry operation is performed after 30 minutes.

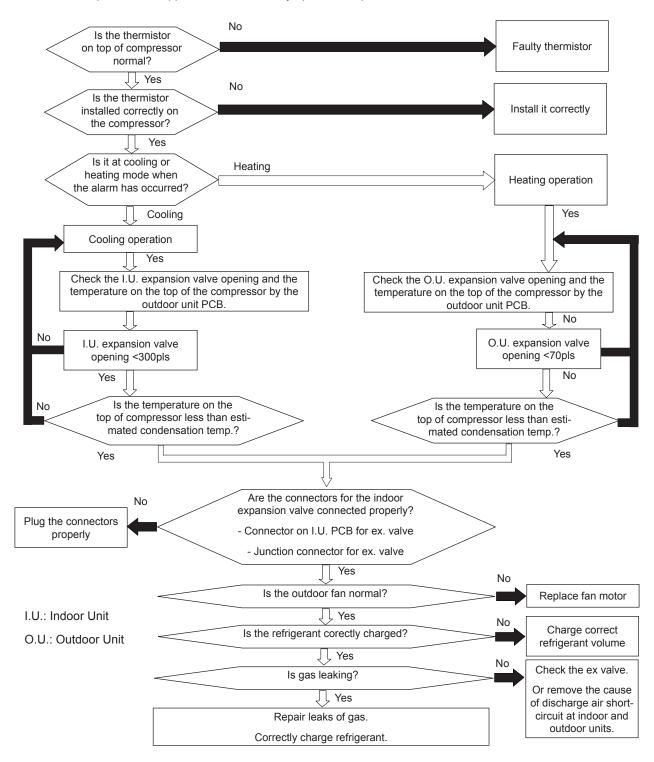

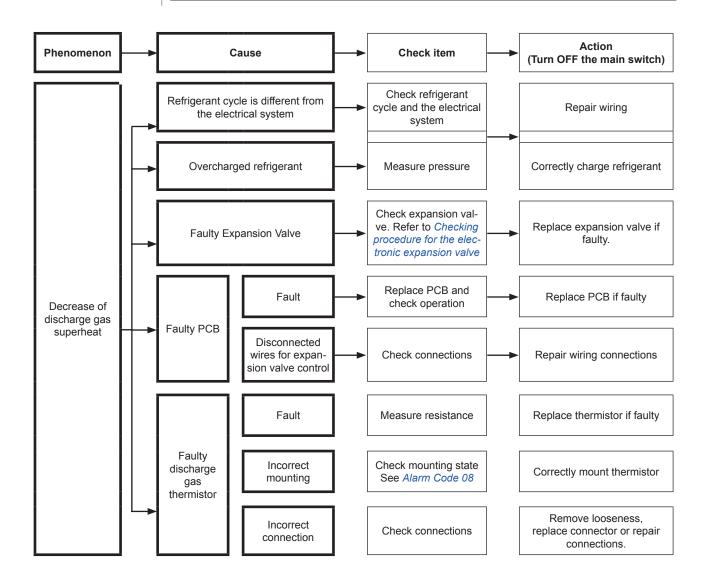





Excessively high discharge gas temperature at the top of compressor

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - The alarm appears during heating operation when the compressor-top thermistor remains at Tdh1 or above for 10 minutes, or at Tdh2 or above for 5 seconds.


Tdh: Discharge gas temperature of the thermistor on the top of the compressor for heating operation.

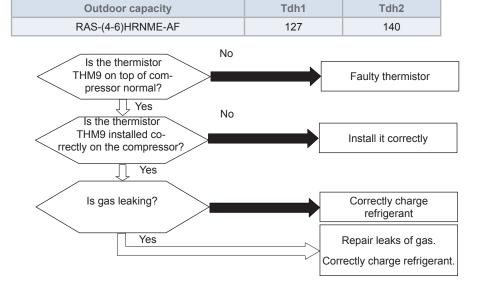

Thermistor for high discharge gas temperature at the top of compressor chamber (THM9)

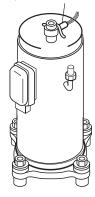


#### Thermistor resistance characteristics

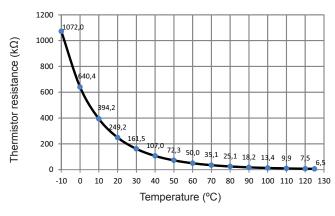





Water inlet temperature thermistor (THM<sub>wi</sub>) abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB
- This alarm code is displayed when the thermistor is short-circuited (greater than 100°C) or cut (less than -20°C) during operation process.

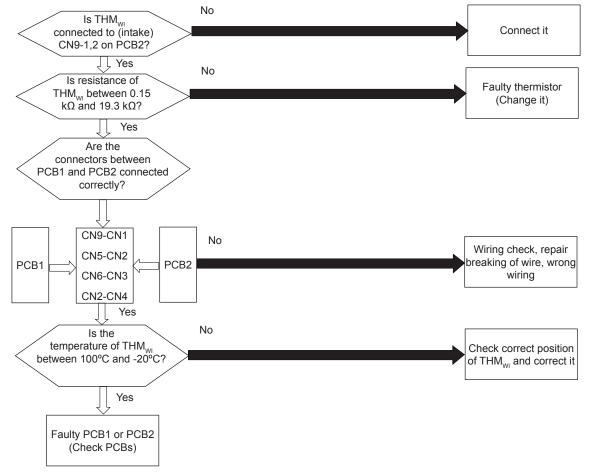

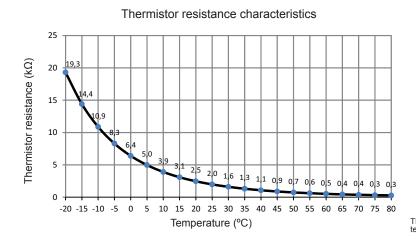


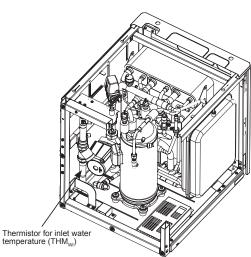





Water outlet temperature thermistor (THM $_{\text{WO}}$ ) abnormality

- · The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the thermistor is short-circuited (greater than 100°C) or cut (less than -20°C) during operation process.

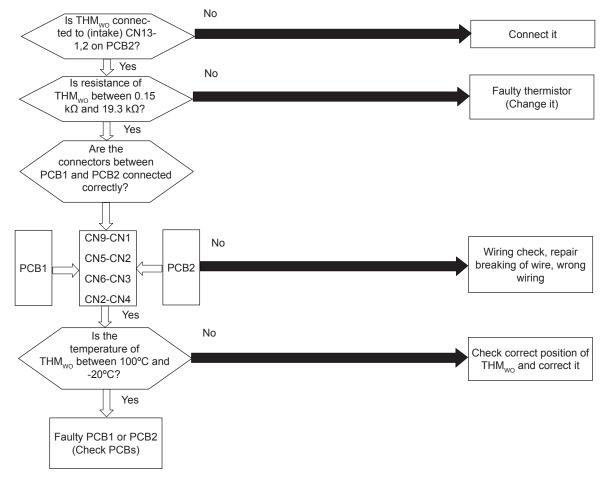

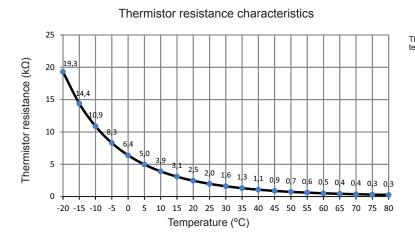

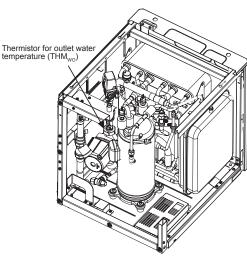



12




Indoor liquid pipe R410A temperature (THM, ) thermistor abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the thermistor is short-circuited (greater than 100°C) or cut (less than -55°C) during operation process.

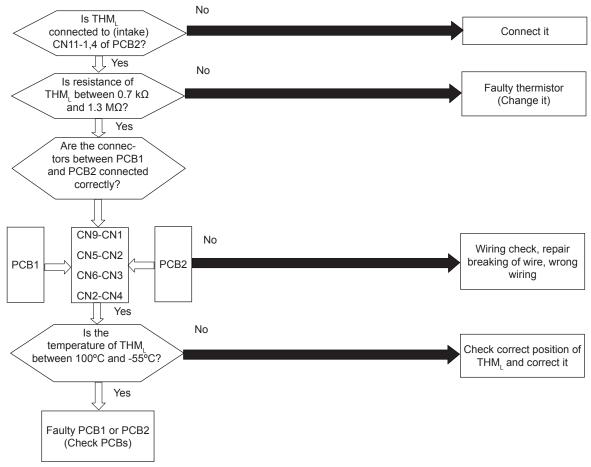

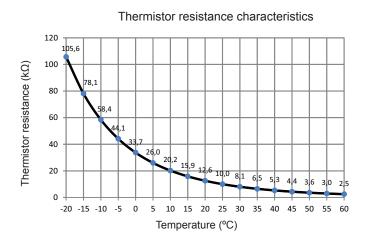


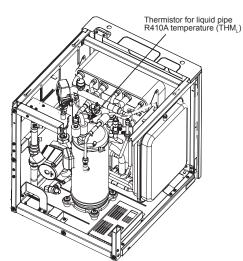





Indoor gas pipe R410A temperature (THM<sub>G</sub>) thermistor abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the thermistor is short-circuited (greater than 100°C) or cut (less than -55°C) during operation process.

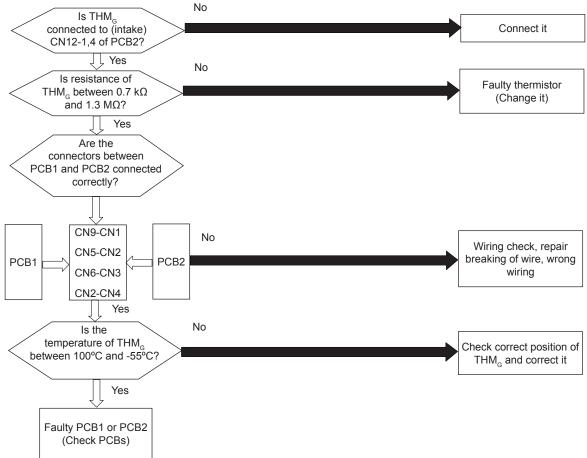

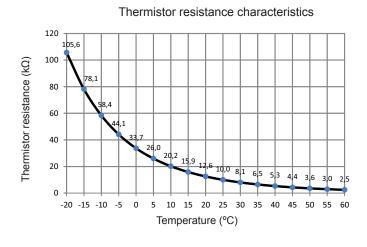


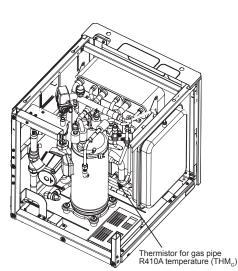




Water outlet circuit 2 (mixing circuit) temperature thermistor (THM $_{\scriptsize WO2}$ ) abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the sensor is abnormality when water outler 2 is enabled: short-circuited (greater than 100°C) or cut (less than -20°C) during operation process.

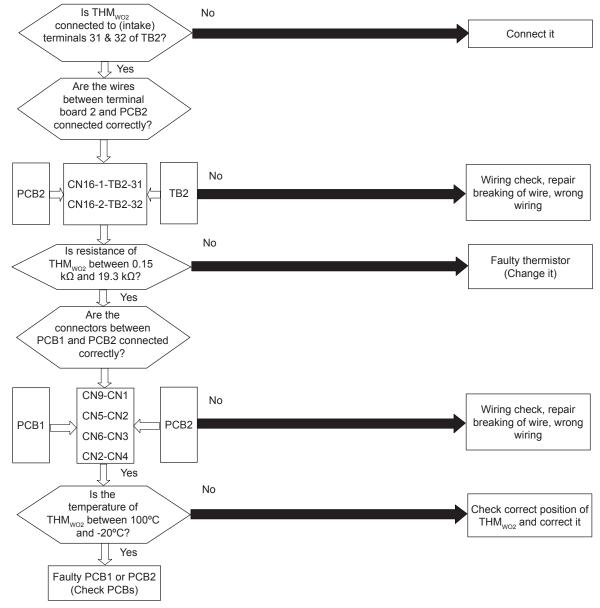


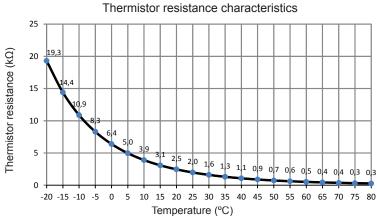




Domestic hot water temperature thermistor ( $\mathsf{THM}_{\mathsf{DHWT}}$ ) abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the thermistor is short-circuited (greater than 100°C) or cut (less than -10°C) during operation process.

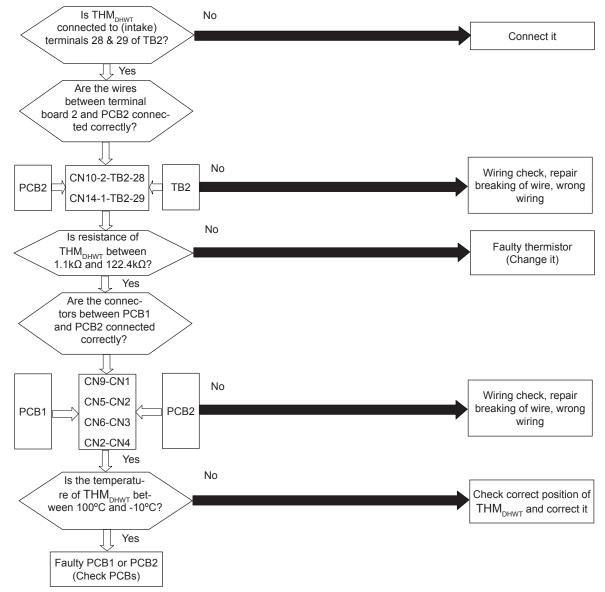


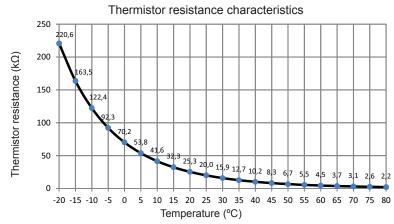




# Swimming pool (THM $_{\mbox{\tiny SWP}}$ ) thermistor abnormality

- · The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the sensor is abnormality when swimming pool is enabled: short-circuited (greater than 60°C) or cut (less than -20°C) during operation process.

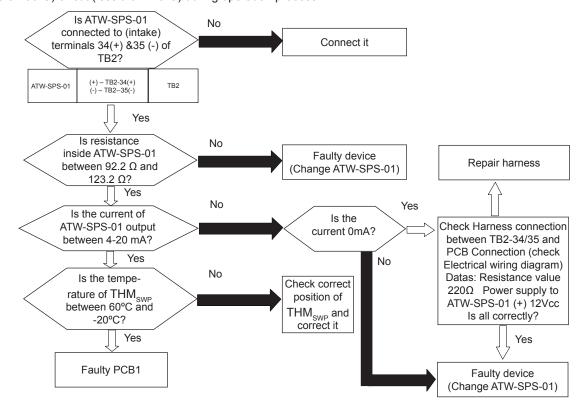


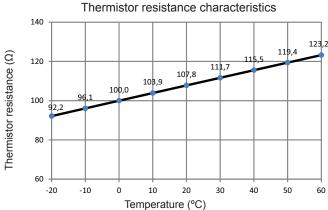




Water outlet 3 (boiler circ.) temperature thermistor ( $THM_{WO3}$ ) abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the sensor is abnormality when water outler 3 is enabled: short-circuited (greater than 100°C) or cut (less than -20°C) during operation process.

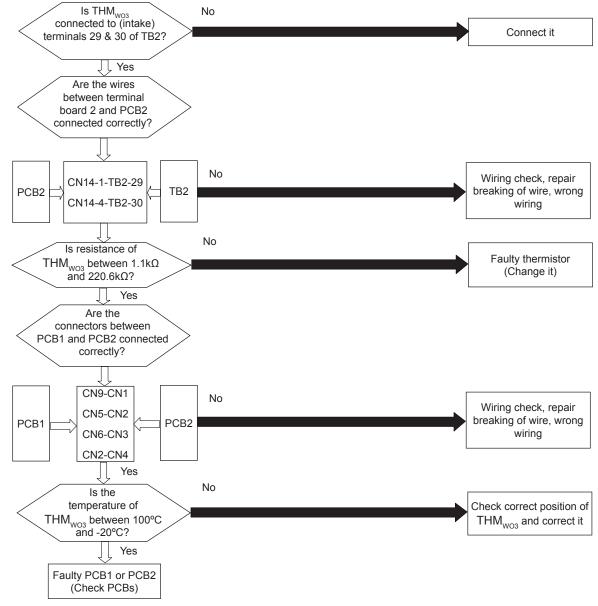

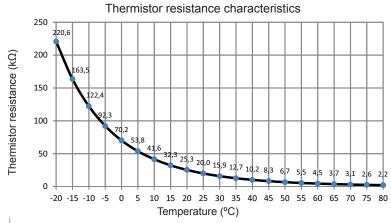

387


Replace PCB1 if faulty

Alarm code



Abnormality of thermistor for discharge gas temperature (outdoor unit compressor thermistor) (THM9)


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
- This alarm code is indicated when the thermistor is short-circuited (less than 1 k $\Omega$ ) or cut (greater than 640 k $\Omega$ ) during the heating operation.

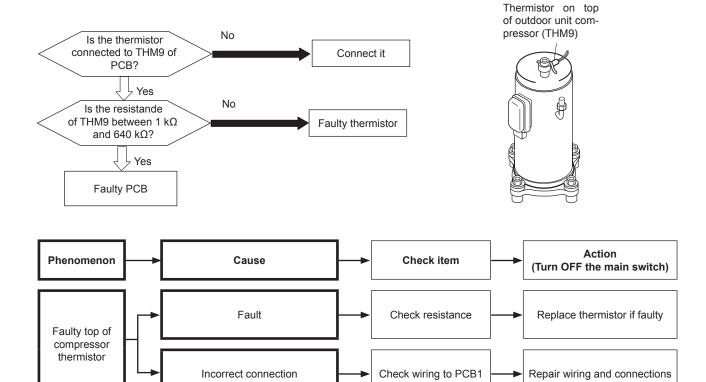

#### Thermistor resistance characteristics

Replace PCB1 and

check operation

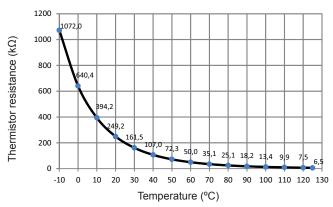



Faulty PCB1



2nd ambient temperature sensor (THM<sub>AMB2</sub>) Thermistor Abnormality

- The alarm code is displayed on the LCD User interface.
- The alarm code is displayed on the seven segments of the indoor unit PCB.
- This alarm code is displayed when the sensor is abnormality when 2nd ambient sensor option is enabled: short-circuited (greater than 100°C) or cut (less than -30°C) during operation process.

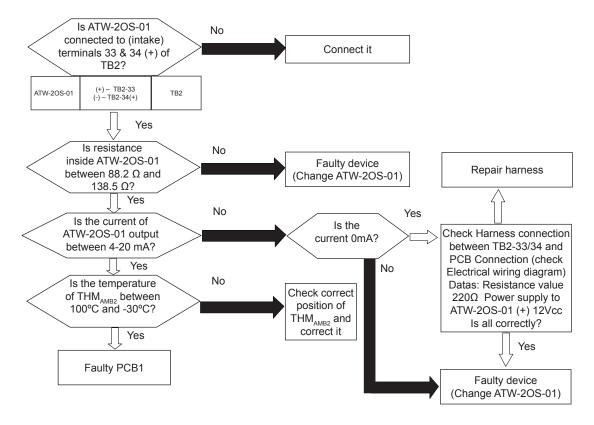


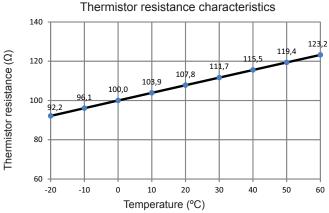




Abnormal operation of the thermistor for the outdoor temperature (outdoor unit ambient thermistor) (THM7)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is displayed when the thermistor is short-circuited (less than  $0.2 \text{ k}\Omega$ ) or cut (greater than  $500 \text{ k}\Omega$ ) during the operation. However, this alarm occurs during the test run mode only. In the case that the thermistor is abnormal during the operation, the operation continues based on the assumption that the outdoor temperature is 6 °C (heating).

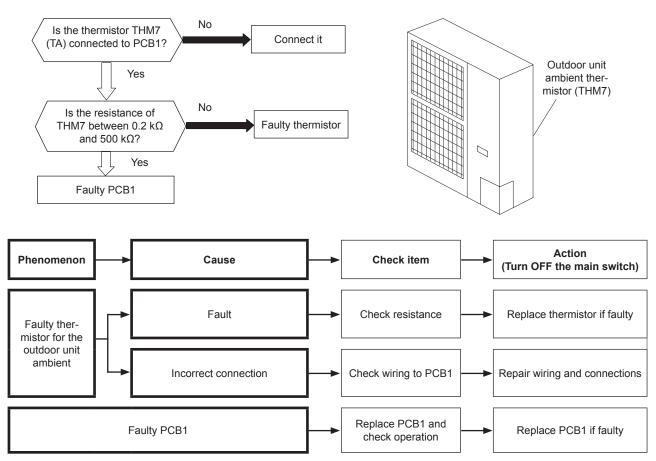


# Thermistor resistance characteristics

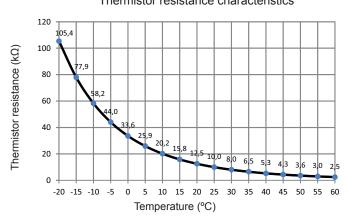




Abnormal operation of the thermistor for the evaporating temperature during the heating process (outdoor unit) (THM8)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit
  number and the alarm code are displayed on the display of the outdoor unit PCB. If you find an abnormal operation
  of the thermistor, check all the thermistors as shown below.
  - The evaporating thermistor during the heating process is attached to the heat exchanger as shown in the figure below. If this thermistor is faulty, such as short-circuit (less than  $0.2k\Omega$ ) or cut (more than  $500k\Omega$ ) during eight minutes continuously, this alarm is displayed. The position is indicated below.

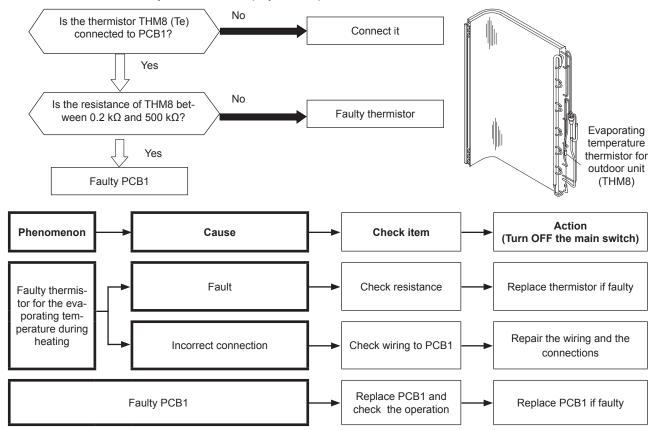

#### Thermistor resistance characteristics

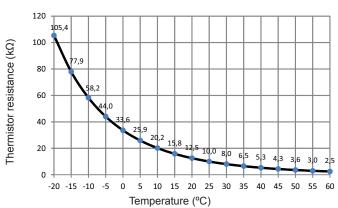





Incorrect capacity setting or combined capacity between indoor unit and outdoor unit

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is indicated when the undefined setting is set to DSW3 on the outdoor unit PCB or to DSW2 on indoor unit PCB1.
  - This alarm code is indicated when the total indoor unit capacity is not equal to the combined outdoor unit capacity.

    Outdoor unit capacity setting is not correct.

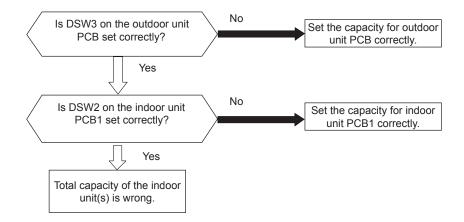

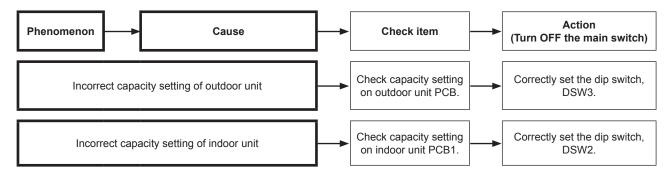



## NOTES

- In case of H-LINK system, this alarm code is indicated when the refrigerant system setting on the outdoor unit PCB and indoor unit PCB are incorrectly set.
- In this case, set correctly refering to the section Setting of DIP switches and RSW switches after turning OFF main switch.



Incorrect indoor number setting

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is indicated 3 minutes after power is supplied to the outdoor unit when the indoor unit no. connected to the outdoor unit is duplicated by setting of RSW.




## NOTES

- In case of H-LINK system, this alarm code is indicated when the refrigerant system setting on the outdoor unit PCB and the indoor unit PCB are incorrectly set.
- In this case, set correctly refering to the section Setting of DIP switches and RSW switches after turning OFF main switch.




Abnormality of protective circuit for protection (outdoor unit) (RAS-(4-6)H(V)RNME-AF)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - The alarm code is displayed when:
    - There is no input signal of Y52C (Compressor relay opened) or CMC (Magnetic contactor for compressor) after switch-OFF.
    - Abnormality of protective circuit por protection is received from microprocessor of inverter PCB.

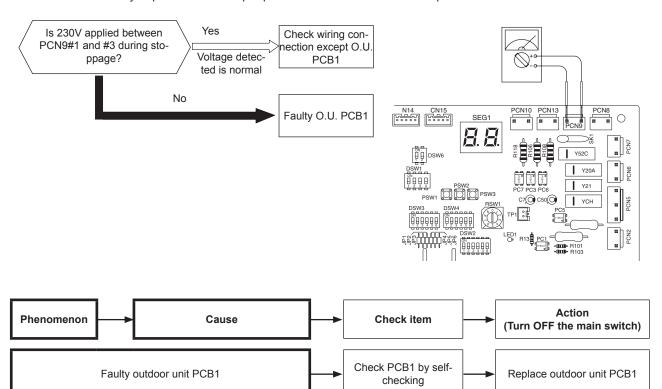

Pump down overload (high pressure switch will be activated)


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is indicated when the protection device is activated at following condition. Evaporation temperature of outdoor unit higher than 55 °C and top of compressor temperature higher than 95 °C.

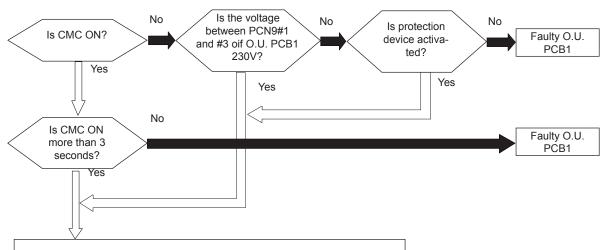

Check the following temperatures through the LCD controller in "Operation Display Parameters" menu.

- 1 Compressor-top temperature = 95°C or less.
- 2 Evaporating piping temperature of outdoor unit = 55°C or less.

Inspect the cause and address the problem if the measurements surpass the temperatures.

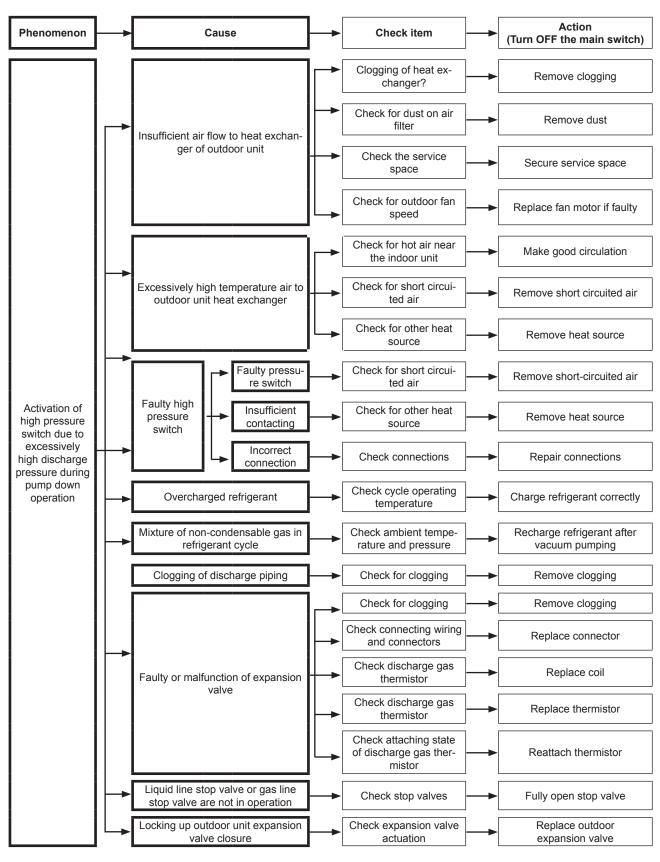


 $[i]_{\mathsf{NOTE}}$ 

This alarm code is indicated when the outdoor unit protective device is activated by high discharge pressure during pump down operation. Accordingly, when this alarm code is indicated, there is high possibility of high pressure switch actuation and the above troubleshooting actions are based on such cases.



Heating overload (high pressure switch will be activated)


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is indicated when the protection device is activated at following condition. Indoor unit liquid refrigerant (piping) temperature higher than 55 °C and top of compressor temperature higher than 95 °C.

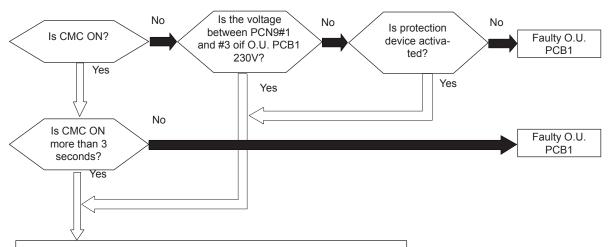

Check the following temperatures through the LCD controller in "Operation Display Parameters" menu.

- 1 Compressor-top temperature = 95°C or less.
- 2 Liquid refrigerant piping temperature of indoor unit = 55°C or less.

Inspect the cause and address the problem if the measurements surpass the temperatures.

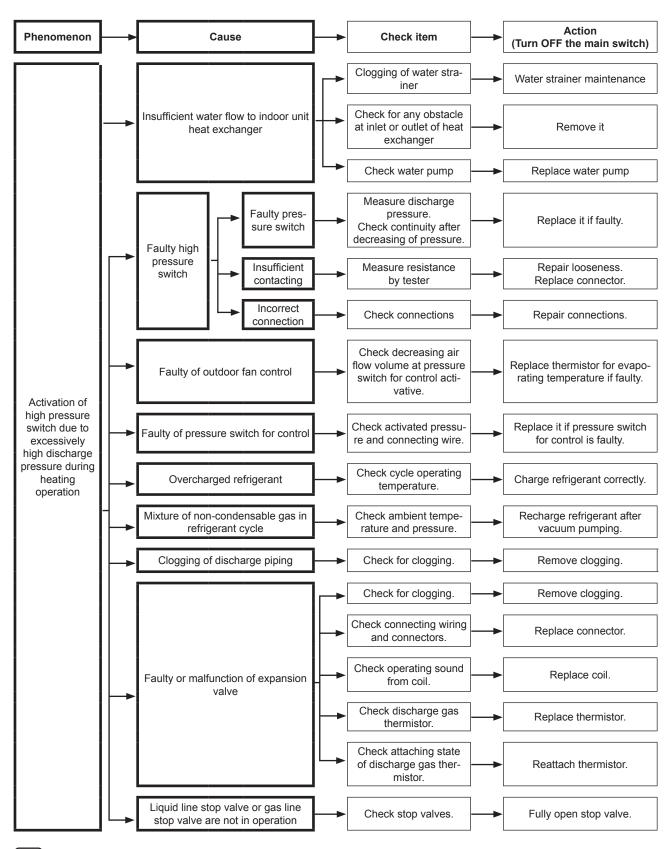


 $oldsymbol{i}_{\mathsf{NOTE}}$ 


This alarm code is indicated when the outdoor unit protective device is activated by high discharge pressure during heating operation. Accordingly, when this alarm code is indicated, there is high possibility of high pressure switch actuation and the above troubleshooting actions are based on such cases.




Activation to protect system from excessively low suction pressure (protection from vacuum operation)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - In the case that the evaporating temperature is lower than -37 °C (250~350 kΩ) and the thermistor on top of compressor is higher than 90 °C for 3 minutes, retry operation is performed 3 minutes after compressor stoppage. However, when the state occurs more than 3 times including 3 in one hour, this alarm code is indicated.

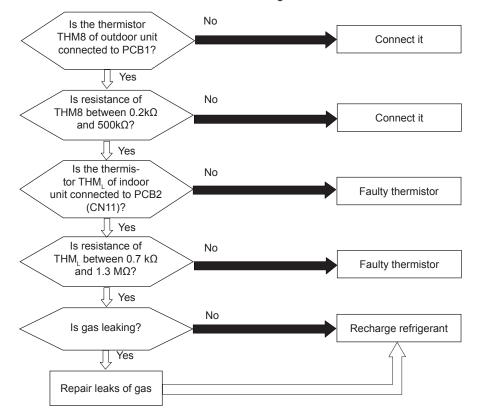

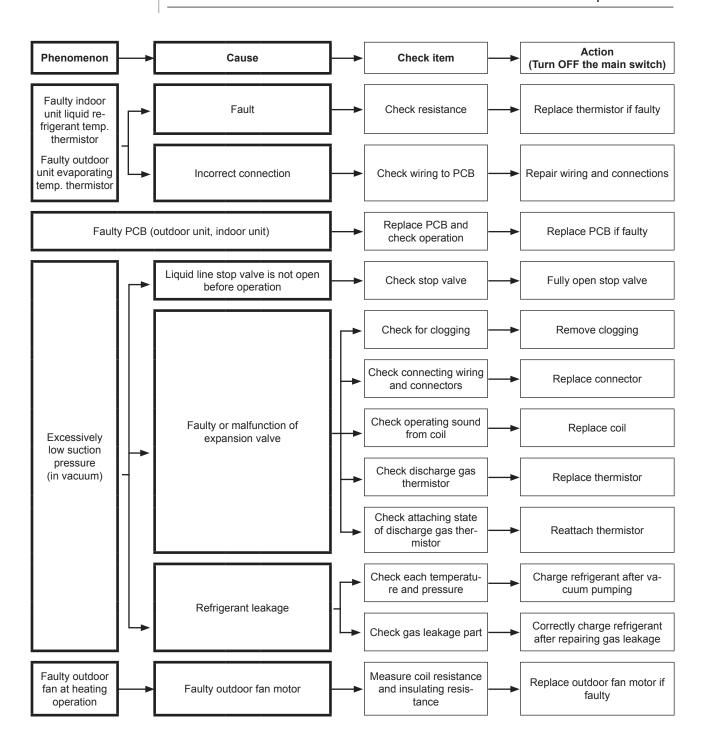

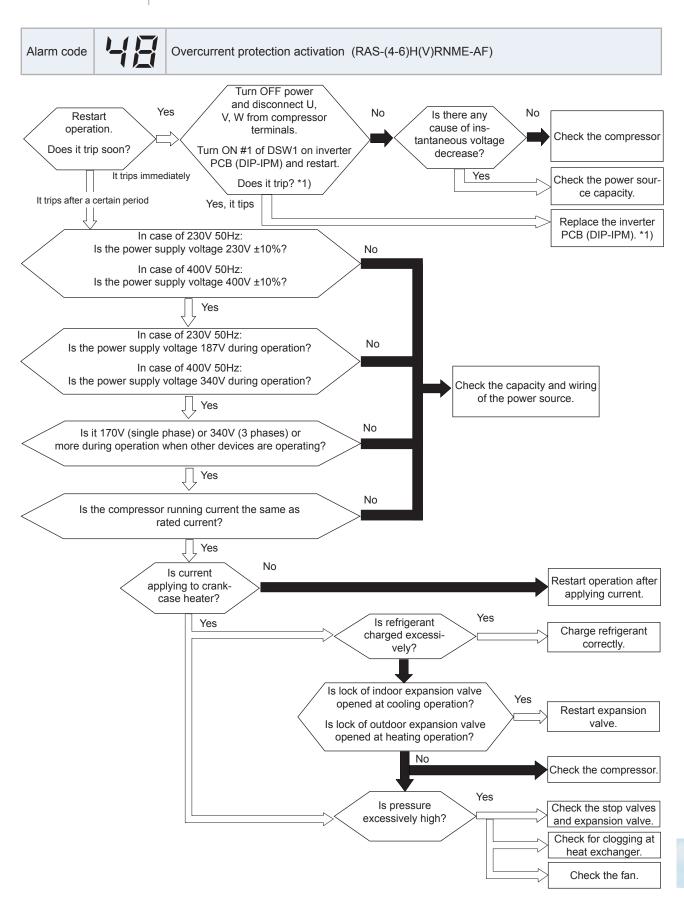


<sup>\*1)</sup> Perform the high voltage discharge work by referring to the item *Procedure of checking other main parts* before checking and replacing the inverter PCB.

401 SMGB0092 rev.0 - 11/2013



Abnormal operation of the current transformer (0A detection) (RAS-(4-6)H(V)RNME-AF)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm code is indicated when the below condition is activated 3 times including 3 in 30 minutes. Retry operation is performed up to the occurrence of 2 times.
  - Condition of activation:
    - When the frequency of compressor is maintained at 15 to 18Hz after compressor is started, one of the absolute value of running current at each phase is less than 1.5A (including 1.5A).

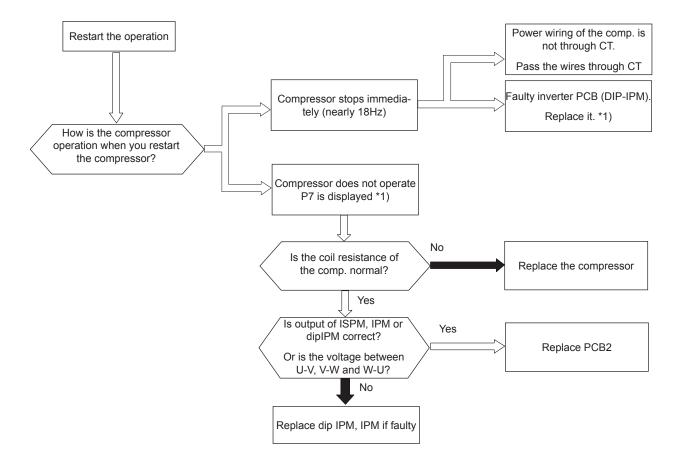

<sup>\*1)</sup> P7 is shown at 7-segment on the outdoor unit PCB.

<sup>\*2)</sup> Perform the high voltage discharge work by referring to the item *Procedure of checking other main parts* before checking and replacing the inverter parts.




Protection activation of IPM or DipIPM and PCB2 (RAS-(4-6)HVRNME-AF)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - IPM or Dip IPM and PCB2 have detecting function of abnormality.
    - This alarm is indicated when the transistor module detect the abnormality 7 times in 30 minutes including 7. Retry operation is performed up to the occurrence of 6 times.

#### Conditions:

- Abnormal current to the transistor module such as:
  - Short circuited or grounded or
  - Abnormal temperature of the IPM or Dip IPM and PCB2 or
  - Control voltage decrease

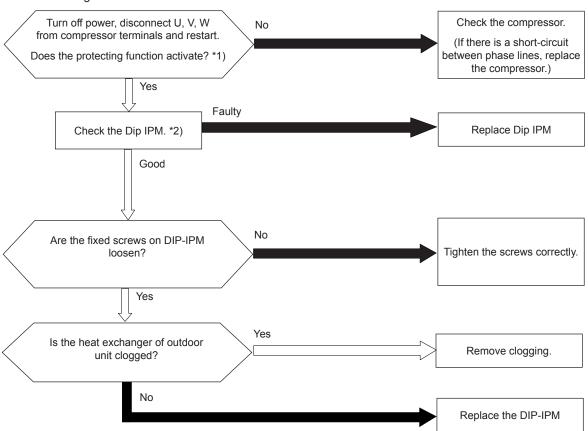



#### NOTE

- \*1) Set the #1 pin of DIP switch DSW1 on inverter PCB or DIP-IMP to ON when you are restarting with the terminals
  of the compressor disconnected. After the troubleshooting, set the #1 pin of DIP switch DSW1 on Inverter PCB or
  DIP-IPM to OFF.
- \*2) Regarding replacing or checking method for the DIP-IPM refer to section Procedure of checking other main parts .
- When the alarm code "53" is indicated, the outdoor fan motor (DC motor) ensure that DC fan motor is checked according to the item Procedure of checking other main parts. Check other main parts in all cases. If there is a malfunction in DC fan motor, it may cause damage to the inverter PCB.




Activation for protecting the ISPM (RAS-(4-6)HRNME-AF)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - ISPM has a detection function of the abnormal operation. This alarm is displayed when the ISPM module detects the abnormal operation 7 times or more than 7 times in 30 minutes. The retry operation is performed six times.

#### Conditions:

The abnormal current to the ISPM, such as short-circuited, grounded, overcurrent or control voltage decrease.

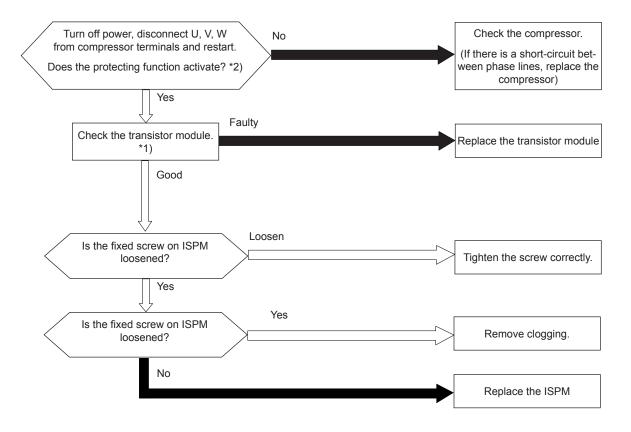

- \*1) Regarding replacing or checking method for the ISPM refer to item Procedure of checking other main parts.
- \*2) Set the #1 pin of DIP switch DSW1 on ISPM to ON when you are restarting with the terminals of the compressor disconnected. After the troubleshooting, set the #1 pin of DIP switch DSW1 on ISPM to OFF.




Increase in the inverter fin temperature

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - If the alarm code "51" or "54" occurs three times within 30 minutes, the alarm code which occurred for the third time is displayed. The retry operation is performed twice.

#### Conditions:

When the temperature of the thermistor for inverter fin excess 100 °C (RAS-(4-6)HVRNME-AF), 80 °C (RAS-(4-6) HRNME-AF) 3 times in 30 minutes, this alarm is indicated and the operation is stopped. In the case the occurrence is smaller than 2 times, retry is performed.

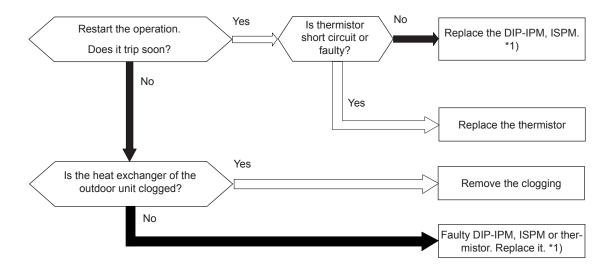


\*1) Perform the high voltage discharge work by referring to the item *Procedure of checking other main parts* before checking and replacing the inverter components.

55

IPM or PCB2 abnormality


- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - Actual frequency from Inverter PCB is less than 10 Hz (after inverter frequency output form PCB1 to Inverter PCB).
  - This alarm is displayed when it occurs 3 times in 30 minutes. Retry operation is performed up to the occurrence of 2 times.
  - Condition of Activation:
    - This alarm is indicated when Inverter PCB is not performed normally.

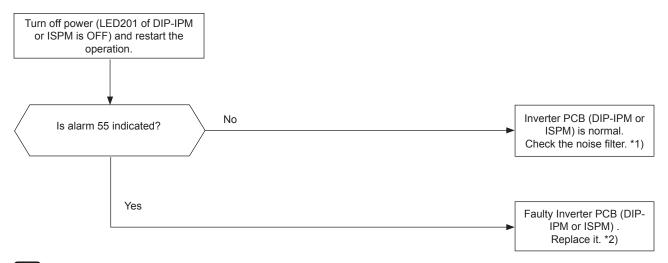




- \*1): When the excessive surge current is applied to the unit due to lighting or other causes, this alarm code or the cause code of inverter stoppage (Itc=11) will be indicated on the 7-segment display on O.U. PCB1 and the unit can not be operated. In this case, check to ensure the surge absorber (SA) on the noise filter (NF1). The surge absorber may be damaged if the inner surface of the surge absorber is changed to black. If the surge absorber is damaged, replace the noise filter. If the surge absorber does not have abnormality, turn OFF the power source once and wait until turning OFF LED201 (red) on inverter PCB for approx. 5 min. Then, turn ON again.
- \*2): Regarding replacing or checking method for inverter components, refer to the item Procedure of checking other main parts.

### For RAS-(4-6)HVRNME-AF (1~230V 50Hz)

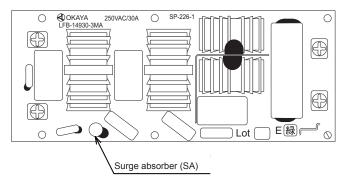


### For RAS-(4-6)HRNME-AF (3N~ 400V 50Hz)

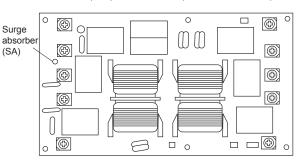



Abnormality of fan motor protection (DC fan motor)

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - The fan motor stops when the revolution output from the fan motor is 10 rpm or lower during 10 seconds after the fan motor activation.
  - The alarm is indicated when the abnormality is repeated 10 times within 30 minutes after the first detection.

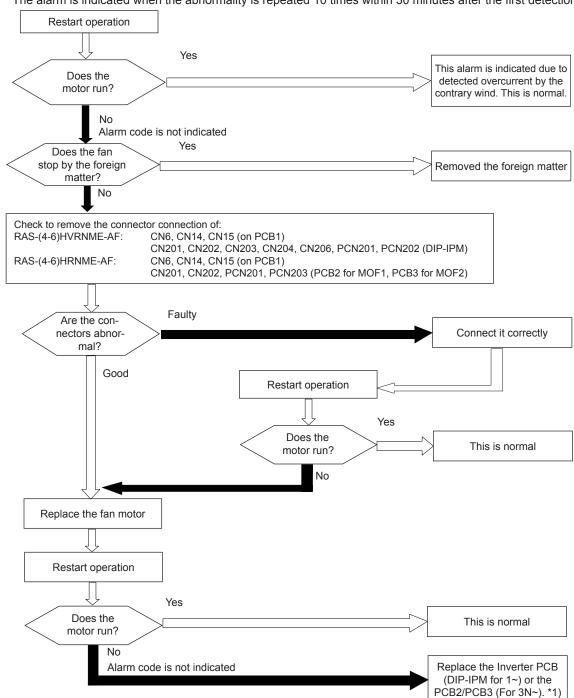



- In the case that the fan motor does not run yet, replace the PCB1.
- Check to ensure that Fan Motor is checked according to the item Procedure of checking other main parts.

12



Transmission error between central control interface (KNX, etc...) and indoor units

- The RUN LED flickers and "ALARM" is displayed on the remote control switch.
- The unit number, the alarm code and the unit code are alternately displayed on the set temperature section. The unit number and the alarm code are displayed on the display of the outdoor unit PCB.
  - This alarm is displayed when there's no constant communication for more than three minutes between the central control interface (KNX, etc...) and the indoor unit.

Alarm code		Comp

Compressor protection

This alarm code is displayed when one of the following alarms occurs three times within six hours. If the outdoor unit operates continuously without removing the cause of the alarm, the compressor may be seriously damaged.

Alarm code	Content of abnormality
02	Tripping of protection device in outdoor unit
רם	Decrease in discharge gas superheat
08	Increase in discharge gas temperature
41	Pump down overload
42	Heating overload
47	Low pressure decrease protection activating




#### NOTE

You can check these alarms using the check mode 1. Follow the action that is indicated in each alarm chart. You can clear these alarms only by turning OFF the main switch to the system. However, you must pay careful attention before starting, because there is a possibility of causing serious damages to the compressors.

Alarm code Hydraulic alarm

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when there is a flow or pressure failure (water flow too low) (water pressure to low).

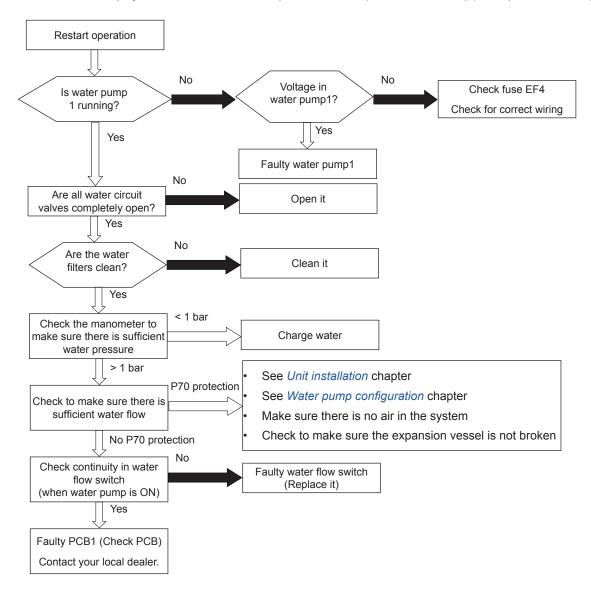


## Alarm control procedure:

- Perform retry operation for 1 minutes the first time and retry code will be displayed (P70 on 7-segments of PCB1 and 70 on LCD controller), and keep outdoor and indoor unit running (except electrical heater and boiler if is the case). After 1 minute has passed (P70), switch stop status to OFF for outdoor and indoor units



Mixing overheating limit protection for mixed circuit (Only if circuit 2 is enabled)


- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when temperature of circuit 2 is higher than a determined offset from the maximum water temperature value set for circuit 2 by installer configuration, for 20 seconds.

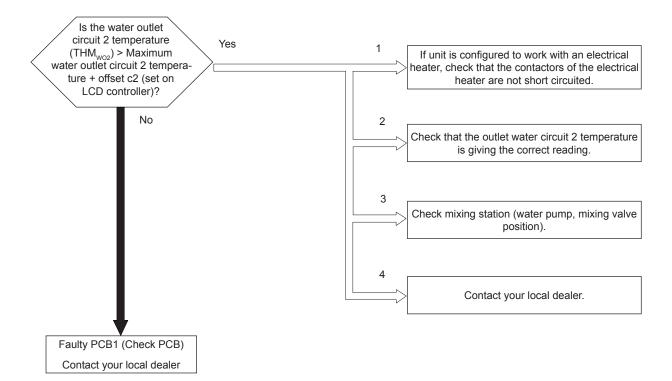



Unit overheating limit protection

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when water supply temperature (Two) is 5°C more than maximum water circuit temperature for 20 sec.

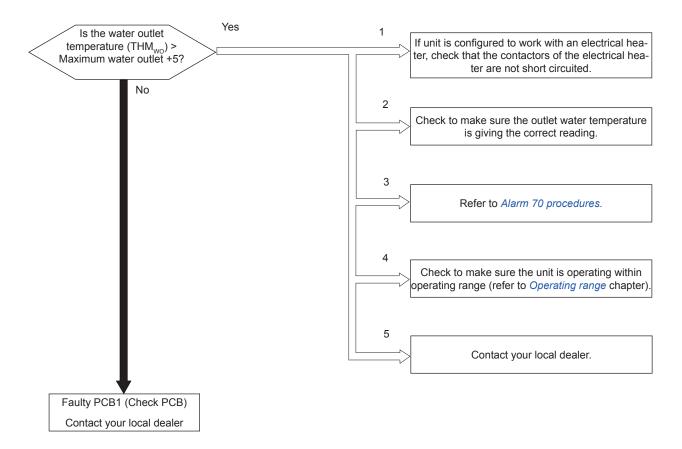

# Alarm control procedure:


- Perform retry operation for 6 minutes the first time (Seven-segment shows P74) and keep outdoor and indoor unit running (except Electrical Heater). After 6 minutes have passed (P74), switch stop status OFF for outdoor and indoor units.
- Keep the mixing valve closed.




Freeze protection by cold water inlet/outlet temperature detection

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the water inlet/outlet temperature are equal or lower than 2°C during 30 seconds.

## Due to low water:

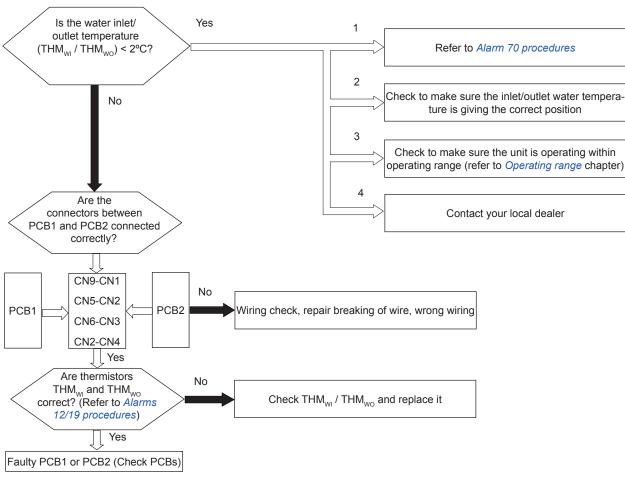

## Due to low refrigerant:

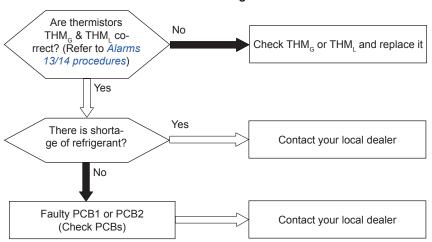


## Alarm control procedure:

- Switch OFF outdoor and indoor unit.



Freeze protection stop by indoor liquid temperature thermistor

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when refrigerant temperature of the indoor unit is lower than -20°C for 30 seconds.

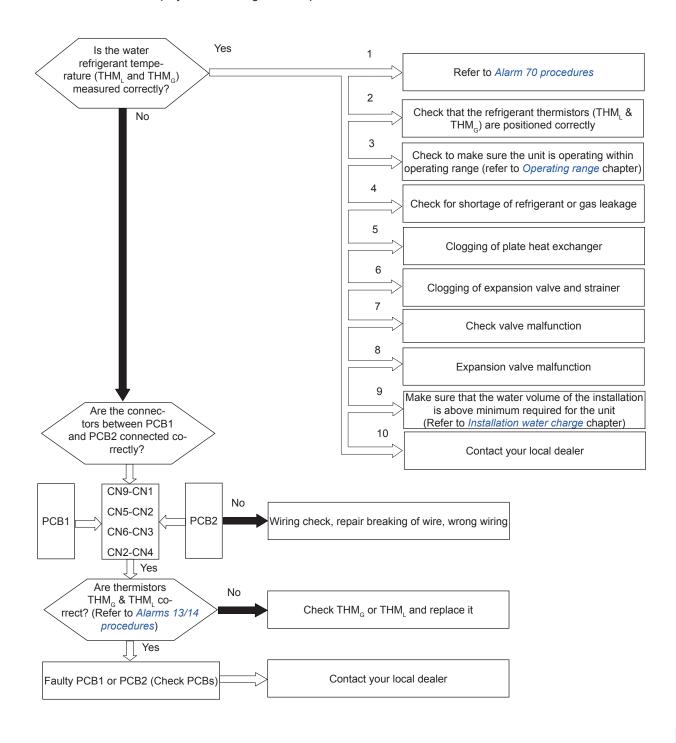






Opentherm communication failure (Only with intelligent thermostat accessory)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when there is no Opentherm communication for a continuous period of 10 minutes.

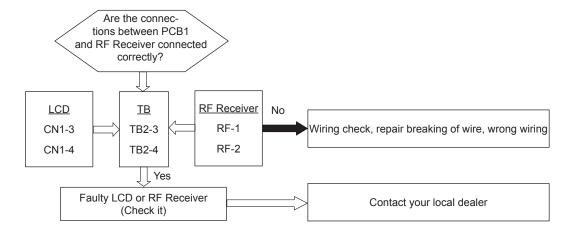

## Alarm control procedure:

The control will continue in normal operation with the following fixed Opentherm values:

- Circuit 1: Uses the last received Room Set-point. The Room temperature is assumed to be equal to the Room Set-point.
- Circuit 2: Uses the last received Room Set-point. The Room temperature is assumed to be equal to the Room Set-point.
- Control will not obey the thermostat time programme and OFF function.




# NOTE

For more information refer to Room unit installation guide.



RF communication failure (Only with intelligent thermostat accessory)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when there is no communication for 1 hour with one or two Room thermostat devices that are bound to the RF-bridge.

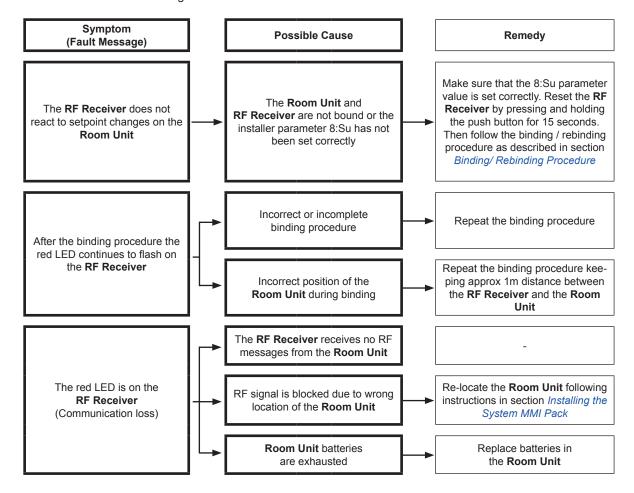

## Alarm control procedure:

The control will continue in normal operation with the following fixed Opentherm values:

- Circuit 1: Uses the last received Room Set-point. The Room temperature is assumed to be equal to the Room Set-point
- Circuit 2: Uses the last received Room Set-point. The Room temperature is assumed to be equal to the Room Set-point
- Control will not obey the thermostat time programme and OFF function



#### NOTE


For more information refer to Room unit installation and user's guide.





Incorrect capacity setting


- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- · This alarm code is displayed when there is no concordance between indoor outdoor unit capacity.

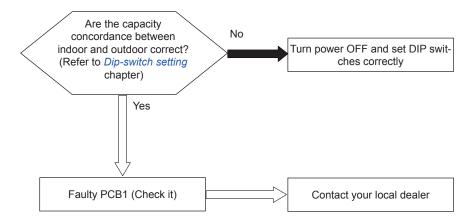



H-Link communication failure between Indoor and LCD User interface

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- · This alarm code is displayed when there is no communication for 3 minutes between indoor unit and LCD controller.

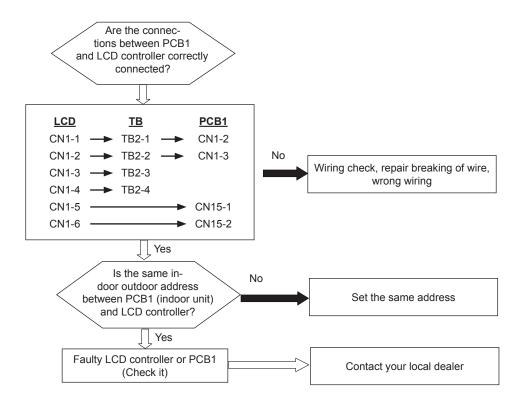

#### Alarm control procedure:


Switch OFF outdoor and indoor units.



Activation of high pressure switch

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the high pressure (Pd) is incressed to more than 3 MPa, and high pressure switch (63H) is activated.

#### PCB monitoring position: PCB3, PCN5

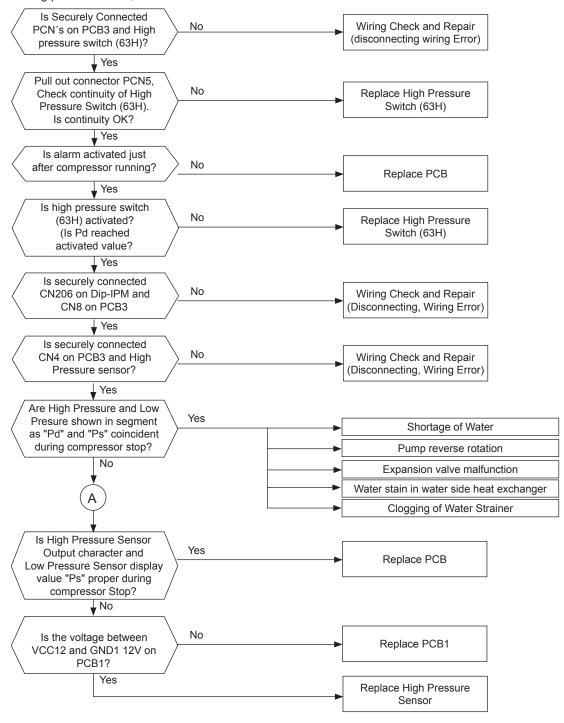

# i NOT

- In case that the low pressure is higher than 1.6 MPa, segment shows 1.6 MPa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.




Activation of protection control for excessively high pressure

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- · During normal operation the Electronic Control stops and restarts automatically after 3 minutes.
- The Stop alarm appears after 3 retries during 30 minutes.
  - This alarm code is displayed when the high pressure (Pd) is incresed to more than 2.78 MPa, during 10 seconds.

PCB monitoring position: PCB3, CN4

Retry code: P-12

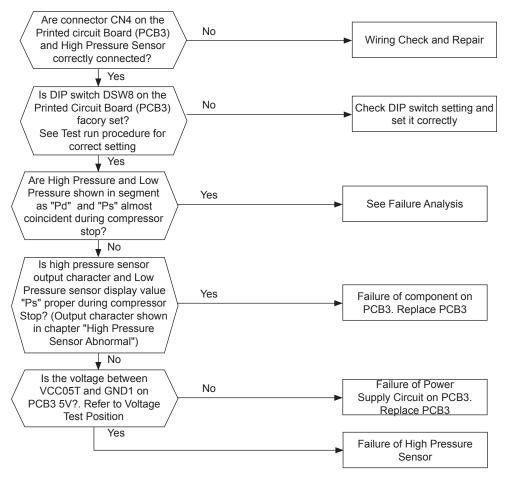

- In case that the low pressure is higher than 1.6 MPa, segment shows 1.6 MPa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.




Activation of protection control for excessively low pressure

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- During normal operation the Electronic Control stops and restarts automatically after 3 minutes.
- The Stop alarm appears after 3 retries during 30 minutes.
  - This alarm code is displayed when the low pressure (Ps) is decresed to less than 0.15 MPa, during 90 seconds or.
  - This alarm code is displayed when the low pressure (Ps) is decresed to less than 0.1 MPa after starting the compressor for 3 minutes.

PCB monitoring position: PCB3, CN3

Retry code: P-06

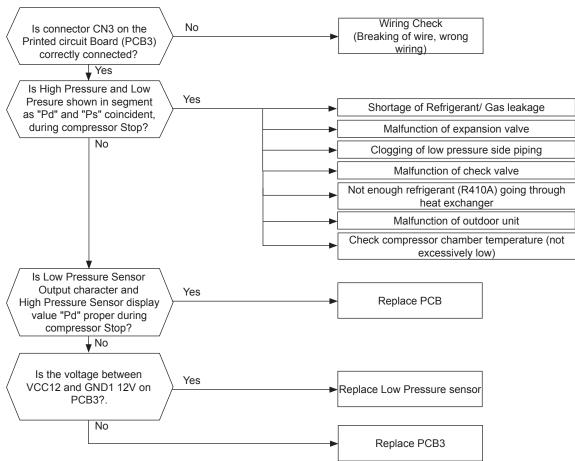


- In case that the low pressure is higher than 2.0 MPa, segment shows 2.0 MPa.
- In this case, check if the high pressure value "Pd" shown in segment is higher than 1.0 MPa.



Activation of low pressure control

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The electronic control displays the alarm during the operation in heathing mode.
  - This alarm code is displayed when the suction pressure (Ps) is less than 0.1 MPa during 3 seconds.

PCB monitoring position: PCB3, CN3

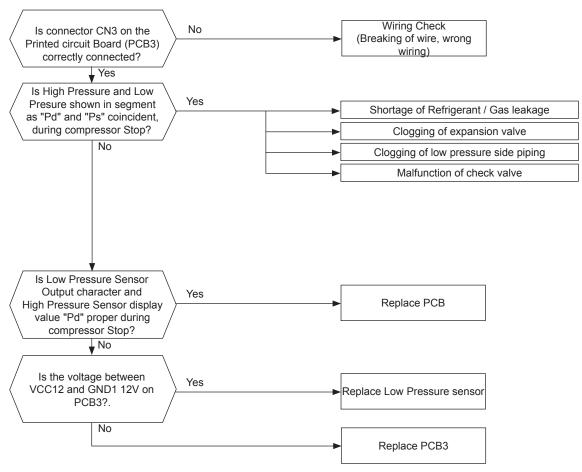

- In case that the low pressure is higher than 2.0 MPa, segment shows 2.0 MPa.
- In this case, check if the high pressure value "Pd" shown in segment is higher than 1.0 MPa.



Excessively low pressure difference

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The compressor stops and restarts automatically in 3 minutes.
- The Stop alarm appears after 3 retries during 30 minutes.
  - This alarm code is displayed when the Pressure Ratio calculated from High Pressure "Pd" and Low Pressure "Ps" is less than 1.8 MPa during 3 minutes.

PCB monitoring position: PCB3, CN3 and CN4

Retry code: P-11


Calculation Formula for Pressure Ratio:

#### Example:

Pd= 1.6 MPa

Pressure Ratio = 
$$\frac{1.6 + 0.1}{0.7 + 0.1}$$
 = 2.13

Ps= 0.7 MPa

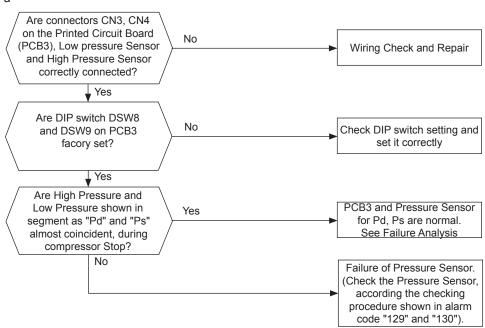


- In case that the low pressure is higher than 1.6 MPa, segment shows 1.6 MPa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.




Excessively high discharge gas temperature (R134a indoor unit compressor)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the discharge gas temperature is increased to 125°C and continues for 10 minutes or it is increased over 140 °C during more than 5 seconds.

## PCB monitoring position: PCB4, CN15

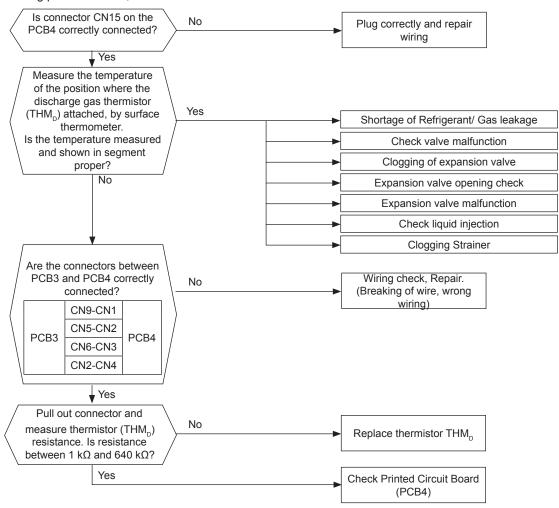

# Thermistor resistance characteristics

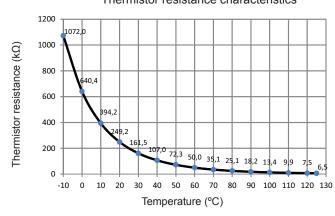




Abnormality of fixed resistance 1 (THM $_{\tiny \text{DUMMY}}$ )

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the the CN14 in indoor unit PCB4 is not correctly connected.


PCB monitoring position: PCB4, CN14

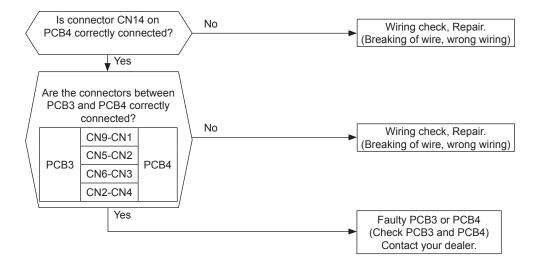





Failure of inverter ebox ambient temperature thermistor  $(THM_{EBOX})$ 

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the thermistor is short-circuited (less than 0.2 k $\Omega$ ) or cut (greater than 500 k $\Omega$ ) during the operation.

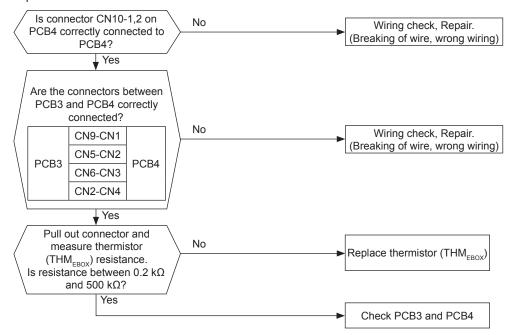

#### Thermistor resistance characteristics

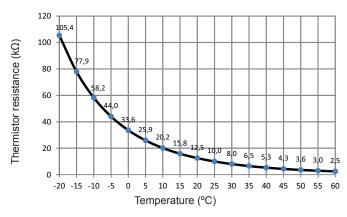

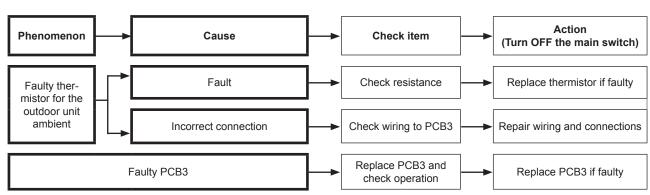





Failure of discharge gas temperature thermistor (THM<sub>D</sub>)

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the thermistor is short-circuited (less than 1 k $\Omega$ ) or cut (greater than 640 k $\Omega$ ) during the operation.

PCB monitoring position: PCB4, CN15

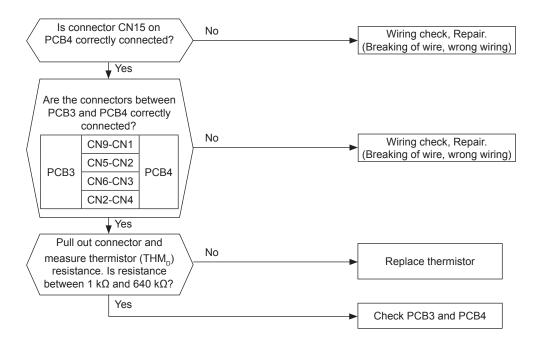

#### Thermistor resistance characteristics

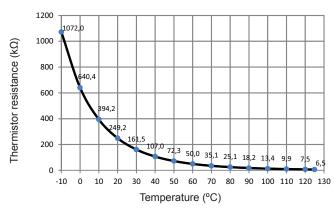




Abnormality of fixed resistance 2 (THM<sub>DUMMY</sub>)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the the CN12 in indoor unit PCB4 is not correctly connected.

PCB monitoring position: PCB4, CN12

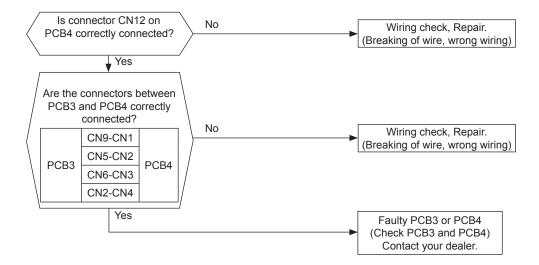





Failure of suction gas emperature thermistor (THM<sub>s</sub>)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the thermistor is short-circuited (less than 0.2 k $\Omega$ ) or cut (greater than 500 k $\Omega$ ) during the operation.

PCB monitoring position: PCB4, CN11

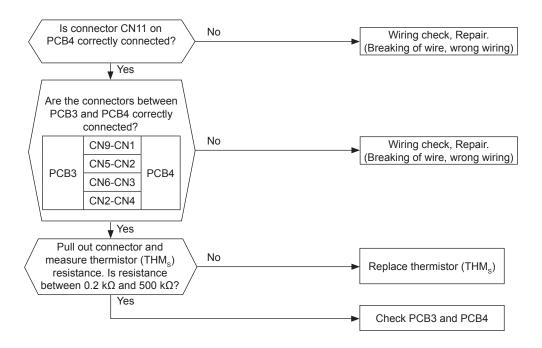

#### Thermistor resistance characteristics

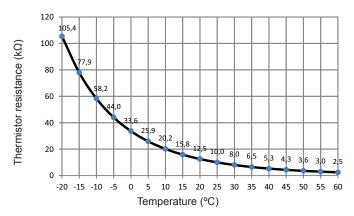





Failure of discharge gas pressure sensor (Open/Short)

- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the high pressure sensor is short circuited or cut.

PCB monitoring position: PCB3, CN4

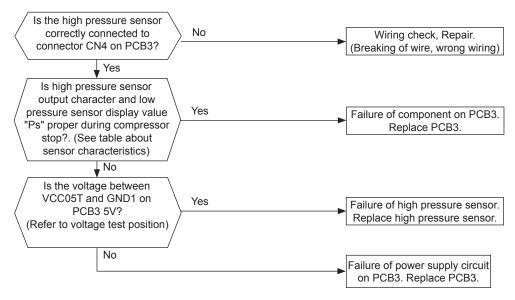

## Characteristics of high pressure sensor

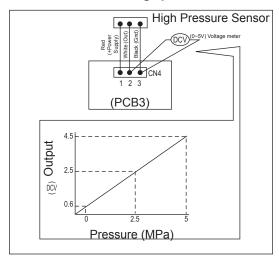


- In case that the low pressure is higher than 1.6 MPa, segment shows 1.6 MPa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.




Failure of suction gas pressure sensor (Open/Short)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- · This alarm code is displayed when the low pressure sensor is short circuited or cut.

PCB monitoring position: PCB3, CN3

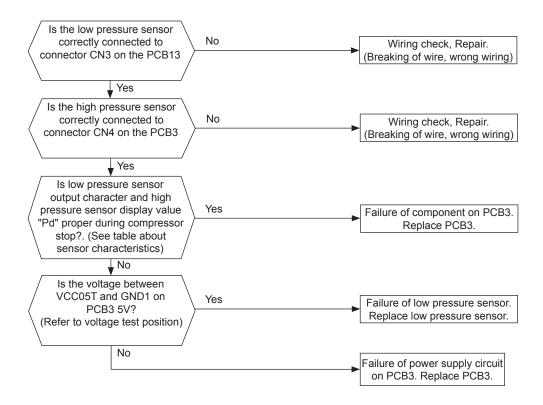

# Characteristics of high pressure sensor

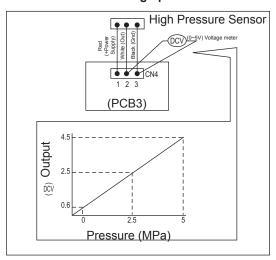




Abnormal transmission between Inverter PCB and Main PCB

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the communication between indoor unit PCB3 and Inverter PCB (DIP- IPM/ISPM) is not performed correctly during 30 seconds.

PCB monitoring position: PCB3, CN8

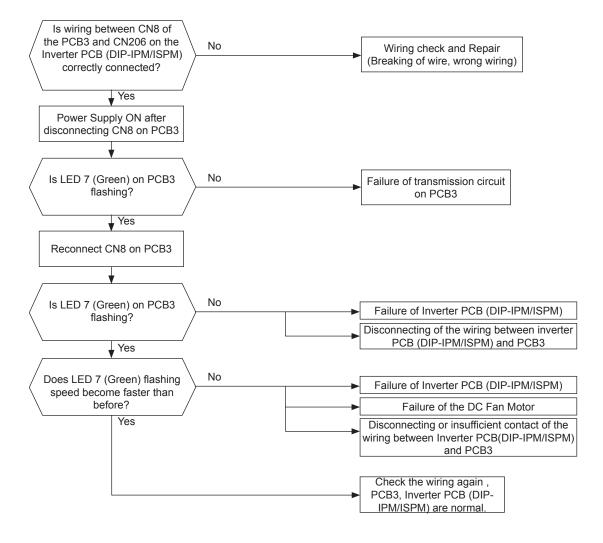







Abnormality of power supply phase


- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the power source phases are reversely connected or one phase is not connected.

PCB monitoring position: PCB3, PCN1

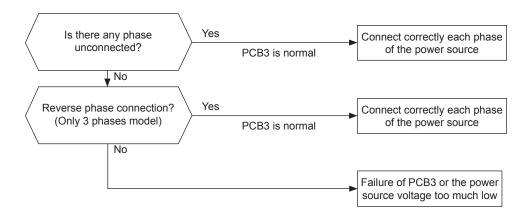

- RWH-(4-6)FSVNFE (Single phase)
- RWH-(4-6)FSNFE (Three phase)

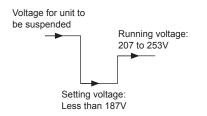

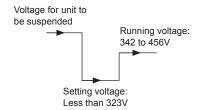





Incorrect PCB Setting


- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when wrong settings are performed in DIP switches on PCB3.





Incorrect PCB Operation

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when wrong settings is performed in DIP switch on PCB3 or prohibited operation is performed.

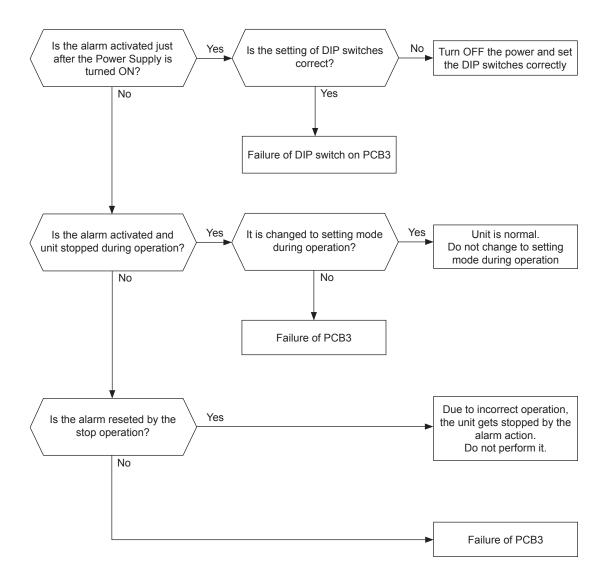

Alarm code Excessively low voltage or excessively high voltage for the inverter (For RWH-(4-6)FSVNFE)


- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- · This alarm code is displayed when the voltage between terminal "P" and "N" of DIP-IPM is insufficient.

Retry code: P-18



## **DANGER**

Electrical hazard. Risk of electrical shock. Be extremely careful because of the high voltage.

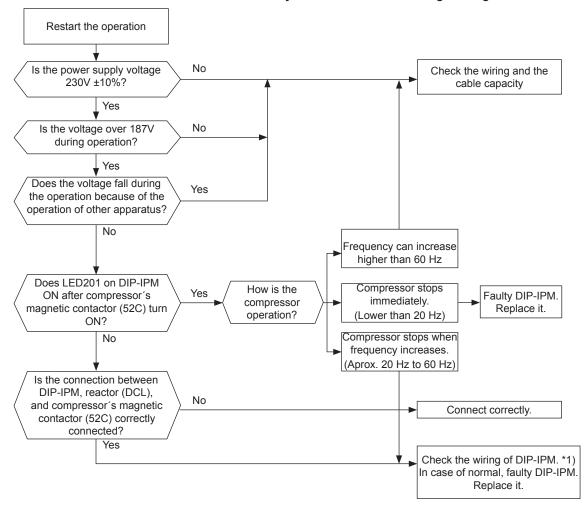



\*1): Regarding replacing or checking method for the inverter PCB (DIP-IPM), refer to the item Procedure of checking other main parts.

Alarm code Excessively low voltage or excessively high voltage for the inverter (For RWH-(4-6)FSNFE)


- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm code is displayed when the voltage between terminal "R" and "S" of ISPM is insufficient.

Retry code: P-18



#### DANGER

Electrical hazard. Risk of electrical shock. Be extremely carefull because of the high voltage.

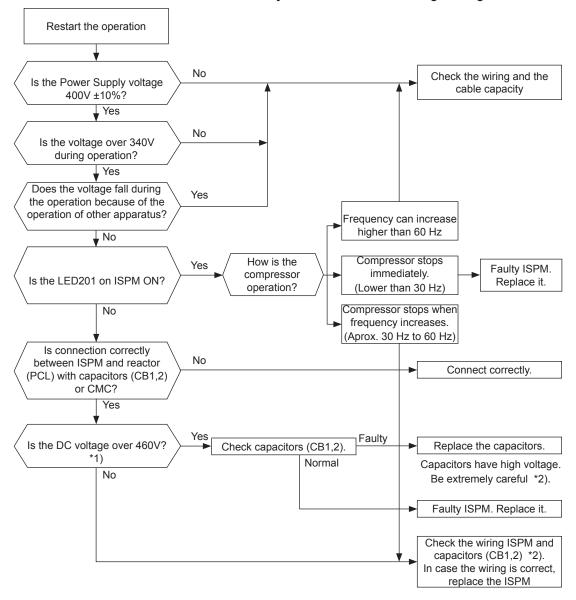



#### NOTES

- \*1): Be especially careful because of high voltage.
- \*2): Regarding replacing or checking method for the inverter PCB (ISPM) and capacitors, refer to the item Procedure of checking other main parts.



Failure of the current sensor for "Inverter" (0 A detection)


- · The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The compressor stops and restarts automatically in 3 minutes.
- The alarm appears after 3 retries during 30 minutes.
  - This alarm code is displayed when the frequency of the compressor is maintained at 15~18 Hz after the compressor is started, one of the absolute values of the running current at each phase U+, U-, V+ and V- is less than 1.5A (including 1.5A).

Retry code: P-17



#### DANGER

Electrical hazard. Risk of electrical shock. Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to section "Checking procedure of other main parts".

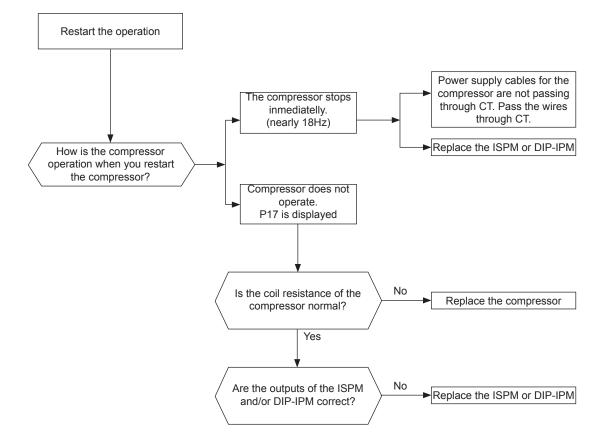




Activation of protection for inverter instantaneous over current (1)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The compressor stops and restarts automatically in 3 minutes.
- The alarm appears after 6 retries during 30 minutes.
  - This alarm code is displayed when the compressor current is higher than the set value. Totally 3 minutes during 10 minutes.

Retry code: P-17

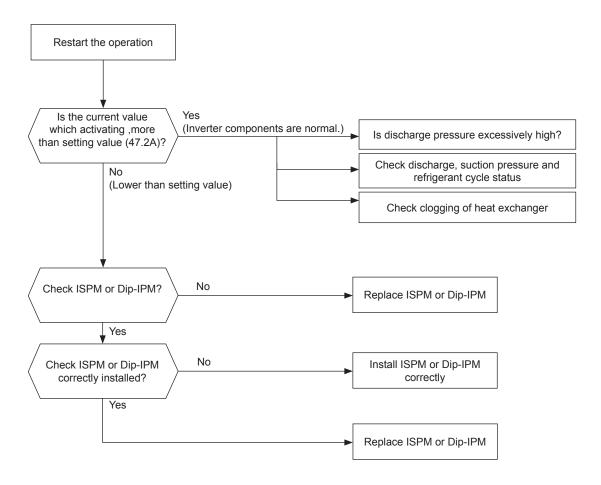



#### DANGER


Electrical hazard. Risk of electrical shock. Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to section "Checking procedure of other main parts".



Activation of protection for inverter instantaneous over current (2)

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The compressor stops and restarts automatically in 3 minutes.
- The alarm appears after 6 retries during 30 minutes.
  - This alarm code is displayed when the compressor current is higher than the set value.


Retry code: P-17

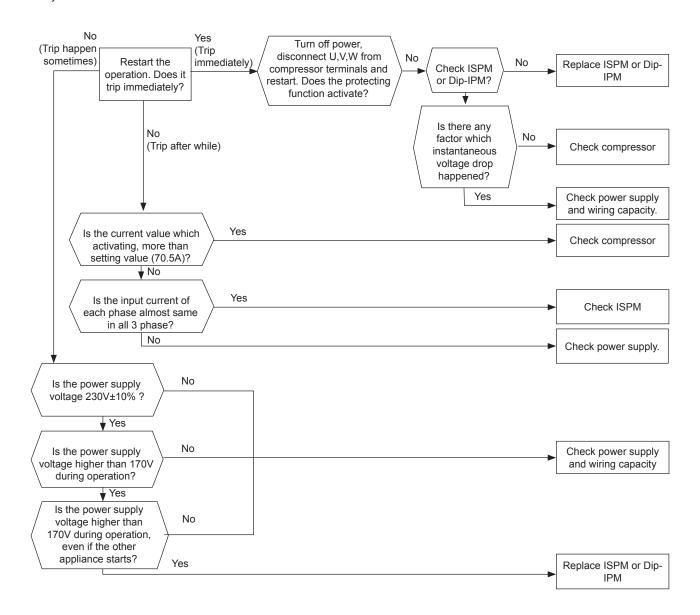



# DANGER

Electrical hazard. Risk of electrical shock. Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to section "Checking procedure of other main parts".

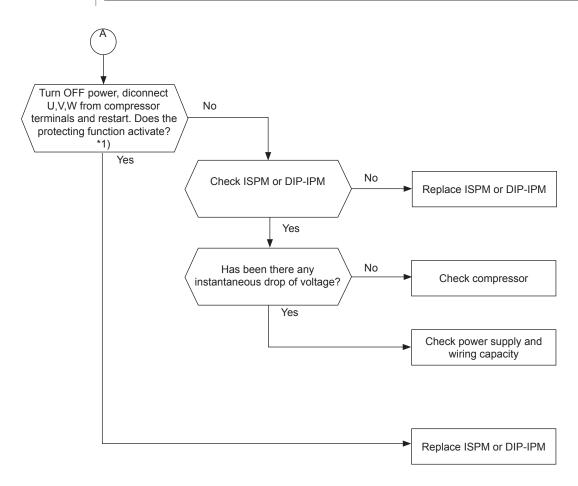

\*1): Turn ON the No.1 switch of the DIP switch on ISPM when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the DIP switch on ISPM.




Transistor module protection activation

- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- This alarm is indicated when the transistor module detect the abnormality 3 times in 30 minutes including 3. Retry operation is performed up to the occurrence of 2 times. (The compressor restarts automatically in 3 min.)

#### Conditions:

- Abnormal current to the transistor module such as
  - Short circuited or grounded or
  - Abnormal temperature of the IPM or Dip IPM and PCB4 or
  - Control voltage decrease

Retry code: P-17

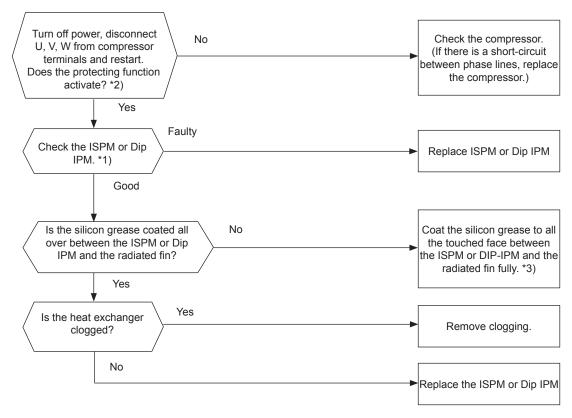

- \*1) Perform the high voltage discharge work by referring to the section "Checking procedure for other main parts". before checking and replacing the inverter components.
- \*2) Turn ON the No.1 switch of the dip switch DSW1 on Inverter PCB when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the dip switch DSW1 on Inverter PCB.




When alarm code "53" is indicated, the fan motor (DC motor) ensure that DC fan motor is checked according to the section "Fault diagnosis of DC fan motor".

155

Increase in inverter fin temperature


- The alarm code is displayed on the LCD controller and on the seven segments of the indoor unit PCB1.
- The compressor stops when the temperature of the thermistor for inverter fin excess 100°C, and restarts automatically in 3 minuntes.
- The alarm appears after 3 retries during 30 minutes.


Retry code: P-17

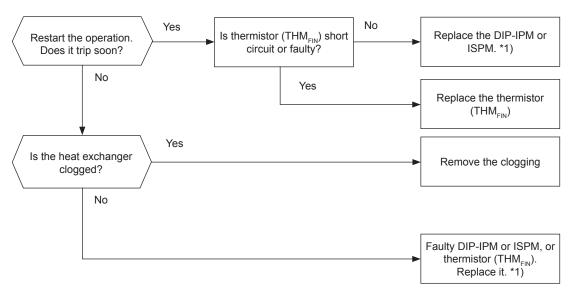

# i NOTE

1\*) Perform the high voltage discharge work by referring to the section "Checking procedure for other main parts" before checking and replacing the inverter components.

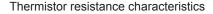

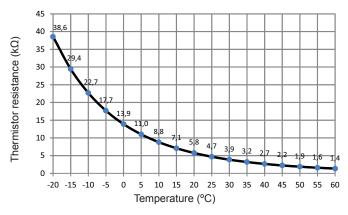

# 12.4 Troubleshooting in check mode

## 12.4.1 Check mode display


## **♦** Check mode by LCD controller

Refer to chapter LCD user's interface.

# 12.4.2 Troubleshooting using the 7 segment display (indoor unit)


# ◆ Check indicator function (PCB1&3)

Below is the 7segment position in PCB1&3:

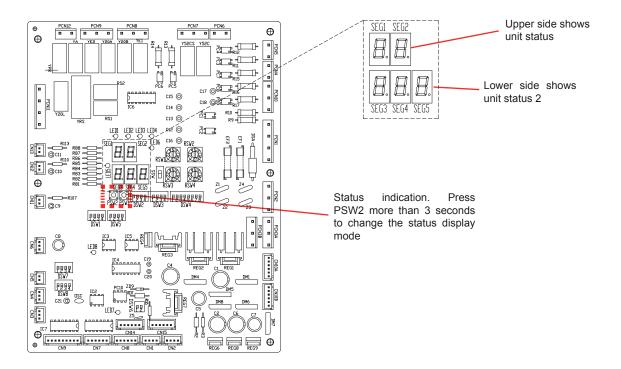

Operating conditions may be checked by 7-segment and push switches (PSW) on the PCB1&3 in the indoor unit. During checking data, do not touch the electric parts except for the indicated switches because 220-240V is applied to them. Pay attention not to contact the tools with electrical parts. If contacted, electrical parts will be damaged.


Change to check indicator mode to display different items.

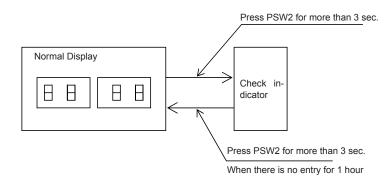

12

This is he procedure to follow to check with the combination of checking switches (▲: PSW2 ▼: PSW1):

- To start checking, press PSW2 switch for more than three seconds.
- To proceed checking, press the PSW2 switch.
- To back to the previous item, press the PSW1 switch.
- To cancel this checking, press the PSW2 switch for more than 3 seconds.

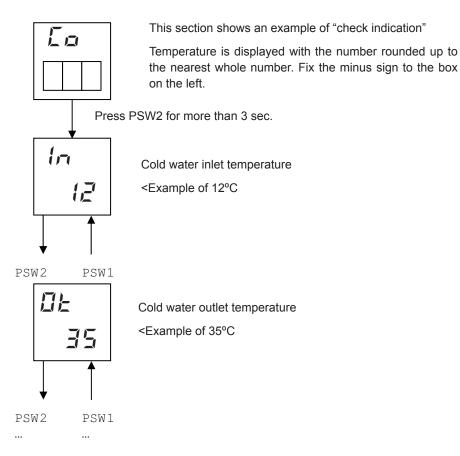

# ♦ Check mode items PCB1

Code Display	Data display	Description					
oF AE AS SP AL	5Ł oF on bo 888	Normal operation explained in <i>5. Control System</i>					
Eh	888	Heat water Temperature Setting (°C)					
ŁΣ	888	Cold Water Temperature Setting (°C) (Not available)					
υT	888	Water Inlet Temperature (THM <sub>wi</sub> ) (°C)					
oŁ	888	Water outlet Temperature (THM <sub>wo</sub> ) (°C)					
o2	888	Water outlet Temperature Circuit 2 (THM <sub>WO2</sub> ) (°C)					
ab	888	Water outlet Temperature Boiler (THM <sub>wo3</sub> )					
øh	888	Water outlet Temperature DHW (THM <sub>DHW</sub> ) (°C)					
۵5	888	Swimming pool Temperature (THM <sub>SWP</sub> ) (°C)					
ĿЯ	888	Outdoor Unit Ambient Temperature (THM7) (°C)					
ŁA.	888	Second ambient Temperature (THM <sub>AMB2</sub> ) (°C)					
Ł I	888	Outdoor Unit Average Ambient Temperature (2 hours) (°C)					
Ł 1.	888	Second Outdoor Unit Average Ambient Temperature (2 hours) (°C)					
ŁΩ	888	Gas Temperature (THM <sub>G</sub> ) (°C)					
EL	888	Liquid Temperature (THM <sub>L</sub> ) (°C)					
Ed	888	Compressor top Temperature (THM9) (°C)					
£5	888	Evaporation gas Temperature (THM8) (°C)					
dF	888	Defrosting					
d l	888	Cause of stoppage					
h l	888	Inverter Operation frequency (Hz)					
E,	888	Indoor Expansion valve opening (%)					
Eo	888	Outdoor Expansion valve opening					
P!	888	Compressor running current (A)					
d (	888	Digital inputs					
do	888	Digital outputs					
מט	888	Refrigerant Cycle Address					
1141	888	Indoor Unit Address					
no	888	ROM N°					
Ed	888	Capacity Code (Hp x 8)					
Eo	888	Outdoor capacity Code (Hp x 8)					

Indoor & Outdoor Unit Capacity Code

Capacity	Code
4HP	32
5HP	40
6HP	48




# **♦** Check mode items PCB3

Code Display	Data display	Description
Eh	888	Heat water Temperature Setting (°C)
la	888	Water Inlet Temperature (THM <sub>wi</sub> ) (°C)
ob	888	Water outlet Temperature (THM <sub>wo</sub> ) (°C)
ŁR	888	Inverter EBOX Ambient Temperature (THM <sub>INV</sub> ) (°C)
Ed	888	R134a Discharge Gas Temperature (THM <sub>D</sub> ) (°C)
£5	888	R134a Suction Temperature (THM <sub>s</sub> ) (°C)
EL	888	R410A Liquid Temperature (THM <sub>L</sub> ) (°C)
Ea	888	R134a Expansion valve opening (%)
EF	888	R134a Compressor frequency (Hz)
na.	888	ROM N°
	JEP	Model idenification: RWH-4.0FSVNFE
	7Pb	Model idenification: RWH-4.0FSNFE
Ed.	ЬЕР	Model idenification: RWH-5.0FSVNFE
LÖ.	ььР	Model idenification: RWH-5.0FSNFE
	LEP	Model idenification: RWH-6.0FSVNFE
	LbP	Model idenification: RWH-6.0FSNFE
oP.	888	Option selection status

# 12.4.3 Troubleshooting using the 7 segment display (outdoor unit)

# ♦ Simple checking by 7-segment display

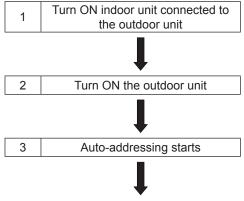


Outdoor unit, circuit board, PCB1

During auto-addressing, the following items can be checked using the outdoor unit's on-board 7-segment LED display:

- 1 Disconnection of power supply to the indoor unit.
- **2** Reverse connection of the operating line between the outdoor and indoor units.
- 3 Duplication of indoor unit number.

# **♦** Checking method by 7-segment display

Operating conditions and each part of refrigeration cycle can be checked by 7-segment and push switches (PSW) on the PCB in the outdoor unit. During checking data, do not touch the electric parts except for the indicated switches because 220-240V is applied to them. Pay attention not to contact the tools with electrical parts. If contacted, electrical parts will be damaged.

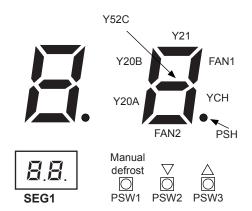

- To start checking, press PSW2 switch for more than three seconds.
- To proceed checking, press the PSW2 switch.
- To back to the previous item, press the PSW3 switch.
- To cancel this checking, press the PSW2 switch for more than 3 seconds.



	Item		Indication data			
Item	Check No.	In- dic.	In- dic.	Contents		
Total capacity of indoor unit connected	01	EP	22	7 <sub>2</sub> 7 00~96		
Input/output state of outdoor micro-computer	02	55	ă	Indicates only for the segments corresponding to the equipment in the figure. (See figure above)		
Alarm code for abnormal stoppage of compressor	03	RE	08	Alarm code on compressor		
Inverter order frequency to compressor	04	HI	74	30~115 (Hz) In case that frequency is high	er than 100Hz, the last two digits flicker	
Indoor order frequency to compressor	05	H2	74	30~115 (Hz) In case that frequency is high	ner than 100Hz, last two digits flicker	
Air flow ratio	06	Fo	80	00~100 (%) In case that air flow ratio is 100%, "♬♬" flashes		
Outdoor unit expansion valve opening	07	Eo	30	00~100 (%) In case that expansion valve opening is 100%, "☐☐" flashes		
Temperature at the top of compressor	08	Γd	02	00~142 (°C) In case that temperature is higher than 100°C, the last two digits flas		
Evaporating temperature at heating	09	ΓE	42	-19~80°C		
Ambient air temperature	10	Γ¤	-∃	-19~80°C		
Cause of stoppage at inverter	11	J	1	(See table at the next page)		
Control information	12	ΓF	20	Internal information of outdoo	or unit PCB	
Control information	13	R (	12	Internal information of outdoo	or unit PCB	
Inverter secondary current	14	R2	20	00~199 (A)		
Outdoor unit address	15	nΒ		00~15		
				00~100 (%)	In case of twin/triple/quad-type unit, the information of 2nd to the 4th indo-	
Indoor unit expansion valve opening	16	EA	20	In case that opening is 100%. "\$\mathcal{U}\	or units is indicated repeatedly.  The right character of the indication	
Liquid pipe temperature of indoor unit (freeze protection)	17	LA	<i>0</i> 5	-19~127 (°C)	represents the indoor unit setting No.	
Indoor unit intake air temperature	18	ıA	28	Single: A Twin: A, b		
Indoor unit discharge air temperature	19	ωR	20	-19~127 (°C)	Triple: A, b, c Quad: A, b, c, d	
Cause of indoor unit stoppage	20	dR	<i>0</i> 5	(See table at the next page)	Quuu. 11, 0, 0, u	

## Cause of inverter stoppage (11)

## Cause of indoor unit stoppage (20)

Indication	Contents
1	DIP-IPM / ISPM error
2	Instantaneous over current
3	Inverter fin thermistor protection activation
4	Electronic thermal activation
5	Inverter voltage decrease
5	Over voltage
7	Abnormal transmission
8	Abnormal current detection
9	Instantaneous power failure detection
1.1	Reset of micro-computer for inverter
12	Earth fault detection from compressor
13	Open phase detection
14	Inverter malfunction
15	Inverter malfunction
15	Inverter malfunction
17	Transmission error
18	Abnormal current detection
19	Abnormal protective device

Indication	Contents
	Operation OFF, Power OFF
<b>1</b>	Thermo-OFF
02	Alarm
03	Freeze protection overheating protection
05	Instantaneous power failure at outdoor unit
05	Instantaneous power failure at indoor unit
רם	Stoppage of heating operation due to high outdoor air temperature
Ш	Demand thermo OFF
13	Retry for Pd increase prevention
15	Vacuum/discharge gas temperature increase retry
15	Retry due to discharge gas SUPERHEAT decrease
17	IPM error retry, instantaneous over current of inverter retry, electronic thermal activation of inverter retry, abnormal current sensor of inverter retry
18	Retry due to inverter voltage decrease
	Retry due to Inverter Overvoltage
19	Other retry
בכ	Forced thermo-OFF
22	(During compressor pre-heating)
24	Thermo-OFF during energy saving operation mode



#### NOTE

To finish checking: press the PSW2 switch for more than 3 seconds

# **Cancelation of Forced Thermo OFF**

Turn ON the power source and wait for more than 30 seconds. Then press PSW1 and PSW3 simultaneously for more than 3 seconds.

Forced thermo-OFF (indoor unit error code 22) will be cancelled.

However, this function may damage the compressor, use only on inevitable occasion.



# Cause of inverter stoppage

			Remar	k
Code	Cause	Cause of stoppage for corresponding unit	Indication during retry	Alarm code
	Automatic stoppage of transistor module			
1	(IPM, ISPM, dipIPM Error)	17	PT	53
	(Over current, decrease voltage, short circuit protection)			
2	Instantaneous over current	17	PT	48
3	Abnormal inverter fin thermistor	17	P7	54
4	Electronic thermal activation	17	P7	48
5	Inverter voltage decrease	18	PB	05
5	Over voltage	18	PB	05
7	Abnormal inverter transmission	18	-	-
8	Abnormal current detection	17	P7	5 /
9	Instantaneous power failure detection	18	-	-
11	Reset of micro-computer for inverter	18	-	-
12	Earth fault detection from compressor (Only starting)	17	P7	53
13	Abnormal power source phase (Open phase)	18	-	-
115	Inverter PCB abnormality	18	PB	55
17	Abnormal transmission	18	P8	55
18	Abnormal current detection	-	-	02
19	Abnormal protective device	-	-	38
20				
~	Other factors	18	-	-
<b>63</b>				

## ◆ Protection control code on 7-segment display

- 1 Protection control code is displayed on 7-segment when a protection control is activated.
- 2 Protection control code is displayed while function is working, and goes out when released.
- **3** When several protection control are activated, code number with higher priority will be indicated (see below for the priority order).
  - a. Higher priority is given to protection control related to frequency control than the other. Priority order:
    - High-pressure increase protection
    - Over current protection
    - Cold draft protection
  - **b.** In relation to retry control, the latest retrial will be indicated unless a protection control related to frequency control is indicated.

Code		Protection control
P	1	High-pressure ratio control at heating operation
P	2	High-pressure increase protection
P	3	Over current protection
P	4	IPM fin temperature increase protection
P	5	Discharge gas temperature increase protection
P	5	Frost formation protection
P	7	Unbalance power source detecting
P	A	Current demand control
P	Ь	Low-pressure decrease protection
P	Ε	Cold draft protection

- Retry indication continues for 30 minutes unless a protection control is indicated.
- Retry indication disappears if the stop signal comes from all rooms.

Code		Protection control
P	7	Invertee rate.
P	8	Inverter retry



#### NOTE

The protection control code being indicated on 7-segment display is changed to an alarm code when the abnormal operation occurs. Also, the same alarm code is indicated on the remote control switch.



# **◆** Activating condition of protection control code

For following the conditions as the temperature change, etc., the control of frequency, etc. is performed to prevent the abnormal conditions by the protection control. The activating conditions of protection control are shown in the table below.

Code	Protection control	Activating condition	Remarks
PO	Low-pressure ratio control at pump down operation	Compression ratio ε < 2.2 => frequency increase	ε = (Pd+0.1)/(Ps+0.1)
P!	High-pressure ratio control at heating operation	Compression ratio ε > 7.5 => frequency decrease	$\varepsilon = (Pd+0.1)/(Ps+0.1)$
PZ	High-pressure increase protection	High pressure switch for control is activated => frequency decrease	
PB	Over current protection	Inverter output current > (*1)A => frequency decrease	
PY	DipIPM, ISPM temperature increase protection	Inverter fin temperature RAS-(4-6)HVRNME-AF > 80 °C RAS-(4-6)HRNME-AF > 100 °C => Frequency decrease	
P5	Discharge gas temperature increase protection	Temperature at the top of compressor is high => frequency decrease  Temperature at the top of compressor > 107°C => indicate P5	
P5	Frost formation protection	TL ≤ 2°C Over 3 minutes => Frequency decrease	TL: liquid piping, temperature of indoor unit
P9	Unbalance power source detecting	Inverter output current > 13A (380A) => frequency decrease	
PR	Current demand control	Inverter output current > (*2)A => frequency decrease	In case of demand control setting
Pb	Low-pressure decrease protection	Low pressure switch for control is activated => frequency decrease	
PE	Cold draft protection	TO ≤ 10°C and ε ≥ 2.6 => frequency decrease	$\epsilon$ = (Pd+0.1)/(Ps+0.1) TO: outlet temperature of indoor unit
P7	Inverter retry	Automatic stoppage of transistor module, activation of electronic thermal or abnormal current sensor	When activating 3 times in 30 minutes, "48", "51", "53" or "54" alarm is indicated.
P8	Inverter retry	Insufficient/excessive voltage at inverter Circuit or PCB connector part	When activating 3 times in 30 minutes, "06" or "55" alarm is indicated.



#### NOTES

- During protection control (except during alarm stoppage), the protection control code is indicated.
- The protection control code is indicated during protection control and turns off when canceling the protection control.
- After retry control, the condition of monitoring is continued for 30 minutes.
- The maximum value (\*1) and (\*2) are as follows:

(*1)	UD	1~	230V 50	)Hz	3N~ 400V 50HZ		
	HP	4	5	6	4	5	6
	Current (A)	16.0	24.0	24.0	8.0	12.0	12.0

	HP	1~ :	230V 5	0Hz	3N~ 400V 50HZ		
(*2)	Demand setting	4	5	6	4	5	6
Current (A)	100%	13.0	17.0	20.0	4.0	5.5	20.0
	75%	10.0	13.0	15.0	3.0	4.0	15.0
	50%	6.5	8.5	10.0	2.0	2.0	10.0

# 12.5 Checking procedure for main parts

# 12.5.1 Procedure for checking the DIP-IPM inverter for indoor and outdoor units


High voltage discharge is an imperative work for replacing parts.



# CAUTION

Electrical hazard. Risk of electrical shock. Perform this high voltage discharge work to avoid an electric shock.

- 1 Turn OFF the main switches and wait for three minutes. Make sure that no high voltage exists. If LED201 is ON after start-up and LED201 is OFF after turning OFF power source, the voltage will decrease lower than DC50V.
- 2 Connect connecting wires to an electrical soldering iron
- Connect the wires to terminals, P and N on DIP-IPM.
   Discharging is started, resulting in hot soldering iron. Pay attention not to short-circuit between terminal P(+) and N(-)
- 4 Wait for 2 or 3 minutes and measure the voltage once again. Check to ensure that no voltage is charged.

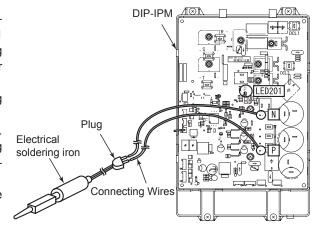


# **♦** Inverter module checking procedure

Internal circuit of rectified part of DIP-IPM

Non-faulty if [1] - [8] are checked and satisfied.

Measure with 1  $k\Omega$  range of a tester.

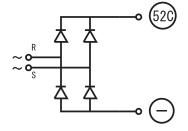




# NOTE

DO NOT use a digital tester.

- 1 Touch [+] of the tester to DIP-IPM 52C terminal, and [-] to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 1  $k\Omega$  or greater.
- 2 Contrary to [1], touch [-] of the tester to DIP-IPM 52C terminal, and [+] to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 k $\Omega$  or greater.
- 3 Touch [-] of the tester to [-] of DIP-IPM DMI (soldered part), and [+] of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 1  $k\Omega$  or greater
- 4 Contrary to [3], touch [+] of the tester to [-] of DIP-IPM DMI, and [-] of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 k $\Omega$  or greater.

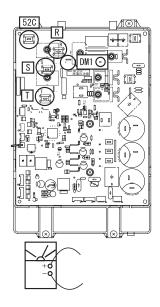

12


- 5 Touch [+] of the tester to [P] of DIP-IPM (soldered part), and [-] to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 1 k $\Omega$  or greater.
- **6** Contrary to [5], touch [-] of the tester to [P] of DIP-IPM (soldered part), and [+] to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 30 k $\Omega$  or greater. (Resistance gradually increases during measurement.)
- 7 Touch [-] of the tester to [N] of DIP-IPM (soldered part), and [+] to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 1  $k\Omega$  or greater.
- 8 Contrary to [7], touch [+] of the tester to [N] of DIP-IPM (soldered part), and [-] to DIP-IPM U, V, W terminals to measure the resistance. Normal if all three terminals have 30 k $\Omega$  or greater. (Resistance gradually increases during measurement.)


Internal circuit of ACT part of inverter module Non-faulty if [9] – [13] are checked and satisfied. (Measure with 1 k $\Omega$  range of a tester.)




DO NOT use a digital tester.

- **9** Check items [1] [8].
- 10 Touch [+] of the tester to DIP-IPM DCL2 terminal, and [-] to [P] of ISPM/DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 100  $k\Omega$  or greater
- 11 Contrary to [10], touch [-] of the tester to DIP-IPM DCL2 terminal, and [+] to [P] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 1 k $\Omega$  or greater.
- 12 Touch [+] of the tester to DIP-IPM DCL2 terminal, and [-] to [N] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 100 k $\Omega$  or greater.
- 13 Contrary to [12], touch [-] of the tester to DIP-IPM DCL2 terminal, and [+] to [N] of DIP-IPM (soldered part) to measure the resistance. Normal if all three terminals have 10 k $\Omega$  or greater. (Resistance gradually increases during measurement.)

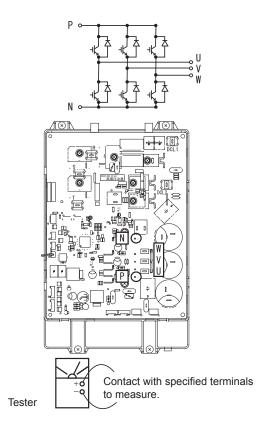

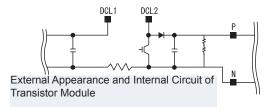

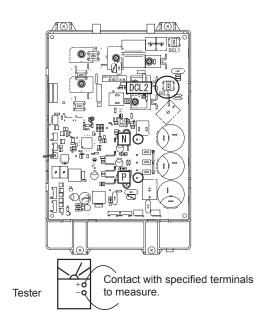

### 12.5.2 Procedure for checking the ISPM inverter for indoor and outdoor units

High voltage discharge is an imperative work for replacing parts.




### ⚠ CAUTION

Electrical hazard. Risk of electrical shock. Perform this high voltage discharge work to avoid an electric shock.

Remove all the terminals of the ISPM before check.

Rectification parts of internal circuit of ISPM (common)

If next items are performed and the results are satisfactory, ISPM is normal. Measure it under 1  $k\Omega$  range of a tester.

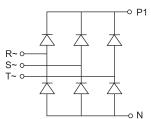




DO NOT use a digital tester.

1	By touching the + side of the tester to the P1 terminal of ISPM and the - side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 1 k $\Omega$ , it is normal.	
2	By touching the - side of the tester to the P1 terminal of ISPM and the + side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 100 k $\Omega$ , it is normal.	
3	By touching the - side of the tester to the N terminal of ISPM and the + side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 1 k $\Omega$ , it is normal.	
4	By touching the + side of the tester to the N terminal of ISPM and the - side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 100 k $\Omega$ , it is normal.	
5	By touching the + side of the tester to the P terminal of ISPM and the - side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 1 k $\Omega$ , it is normal.	
6	By touching the - side of the tester to the P terminal of ISPM and the + side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 100 k $\Omega$ , it is normal.	
7	By touching the - side of the tester to the N terminal of ISPM and the + side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 100 k $\Omega$ , it is normal.	

8 By touching the + side of the tester to the N terminal of ISPM and the - side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 1 k $\Omega$ , it is normal.

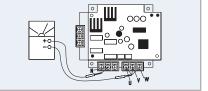


#### ◆ Procedure using a digital tester



### NOTE

The digital tester must be able to check semiconductors and continuity.

Based on the following scheme of ISPM with the contactor, the reactor, capacitors and the resistance, follow the next procedures.

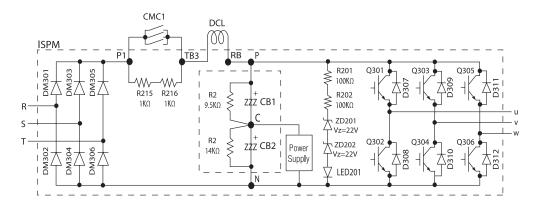

#### Checking the diode module

- 1 By placing a jumper from +P1 to -RST or -N to +RST, no continuity and no variation on voltage drop should appear.
- 2 By placing a jumper from P1 to +RST or +N to RST: continuity and variation on voltage drop (nearly 0,365) should be displayed, and the same value in all cases. Not the same value means that the diode module is damaged.

#### **Checking the transistor module**

- 1 By bonding +P to -UVW or -N to +UVW, no continuity and no variation on voltage drop should appear.
- 2 By bonding -P to +UVW or +N to -UVW: continuity and variation on voltage drop (nearly 0,405) should be displayed, and the same value in all cases. Not the same value means that the diode module is damaged.


### 12.5.3 Checking capacitors CB1 & CB2 (RAS-(4-6)HRNME-AF)



### 🗥 DANGER:

- Electrical hazard. Risk of serious injuries or death.
- Before installing the electrical wiring or before performing a periodical check, turn OFF the main switch of the unit. For safety reasons, be sure that the fan is stopped.
- Prevent from touching the capacitors' terminals. High voltage should be present before discharging them.
- Turn off the unit and wait for the LED 201 to be off before touching the components.

If it's possible, check the capacitance of each capacitor :  $4700\mu F \pm 20\%$  (between  $3760\mu F$  to  $5640\mu F$ ).

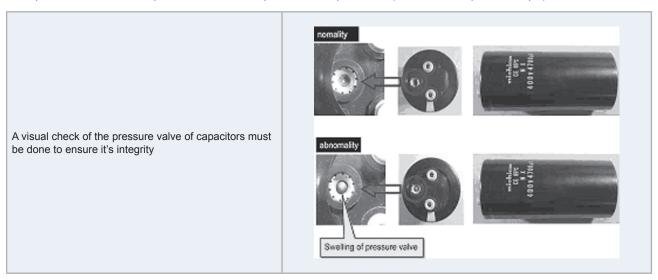



# i NOTE

It is not recommended to check tension.

PN = Power source x  $\sqrt{2}$ , PC=CN is nearly equal to PN/2.

#### R1 & R2:

- 1 If the value is different:
  - Capacitor could be damaged by overload.
  - 04 alarm could be displayed if low supply voltage (CN) for ISPM control part is present.
- 2 R1 =  $9.5\Omega$  & R2 =  $14.0\Omega$ . If these values are different, the capacitors will be not properly charged.

Resistance between P1 & TB3 =  $2k\Omega$  (white resistance in the ISPM).

In case that Mg. SW 52C (CMC1) is not ON, the compressor current will travel through these resistances, and they will be broken. Mg. SW 52C (CMC1) should be checked. Check the resistance between the primary and secondary terminal where the contact point is melted for Mg. SW 42C. If there is continuity, the contact is melted and 52C is broken (NG).

Reactor resistance can be messured between TB3 and RB =  $0.2\Omega$ . Checking this component is not necessary.



- Noise filter does not affect ISPM directly, so is not necessary to check it when ISPM fails.
- Both digital or analog testers are valid to check the values.



### 12.5.4 Fault diagnosis of DC fan motor.

When ISPM/DIP-IPM is faulty and Alarm 53 appears, the fan motor may also be damaged. To prevent ISPM/DIP-IPM damage which may result from operation combined with a faulty fan motor, check also if the fan motor is not damaged when ISPM/DIP-IPM is replaced



- Turn OFF main power before start working.
- Working and checking with the power ON may disturb correct diagnosis and may result in failure.

Models with DC motor(s)	N° of motors
RAS-(4-6)H(V)RNME-AF	2 Pieces

#### Procedure in case of error diagnosis

1 Remove fan motor connectors from the control PCB, ISPM or DIP-IPM and turn the fan motor shaft by hand.

Normal	Fan motor shaft turns smoothly
Faulty	No continuous rotary torque movement felt when turning the motor by hand. This occurs because the internal magnet of the fan motor breaks the movement when the internal electronic circuit of the fan motor has a short-circuit fault.

#### 2 Measure the fan motor resistance:

	Measurement procedure			
1	Remove the fan motor connector from the control PCB, ISPM or DIP-IPM.			
2	Connect the black test lead of the tester to the black wire pin of the fan motor connector.			
3	Connect the	red test lead to the wire connector pin to be checked.		
		Results		
No	ormal	Observed values will be close to the normal values in the table below.		
Faulty		Obbserved values will be deviated from the normal values in the table below. (Generally, an open-circuit fault shows $\infty$ , and a short-circuit fault shows several $\Omega$ - $k\Omega$ ).		
		Internal electronic circuit fault of the fan motor including short-circuit and breakage can be checked.		

Madal	Mataumadal	Wire color for checking (Normal value)				
Model	Motor model	Red-black	White-black Yellow-black Blue-black			
RAS-4H(V)RNME-AF (upper)	SIC-65FV-D840-1	1MΩ or greater	26-50kΩ	168-312kΩ	1MΩ or greater	
RAS-(4-6)H(V)RNME-AF (lower)		TIVISZ OF Greater	20-50KΩ	100-312K12	TIVILY OF Greater	
RAS-(5/6)HVRNME-AF (upper)	SIC-68FV-D851-7	1MΩ or greater	42-78kΩ	168-312kΩ	1MΩ or greater	

Values are shown for referential purpose. While actual values may vary depending on the type of the tester, any tester can be used to determine any short-circuit or breakage based on  $\infty$  or several  $\Omega$  or 0 or  $\infty$ .



# 12.5.5 Checking procedure for the electronic expansion valve for indoor and outdoor units

	Indoor unit electronic expansion valve	Outdoor unit electronic expansion valve
Locked with fully closed	Check the liquid pipe temperature during the heating process. It is abnormal if the temperature does not increase.	It is abnormal if the liquid pipe pressure does not increase during the pump down process.
Locked with slightly open	It is abnormal under the following condition:  The temperature of the freeze protection thermistor becomes lower than the suction air temperature when the unit which is under chechink	It is abnormal if the liquid pipe pressure does not increase and the outlet temperature of the expansion valve decreases after the pump down process starts.
Locked with fully open	stops and the other units are under the pump down process.  Electronic expansion valve  Freeze protection thermistor	It is abnormal under the following conditions: after the heating process for more than 30 minutes, the discharge gas temperature of the compressor is not 10°C higher than the condensing temperature and there is no other faults, such as an excessive charge of refrigerant and others.

# 13. Maintenance notes

### Index

13.1.	General notes	462
	13.1.1. Checking the power source and the wiring connection	462
	13.1.2. Burnt-out compressor due to an insufficient refrigerant charge	462
13.2.	Maintenance work	463
	13.2.1. Outdoor unit	463
	13.2.2. Indoor unit	464
	13.2.3. DHW Tank	467
13.3.	Service and maintenance record	470
	13.3.1. Outdoor unit	470
	13.3.2. Indoor unit	471
	13.3.3. DHW Tank	472
13.4.	Service and maintenance record using the 7-segment display	473
	13.4.1. Outdoor unit	473
	13.4.2. Indoor unit	474
13.5.	Service and maintenance record by LCD	476
13.6.	Checking procedure for the outdoor and indoor compressors	477
	13.6.1. Checking procedure for the outdoor compressor (R410A refrigerant)	477
	13.6.2. Checking procedure for the indoor compressor (R134a refrigerant)	478
	13.6.3. Additional Information for "CHECK LIST ON COMPRESSOR" (R410A and R134a)	479



### 13.1 General notes

### 13.1.1 Checking the power source and the wiring connection

Check the following items in the case of abnormal operation:

No.	Check item	Procedure		
1	Is the breaker of the fuse cut out?	Check the secondary voltage of the breaker and the fuse by means of a tester.		
2	Is the secondary power source on the transformer correct?	Disconnect the secondary side of the transformer and check the voltage by means of a tester.    Disconnect the secondary side of the transformer and check the voltage by means of a tester.    Disconnect the secondary side of the transformer and check the voltage by means of a tester.    Disconnect the secondary side of the transformer and check the voltage by means of a tester.		
3	Is the wiring loosened or incorrectly connected?	Check the wiring connection on the PCB.  Thermistor connectors  Connector of the transformer  Connector of the LCD cable  Each connector in a high-voltage circuit  Check the connectors according to the electrical wiring diagram.		

### 13.1.2 Burnt-out compressor due to an insufficient refrigerant charge

Question and answer for the field work

Exampl	Example 1 (Indoor unit R-410A compressor): Burnt-out compressor due to an insufficient refrigerant charge			
Phenomenon	After commissioning the alarm code "08" sometimes occurred and the compressors were burnt out after operating for two months.			
Cause	The refrigerant piping work was performed during the summer season. The additional refrigerant was not sufficiently charged from the discharge gas side.  This insufficient refrigerant charge resulted in the overheating of the discharge gas and the oil deterioration which was finally due to the separated operation despite the alarm code "08".			
Countermeasure	<ul> <li>The compressor was replaced with a new compressor.</li> <li>The correct refrigerant amount was charged according to the refrigerant piping length.</li> </ul>			
Remarks	Additional refrigerant charge: Open the liquid stop valves slightly when you charge the additional refrigerant from the check joint of the liquid stop valves (the discharge gas side) during the cooling process. If the liquid stop valve is fully open it is difficult to charge the additional refrigerant. Do not charge the refrigerant from the gas stop valve.			

Examp	Example 2 (Indoor unit R-134a compressor): Burnt-out compressor due to an insufficient refrigerant charge			
Phenomenon	After commissioning the alarm code "106" sometimes occurred and the compressors were burnt out after operating for two months.			
Cause	The insufficient refrigerant charge resulted in the overheating of the discharge gas and the oil deterioration which was finally due to the separated operation despite the alarm code "106".			
Countermeasure	<ul> <li>The compressor was replaced with a new compressor.</li> <li>The correct refrigerant amount was charged according to the refrigerant piping length.</li> </ul>			
Remarks	Additional refrigerant charge: Charge the additional refrigerant from the check joints very slowly. If the refrigerant cylinder valve is fully open it is difficult to charge the additional refrigerant. Use the correct check joints to charge refrigerant.			

# 13

#### 13.2 Maintenance work



#### CAUTION

- All inspections and checks of the outdoor unit, indoor unit and DHW tank have to be carried out by a licensed technician
  and never by the user itself.
- Before any inspection and check the unit main power supply has to be switched OFF.
- Wait minimum 10 minutes or more from all power supply have been turned OFF.
- Take care with the crankcase heater. It could operate even when compressor is OFF.
- Take care with the electrical box components. Some of them could remain hot after switch OFF the unit.



#### NOTE

All these maintenance operations must be done with appropriate materials and following this manual.

#### 13.2.1 Outdoor unit

- 1 Fan and fan motor
  - Lubrication: All the fan motors are pre-lubricated and sealed at the factory. Therefore no lubrication maintenance is required.
  - Sound and vibration: Check for abnormal sounds and vibrations.
  - · Rotation: Check the clockwise rotation and the rotating speed.
  - · Insulation: Check the electrical insulation resistance.
- 2 Heat exchanger
  - Clog: Inspect the heat exchanger at regular intervals and remove any accumulated dirt and any accumulated dust from the heat exchanger. You should also remove other obstacles such as the growing grass and the pieces of paper which might restrict the airflow.
- 3 Refrigerant piping connection
  - Leakage: Check for the refrigerant leakage at the piping connection between the outdoor and the indoor unit.
  - Pressure: Check the R-410A refrigerant pressure using the check joints of the outdoor unit. Refer to the chapter Piping work and refrigerant charge for more information about the check joints.
- 4 Cabinet
  - Stain: Check for any stain and remove it cleaning if it is the case.
  - · Fixing screw: Check for any loosened screw or any lost screw. Fix the loosened screws and the lost screws.
  - Insulation material: Check for any peeled thermal insulator on the cabinet. Repair the thermal insulator.
- 5 Electrical equipment
  - Activation: Check for an abnormal activation of the magnetic contactor, the auxiliary relay, the PCB and others.
  - Line condition: Pay attention to the working voltage, the working amperage and the working phase balance. Check for any faulty contact that is caused by the loosened terminal connections, the oxidized contacts, the foreign matter and other items. Check the electrical insulation resistance.
- 6 Control device and protection device
  - Setting: Do not readjust the setting in the field unless the setting is maintained at a point that is different from the point listed in the Installation and operation manual.
- 7 R410A compressor
  - Sound and vibration: Check for abnormal sounds and vibrations.
  - Activation: Check that the voltage drop of the power supply line is within 15% at the start and within 2% during the
    operation.
- 8 Reverse valve
  - · Activation: Check for any abnormal activation sound.
- 9 Strainer
  - · Clog: Check that there is no temperature difference between both ends.
- 10 Ground wire
  - · Ground line: Check for the continuity to earth.



- 11 Oil heater (Crankcase heater of the R-410A compressor)
  - Activation: You should activate the oil heater at least twelve hours before the start-up by turning ON the main switch.

#### Refrigerant charge and vacuum procedure or pump down of refrigerant



#### 10TE

Refer to the section Refrigerant circuit on the chapter Piping work and refrigerant charge for the detailed information.

#### 13.2.2 Indoor unit

### **♦** General procedure

To ensure good operation and reliability of the indoor unit its main parts and field wiring have to be checked periodically.

The following checks have to be done by qualified technicians at least once a year:

- 1 Cabinet
  - Stain: Check for any stain and remove it cleaning if it is the case.
  - Fixing screw: Check for any loosened screw or any lost screw. Fix the loosened screws and the lost screws.
  - Insulation material: Check for any peeled thermal insulator on the indoor part of the covers. Repair the thermal insulator.
- 2 Water piping connection
  - Leakage: Check that there are no water leakages in the main water circuit and through the piping connection between the indoor unit, the space heating and the heating coil. Check all the joints, connections and circuit elements.



#### NOTE

- Pay special attention to the water pipe connections placed over the electrical box.
- · If it is detected leakage and the water pipe needs to be replaced, remember to replace the gasket.
- 3 Water pressure:
  - Pressure checking: Check the water pressure using the indoor unit manometer or the LCD manometer (in case of existing tank) and the water pressure ports placed beside the indoor unit manometer.
  - · Water pressure switch: Check continuity in water pressure switch (when water pump is ON).
- 4 Water strainer:
  - Cleaning: Unscrew the water strainer and replace or clean the mesh if needed.



#### NOTE

Pay special attention to the gasket. It is recommended to replace it by a new one once a while.

- 5 Air grille filter:
  - Cleaning: Check if there is accumulated dirt in the air grille filter at the base of the indoor unit. If so, clean or replace it with a new one because otherwise the inverter fan could suck dirt and this will cause a malfunction. In this case, check also the inverter fans surface and clean the accumulated dirt if it is produced.
- 6 Safety valve:
  - Operation: Check the correct operation of the indoor unit safety valve (pressure relief valve) on the space heating circuit. Open it manually and some water should be expelled by its connected drain pipe and will be driven to the base hole.
- 7 Air purger:
  - Excessive air: Check the correct operation of the indoor unit air purger. There may be air in the water circuit, which needs to be expelled by this air purger.
- 8 Water flow switch:
  - Water flow: Check that this element is indicating correctly if there is circulating a minimum water flow on the space heating circuit, checking the continuity in the water flow switch (when water pump is ON).

#### 9 Water pump:

- Pump performance curves: Check in the 3 possible pump speeds (High, medium, low) that there is provided a correct water flow and pressure in accordance with the Pump performance curves.
- Electrical connection: Check the correct connection of the electrical wiring of the water pump. If it is detected moisture in the the pump surface, revise the water pipe connections of the 3-way valve. A water leakage could have been occurred.
- No presence of air: Remove the air inside the water pump as explained in section *Water filling* of the *Refrigerant* and water piping chapter in this document.

#### 10 Fixing points tightening:

• Check the fixing points of the indoor unit. Check the indoor unit mounting foots. The indoor unit has to be always in a vertical position.

#### 11 Refrigerant piping connection

- Leakage: Check for the refrigerant leakage at the refrigerant piping connections. Check with detail the flare nut connection of the indoor unit refrigerant lines with the refrigerant piping supplied accessory.
- Pressure: Check the R-134a refrigerant pressure using the check joints of the indoor unit. Refer to the chapter *Piping work and refrigerant charge* for more information about the check joints.

#### 12 Electrical equipment

- · Activation: Check for an abnormal activation of the magnetic contactor, the relay, the PCBs and others.
- Line condition: Pay attention to the working voltage, the working amperage and the working phase balance. Check for any faulty contact that is caused by the loosened terminal connections, the oxidized contacts, the foreign matter and other items. Check the electrical insulation resistance.

#### 13 Control device and protection device

 Setting: Do not readjust the setting in the field unless the setting is maintained at a point that is different from the point listed in the section

#### 14 R134a compressor

- · Sound and vibration: Check for abnormal sounds and vibrations.
- Activation: Check that the voltage drop of the power supply line is within 15% at the start and within 2% during the
  operation.

#### 15 Ground wire

· Ground line: Check for the continuity to earth.

#### 16 Oil heater (Crankcase heater of the R-134a compressor)

 Activation: You should activate the oil heater at least twelve hours before the start-up by turning ON the main switch.

### **♦** Descaling

Water quality and set temperature can affect the scale production and it can deposit on the heat exchangers surface of the indoor unit restricting the heat exchange and the good operation of the unit.



#### NOTE

Descaling should be necessary periodically at certain intervals depending on the supplied water quality.

Check the scale level when proceeding maintenance to ensure reliability of the unit.


If necessary, proceed with descaling:

- 1 Switch OFF the main power supply of the indoor unit.
- 2 Empty the indoor unit water circuit by fully opening the drain valve.
- 3 Proceed with descaling of the heat exchangers.
- 4 Ensure that the water quality remains compliant with the EU council directive 98/83 EC.

#### **♦** Draining


To drain the indoor unit follow the next procedure:


- 1 Switch OFF the main power supply of the indoor unit.
- 2 Close the 2 shut-off valves (field supplied) installed at the space heating pipes (Water inlet and outlet connections).
- 3 Open the safety valve of the indoor unit manually. The water will be expelled by its connected drain pipe and will be driven to the base hole.
- 4 There will be a part of the water contained into the indoor unit which may not be expelled through the safety valve. Open the cap placed in the lower part of the water pump piping in order to expel it.
- 5 Once all the water has been drained, close both safety valve and cap.

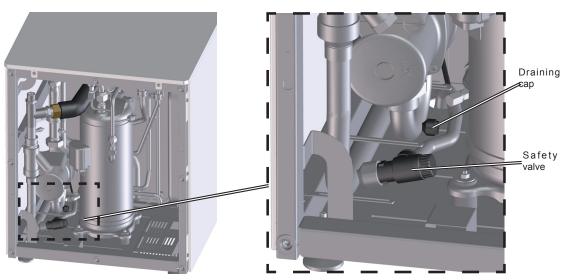



(\*): Check that drain pipe for safety valve is correctly connected and placed as far as possible from the indoor unit.

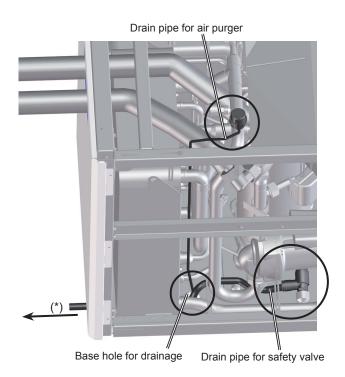

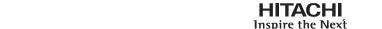

#### 13.2.3 **DHW Tank**

#### **♦** General procedure

To ensure good operation and reliability of the DHW tank its main parts and field wiring have to be checked periodically.

The following checks have to be done by qualified technicians at least once a year:

#### 1 Cabinet

- · Stain: Check for any stain and remove it cleaning if it is the case.
- Fixing screw: Check for any loosened screw or any lost screw. Fix the loosened screws and the lost screws.
- Insulation material: Check for any peeled thermal insulator on the indoor part of the covers. Repair the thermal insulator.

#### 2 Water piping connection

- Leakage: Check that there are no water leakages in the following water piping connections. Check all the joints, connections and circuit elements:
  - Heating coil pipes
  - DHW pipes
  - Flexible water pipes kit (ATW-FWP-01) (Only in case of tank beside the indoor unit)



#### NOTE

- Pay special attention to the water pipe connections placed over the electrical box (in case of tank integrated over the indoor unit).
- If it is detected leakage and the water pipe needs to be replaced, remember to replace the gasket.

#### 3 DHW flow and pressure:

- · DHW flow: Check that the water circulation is correct along all the DHW circuit.
- · DHW pressure: Check there is no loss of pressure and ensure that DHW pressure is not higher than 6 bars.
- 4 Security water valve (DHWT-SWG-01 accessory):
  - Operation: Check the correct operation of the security water valve (pressure and temperature relief valve) at the DHW inlet connection of the tank. Remember that this element must ensure that the following functions are provided (Pressure protection, non-return function, shut-off valve, filling and draining).
- **5** Fixing points tightening:
  - · Tank integrated over the indoor unit:
    - Check that the 4 bolts (factory supplied) between the indoor unit and the tank (2 screws at the left side and the other 2 at the right side) are correctly screwed. If it are loosened, fix it.
    - Check that the wall fixing accessory (factory supplied) is correctly fixed between tank and the wall.
    - Check that the tank is totally vertical. Check the set mounting foot if it is needed.
  - Tank beside the indoor unit:
    - Check that the wall fixing accessory (factory supplied) is correctly fixed between tank and the wall.
    - Check that the tank is totally vertical. Check the tank mounting foot if it is needed.

#### 6 Electrical equipment

- · Activation: Check for an abnormal activation of the electric heater.
- Line condition: Pay attention to the working voltage, the working amperage and the working phase balance. Check for any faulty contact that is caused by the loosened terminal connections, the oxidized contacts, the foreign matter and other items. Check the electrical insulation resistance.

#### 7 Ground wire

• Ground line: Check for the continuity to earth for the electrical wiring of the electric heater of the tank.

#### **♦** Descaling

Water quality and set temperature can affect the scale production and it can deposit on the heating coil surface of the DHW tank restricting the heat exchange and the good operation of the unit.



#### NOTE

Descaling should be necessary periodically at certain intervals depending on the supplied water quality.

Check the scale level when proceeding maintenance to ensure reliability of the unit.

If necessary, proceed with descaling:

- 1 Switch OFF the main power supply of the DHW tank. Switch OFF the main power supply of the indoor unit.
- 2 Empty the DHW tank of water closing the inlet main water supply valve and fully opening the outlet valves.
- 3 Proceed with descaling of the heating coil.
- 4 Ensure that the water quality remains compliant with the EU council directive 98/83 EC.

#### Draining

#### **Heating coil circuit**


Tank over the indoor unit

Follow the same procedure explained in the Draining point of the previous section Indoor unit.

#### · Tank beside the indoor unit

- To drain the tank's heating coil water
- 1 Switch OFF the main power supply of the indoor unit.
- 2 Close the recommended 2 shut-off valves (field supplied) installed between the heating coil pipes (connected to the tank) and the flexible water pipes of the kit ATW-FWP-01 (connected to the indoor unit safety valve and T-branch).
- **3** Disconnect the 2 heating coil pipes (connected to the tank) from the shut-off valves (field supplied) to expel the water contained into the heating coil of the tank.
- To drain the indoor unit water

Follow the same procedure explained in the Draining point of the previous section *Indoor unit*, and finally, disconnect the 2 flexible water pipes of the kit ATW-FWP-01 (connected to the indoor unit safety valve and T-branch) from the shut-off valves (field supplied) to expel the remaining water in these pipes.

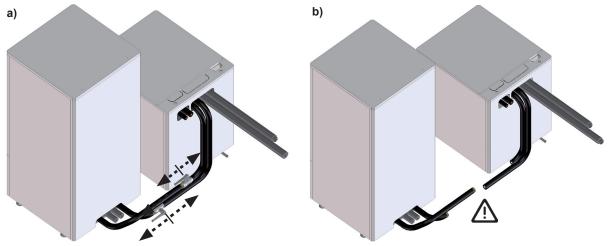



### L CAUTION

- Take care when draining the water of the tank's heating coil and the remaining water of the kit ATW-FWP-01 (connected
  to the indoor unit safety valve and T-branch). Perform the draining work as far as possible to the indoor unit.
- The expelled water could be hot and could keep in pressure. Take care with this draining.

#### **DHW** circuit

- 1 Switch OFF the main power supply of the indoor unit.
- 2 Close the main DHW inlet valve (shut-off valve of the security water valve accessory DHWT-SWG-01) in order to avoid the tank filling.
- 3 Close the shut-off valve of the DHW outlet.
- **4** Open manually the drain valve of the security water valve accessory DHWT-SWG-01. The water of the tank will expelled by this drain valve.
- **5** When the water begins to drain more slowly, disconnect the DHW outlet pipe from the shut-off valve. By this way, the air enters to the tank and helps to the draining process.
- 6 Continue with the draining process until the tank has been fully emptied of water.



### CAUTION

- Check that water flows free through the discharge pipe of the security water valve accessory (pressure relief valve) (DHWT-SWG-01).
- When disconnecting the DHW outlet pipe from the shut-off valve, the expelled water could be hot and could keep in pressure. Take care with this draining and perform this work as far as possible to the tank.



### 13.3 Service and maintenance record

### 13.3.1 Outdoor unit

No.	Check item	Action	Judg	ement
1	Is the service area sufficient?	_	Yes	No
2	Is there a short circuit of the discharged air?	_	Yes	No
3	Any heat influence?	_	Yes	No
4	Is the ground wire connected?	_	Yes	No
5	Refrigerant piping.	_	Good	Not Good
6	Fixing the unit.	_	Good	Not Good
7	Is there any damage on the outer surface or the internal surface?	-	Yes	No
8	Checking the screw and the bolts.	Tighten if loosened.	Tightened	Not Tightened
9	Tightening the terminal screws.	Tighten all the terminal screws with a Phillips screwdriver.	Tightened	Not Tightened
10	Are the compressor terminals tightly fixed?	Push all the terminals.	Pushed	Not Pushed
11	Insulation resistance.	Measure the insulation resistance with an insulation resistance meter.   Comp. and fan.   motor: greater than $3M\Omega$ .   Others: greater than $3M\Omega$ .	Good	Not Good
12	Does the drain water flow smoothly?	Check the smooth flow by pouring some water.	Good	Not Good
13	Check for a leakage in the compressor.	Check for any leakage.	Good	Not Good
14	Check for a leakage in the heat exchanger.	ditto	Good	Not Good
16	Check for a leakage in the 4-way valve.	ditto	Good	Not Good
17	Check for a leakage in the check valve.	ditto	Good	No Good
18	-	ditto	Good	Not Good
19	Check for a leakage in the accumulator.	ditto	Good	Not Good
19	Check for a leakage in the strainer.	ditto	Good	Not Good
20	Check for a leakage in the electronic expansion valve	ditto	Good	Not Good
21	Check for a leakage in the piping.	ditto	Good	Not Good
22	Check the direction of the fans.	By viewing the airflow volume.	Good	Not Good
23	Voltage among each phase.	Higher than AC220V.	Good	Not Good
24	Vibration and sound.	Check the fan the compressor the piping and others.	Good	Not Good
25	Activation of each operation mode.	Check the activation of the HEAT switch, the STOP switch and the TEMP switch.	Good	Not Good
26	High-pressure cut-out switch.	Check the actual activation value.	Good	Not Good
27	Check the activation of the drain-up mechanism.	Check the activation during the cooling process.	Good	Not Good
28	Air inlet temperature of the outdoor unit DB/ WB.	_	(°C)DB	(°C)WB
29	Air outlet temperature of the outdoor unit DB/WB.	_	(°C)DB	(°C)WB
30	High-pressure switch.	-	kg/c	:m²G
31	Low-pressure switch.	_	kg/d	:m²G
32	Operating voltage.	_	,	V
33	Operating current.	_		A
34	Instructions to the client for cleaning the air filter.	-	Done	Not yet
35	Instructions to the client about the cleaning method.	-	Done	Not yet
36	Instructions to the client about the operation.	_	Done	Not yet



### 13.3.2 Indoor unit

No.	Check item	Action	Jude	jement
1	Is the service area sufficient?	_	Yes	No
2	Any heat influence?	_	Yes	No
3	Is the ground wire connected?	_	Yes	No
4	Refrigerant piping.	_	Good	Not Good
5	Water piping.	_	Good	Not Good
6	Fixing the unit.	_	Good	Not Good
7	Is there any damage on the outer surface or the internal surface?	_	Yes	No
8	Checking the screw and the bolts.	Tighten if loosened.	Tightened	Not Tightened
9	Tightening the terminal screws.	Tighten all the terminal screws with a Phillips screwdriver.	Tightened	Not Tightened
10	Are the compressor terminals tightly fixed?	Push all the terminals.	Pushed	Not Pushed
11	Insulation resistance.	Measure the insulation resistance with an insulation resistance meter.   Comp. and fan.   motor: greater than $3M\Omega$ .   Others: greater than $3M\Omega$ .	Good	Not Good
12	Does the drain water flow smoothly?	Check the smooth flow by pouring some water.	Good	Not Good
13	Check for a leakage in the compressor.	Check for any leakage.	Good	Not Good
14	Check for a leakage in the heat exchangers.	ditto	Good	Not Good
15	Check for a leakage in the solenoid valves.	ditto	Good	Not Good
16	Check for a leakage in the check valve.	ditto	Good	No Good
17	Check for a leakage in the strainers.	ditto	Good	Not Good
18	Check for a leakage in the electronic expansion valve	ditto	Good	Not Good
19	Check for a leakage in the piping.	ditto	Good	Not Good
20	Check for a leakage in the water 3-way valve.	ditto	Good	Not Good
21	Check for a leakage in the water safety valve.	ditto	Good	Not Good
22	Check for a leakage in the water pump.	ditto	Good	Not Good
23	Voltage among each phase.	Higher than AC220V.	Good	Not Good
24	Vibration and sound.	Check the fan the compressor the piping and others.	Good	Not Good
25	Activation of each operation mode.	Check the activation of the HEAT switch, the STOP switch and the TEMP switch.	Good	Not Good
26	Refrigerant High-pressure cut-out switch.	Check the actual activation value.	Good	Not Good
27	Water High-pressure cut-out switch.	Check the actual activation value.	Good	Not Good
28	Water flow switch.	Check the actual activation value.	Good	Not Good
29	Water manometer.	Check the correct value indication.	Good	Not Good
30	Check the activation of the air purger.	Check by increasing the pressure.	Good	Not Good
31	Check the 3-way valve mechanism.	Check the correct work.	Good	Not Good
32	Check the activation of the drain-up mechanism through the safety valve.	Check the activation during work.	Good	Not Good
33	Water inlet temperature of the indoor unit.	_	(°C)DB	(°C)WB
34	Water outlet temperature of the indoor unit.	_	(°C)DB	(°C)WB
35	Refrigerant High-pressure switch.	_	kg/	cm <sup>2</sup> G
36	Water pressure switch.	_	kg/	cm <sup>2</sup> G
37	Operating voltage.	_		V
38	Operating current.	_		A
39	Instructions to the client about the cleaning method.	-	Done	Not yet



### 13.3.3 **DHW Tank**

No.	Check item	Action	Judgement	
1	Is the service area sufficient?	_	Yes	No
2	Any heat influence?	_	Yes	No
3	Is the ground wire connected?	_	Yes	No
4	Water piping.	_	Good	Not Good
5	Fixing the unit.	_	Good	Not Good
6	Is there any damage on the outer surface or the internal surface?	_	Yes	No
7	Checking the screw and the bolts.	Tighten if loosened.	Tightened	Not Tightened
11	Does the drain water from the security valve flow smoothly?	Check the smooth flow by pouring some water.	Good	Not Good
13	Check for a leakage in the heating coil.	Check for any leakage.	Good	Not Good
15	Check for a leakage in the check valve of the optional recirculation.	ditto	Good	No Good
18	Check for a leakage in the hoses.	ditto	Good	Not Good
19	Check for a leakage in the water pump	ditto	Good	Not Good
22	Vibration and sound.	Check the fan the compressor the piping and others.	Good	Not Good
27	Water manometer.	Check the correct value indication.	Good	Not Good
30	Check the activation of the drain-up mechanism through the security valve.	Check the activation during work.	Good	Not Good
31	Water inlet temperature of the heating coil.	_	(°C)DB	(°C)WB
32	Water outlet temperature of the heating coil.	_	(°C)DB	(°C)WB
35	Operating voltage.	_	V	
36	Operating current.	_		A
37	Instructions to the client about the cleaning method.	_	Done	Not yet
38	Instructions to the client about the operation.	_	Done	Not yet



### 13.4 Service and maintenance record using the 7-segment display

### 13.4.1 Outdoor unit

Outdoor unit model (serial No. )  I. Operation mode						
Operation mode			R/	RAS-		
. Operation mode						
2. Test run start time						
B. Data collect start time						
l. Read out data from /-segment in outdoor unit						
1.1 Protection control code						
I.2 Total capacity of connected I.U. *	EP					
	SE	52C	FAN1	FAN2	20A	
1.3 Input/output state of outdoor micro-computer	RE					
Input/output state of outdoor micro-computer	HI	20F	21	СН	PSH	
	H2					
1.4 Alarm code for abnormal stoppage of compressor	Fo					
1.5 Inverter order frequency to compressor	Eo					
1.6 Indoor order frequency to compressor	Га					
I.7 Air flow ratio	ΓΕ					
I.8 O.U. expansion valve opening	Γo					
I.9 Temp. at the top of compressor	ď					
I.10 Evaporating temp. at heating	ΓF					
I.11 Ambient air temp.	R (					
1.12 Cause of stoppage at inverter	R2					
I.13 Control information	nΒ					
1.14 Control information	ER					
I.15 Inverter secondary current	LA					
I.16 O.U. address	nΒ					
I.17 I.U. expansion valve opening	ER					
I.18 Liquid pipe temp. of I.U. (Freeze protection)	LA					
I.19 Cause of I.U. stoppage	dR					



- O.U.: Outdoor Unit.
- I.U.: Indoor unit.
- FAN1 FAN2: Constant speed fan.
- 52C: CMC.
- PSH: High pressure switch.
- 20A: Solenoid valve (SVA).
- 20F: Solenoid valve (SFV).
- 21: Reversing valve (RVR).
- · CH: Oil heater.
- \*: Multiply 1/8 by the code on the 7-segment.



### 13.4.2 Indoor unit

Cust	omer's name:			Date:
	Indoor unit model (serial No. )		RWH-	,
1	Operation mode			
2	Test run start time			
3	Data collect start time			
4	Read out data from 7-segment in PCB1			
4.1	Protection control code			
4.2	Heat water Temperature Setting (°C)	Eh		
4.3	Cold Water Temperature Setting (°C) (Not available)	ŁΕ		
4.4	Water Inlet Temperature (THM <sub>wi</sub> ) (°C)	ın.		
4.5	Water outlet Temperature (THM <sub>wo</sub> ) (°C)	oŁ		
4.6	Water outlet Temperature Circuit 2 (THM <sub>WO2</sub> ) (°C)	2م		
4.7	Water outlet Temperature Boiler (THM <sub>wo3</sub> )	ob		
4.8	Water outlet Temperature DHW (THM <sub>DHW</sub> ) (°C)	oh		
4.9	Swimming pool Temperature (THM <sub>SWP</sub> ) (°C)	٥5		
4.10	Outdoor Unit Ambient Temperature (THM7) (°C)	ŁR		
4.11	Second ambient Temperature (THM <sub>AMB2</sub> ) (°C)	ŁR.		
4.12	Outdoor Unit Average Ambient Temperature (2 hours) (°C)	E I		
4.13	Second Outdoor Unit Average Ambient Temperature (2 hours) (°C)	Ł 1.		
4.14	Gas Temperature (THM <sub>G</sub> ) (°C)	ŁΩ		
4.15	Liquid Temperature (THM <sub>L</sub> ) (°C)	EL		
4.16	Compressor top Temperature (THM9) (°C)	Ed		
4.17	Evaporation gas Temperature (THM8) (°C)	£5		
4.18	Defrosting	dЕ		
4.19	Cause of stoppage	d l		
4.20	Inverter Operation frequency (Hz)	hl		
4.21	Indoor Expansion valve opening (%)	Ε,		
4.22	Outdoor Expansion valve opening	Εo		
4.23	Compressor running current (A)	P!		
4.24	Digital inputs	d,		
4.25	Digital outputs	do		
4.26	Refrigerant Cycle Address	الات		
4.27	Indoor Unit Address	114		
4.28	ROM N°	no		
4.29	Capacity Code *	Ed		
4.30	Outdoor capacity Code *	Eo		
5	Read out data from 7-segment in PCB3			
5.1	Protection control code			
5.2	Heat water Temperature Setting (°C)	Eh		
5.3	Water Inlet Temperature (THM <sub>wi</sub> ) (°C)	ln		
5.4	Water outlet Temperature (THM <sub>wo</sub> ) (°C)	ob		
5.5	Inverter EBOX Ambient Temperature (THM <sub>FROX</sub> ) (°C)	ŁR		
5.6	R134a Discharge Gas Temperature (THM <sub>D</sub> ) (°C)	Ed		



Cust	omer's name:			Date:
	Indoor unit model (serial No. )		RWH-	
5.7	R134a Suction Temperature (THM <sub>s</sub> ) (°C)	£5		
5.8	R410A Liquid Temperature (THM <sub>L</sub> ) (°C)	EL		
5.9	R134a Expansion valve opening (%)	Ea		
5.10	R134a Compressor frequency (Hz)	EF		
5.11	ROM N°	no.		
5.12	Model idenification *	Ed.		
5.13	Option selection status	οP.		



- O.U.: Outdoor Unit.
- I.U.: Indoor unit.
- \*: Multiply 1/8 by the code on the 7-segment.



# 13.5 Service and maintenance record by LCD

Custom	er's name	ecking by LCD	Date:
		·	Date
I.U. seria			
.U. No. /	alarm co	de	
.U. seria	al No.		
I.U. No. /	alarm co	de	
REF	Normal	Description	State
KEF	user	Description	State
		U	nit Status
MVP		Mixing valve C2 position (%)	
Pd	Y	Discharge pressure R134a (MPa)	
Ps	ľ	Suction pressure R134a (MPa)	
EVI	Y	Indoor expansion valve 1 opening (%)	
E2	Y	Indoor expansion valve 2 opening (%)	
EO	Y	Outdoor expansion valve opening (%)	
H4	Y	Inverter operation frequency 1 (Hz)	
H2	Ý	Inverter operation frequency 2 (Hz)	
DEF	Ý	Defrosting	
DI		Cause of stoppage 1	
D2		Cause of stoppage 2	
P1	Y	Compressor running current 1 (A)	
P2	Ý	Compressor running current 2 (A)	
ROM1		PCB 1 Firmware	
ROM2		PCB 3 Firmware	
CD		Product specification code	
		· · · · · · · · · · · · · · · · · · ·	Il Temperature
l1		1	
OT		Water inlet temperature Water outlet temperature	
OC1		Water outlet temperature 3	
OC2		Water outlet temperature 3	
OH			
OS		DH water temperature	
Ta		Swimming pool temperature  Outdoor ambient temperature	
		·	
Ta.		Second ambient temperature	
Ta2		Outdoor ambient average temperature	
Ta3		Second ambient average temperature	
TaSum		Summer Sw-Off average temperature	
RT1		Room temperature C1	
RT2		Room temperature C2	
Td1	I	Discharge gas temperature (R410A)	
Td2	I	Discharge gas temperature (R134a)	
Tg1	I	Gas temperature (R410A)	
Tg2	I	Suction gas temperature (R134a)	
TI1	I	Liquid temperature (R410A)	
TI2	Y	Liquid temperature (R134a)	
Ts	Y	Evaporating gas temperature (R410A)	
Ts2	Y	Evaporating gas temperature (R134a)	
			Set Point
TC		Water temperature setting	
OTCS1		OTC Supply set point C1	
OTCS2		OTC Supply set point C2	
RTS1		Room temperature set point C1	
RTS2		Room temperature set point C2	
T <sub>DHWS</sub>		DHW temperature set point	
T <sub>SWP</sub>		Swimming pool temperature setpoint	
* SWP		Tomming poor temperature actions	

: Available only for installer.



# 13.6 Checking procedure for the outdoor and indoor compressors

### 13.6.1 Checking procedure for the outdoor compressor (R410A refrigerant)

Check list on compressor				
Client:	Model:	Date:		
Serial No.:	Production date:	Checker:		

No.	Check item	Check method	Result	Remarks
1	Is THM9 correctly connected? THM9: discharge gas thermistor	1. Is wire of thermistor correctly connected by viewing?      2. Check to ensure the 7-segment indication of Td when compressor is operating.		
		Td: temperature of THM9		
		Check to ensure that thermistor on the top of compressor is correctly mounted by viewing?		
2	Is thermistor THM9 disconnected?	Check to ensure that actually measured temperature is the same as the indication during check mode.		
3	Is current sensor faulty?	Check to ensure that indication A1 and A2 are     0 during compressor stopping.		
4	Is current sensing part on inverter faulty?	Check to ensure that indication A1 and A2 are not 0 during compressor running.		
5	Is the direction of current sensor (CTU, CTV) reverse?	Check the direction => by viewing.		
6	Are power source wires, U and V inserted correctly into current sensor?	Check to ensure that wires are correctly inserted		
7	Is expansion valve (MV) correctly connected?	Check to ensure that MV to CN5A is correctly connected		
8	Is exp. valve coil (MV) correctly connected?	Check to ensure that each coil is correctly mounted on the valve.		
9	Are the refrigeration cycle and electrical wiring system incorrectly connected?	Check to ensure that refrigerant is flowing into indoor units by operating one refrigerating cycle only from the outdoor unit.		
10	Is opening of expansion valve completely closed (locked)?	Check the following by the check mode of out- door units.  1. Liquid pipe temperature (TL) > Control informa- tion B2 during heating operation		
12	Are the contacts for compressor magnetic switch CMC faulty?	Check the surface of each contact (L1, L2 and L3) by viewing.		
13	Is there any voltage abnormality among L1-L2, L2-L3 and L3-L1?	Check to ensure that voltage imbalance is smaller than 3%.  Please note that power source voltage must be within 380V or 220V+10%.		
14	Is the compressor oil acidified during compressor motor burning?	Check to ensure that the oil color is not black.		



### 13.6.2 Checking procedure for the indoor compressor (R134a refrigerant)

Check list on compressor				
Client:	Model:	Date:		
Serial No.:	Production date:	Checker:		

No.	Check item	Check method	Result	Remarks
1	Is THMd correctly connected? THMd: discharge gas thermistor	1. Is wire of thermistor correctly connected by viewing?      2. Check to ensure the 7-segment indication of Td when compressor is operating.		
		Td: temperature of THMd		
2	Is thermistor THMd disconnected?	Check to ensure that thermistor on the top of compressor is correctly mounted by viewing?      Check to ensure that enterthere are a second to the compression.		
	is thermister Privil disconnected?	Check to ensure that actually measured tem- perature is the same as the indication during check mode.		
3	Is current sensor faulty?	Check to ensure that indication A1 and A2 are     0 during compressor stopping.		
4	Is current sensing part on inverter faulty?	Check to ensure that indication A1 and A2 are not 0 during compressor running.		
5	Is the direction of current sensor (CTU, CTV) reverse?	Check the direction => by viewing.		
6	Are power source wires, U and V inserted correctly into current sensor?	Check to ensure that wires are correctly inserted		
7	Is expansion valve (MV) correctly connected?	Check to ensure that MV to CN7A is correctly connected		
8	Is exp. valve coil (MV) correctly connected?	Check to ensure that each coil is correctly mounted on the valve.		
9	Are the refrigeration cycle and electrical wiring system incorrectly connected?	Check to ensure that refrigerant is flowing into 2nd cycle by operating one refrigerating cycle only from the indoor unit.		
10	Is opening of expansion valve completely closed (locked)?	Check the following by the check mode of out- door units.		
	completely closed (locked):	Liquid pipe temperature (TL) > Control information B2 during heating operation		
12	Are the contacts for compressor magnetic switch CMC faulty?	Check the surface of each contact (L1, L2 and L3) by viewing.		
13	Is there any voltage abnormality	Check to ensure that voltage imbalance is smaller than 3%.		
	among L1-L2, L2-L3 and L3-L1?	Please note that power source voltage must be within 380V or 220V+10%.		
14	Is the compressor oil acidified during compressor motor burning?	Check to ensure that the oil color is not black.		



### 13.6.3 Additional Information for "CHECK LIST ON COMPRESSOR" (R410A and R134a)

Check item	Additional information (mechanism of the compressor failure)
1 & 2	The liquid refrigerant return volume to the compressor is controlled by the discharge gas temperature Td when compressor is operating. If Td thermistor is disconnected, the liquid refrigerant return volume will become small by detecting the temperature even if the actual discharge gas temperature is high. Therefore, this abnormal overheating by detecting the temperature operation will result in insulation failure of the motor winding.
	Overcurrent control (operating frequency control) is performed by detecting current by the inverter.
3 & 4	In this case, winding insulation failure will occur, since control is not available in spite of actually high current.
5 & 6	The current sensor checks phase and adjusts output electrical wave in addition to the above mentioned items. If fault occurs, the output electrical wave becomes unstable giving stress to the motor winding, resulting in winding insulation failure.
	During a heating operation, Td is controlled by MV.
7 &8	If expansion valves are incorrectly connected, correct control is not available, resulting in compressor seizure depending on liquid refrigerant returning conditions or motor winding insulation failure depending on overheating conditions.
9	If the refrigeration cycle and electrical system are incorrectly connected, abnormally low suction pressure operation is maintained or abnormally high discharge pressure operation is maintained, resulting in giving stress to the compressor, since their correct control is not available.
10	If the expansion valve and electrical system are incorrectly connected, abnormally low suction pressure operation is maintained or abnormally high discharge pressure operation is maintained, resulting in giving stress to the compressor, since their correct control is not available.
12	In the case that the contacting resistance becomes big, voltage imbalance among each phase will cause abnormal overcurrent.
13	In this case, overcurrent will occur, efficiency will decrease or the motor winding will be excessively heated.
14	In the case, it will result in motor burning or compressor seizure.



Hitachi Air Conditioning Products Europe, S.A.U. Ronda Shimizu, 1 - Políg. Ind. Can Torrella 08233 Vacarisses (Barcelona) España



Hitachi certifies that our products have met EU consumer safety, health and environmental requirements.





Hitachi Air Conditioning Products Europe, S.A.U. is certified with: ISO 9001 of AENOR, Spain for its Quality Management accordance with the standard

ISO 14001 of AENOR Spain for its Environmental Management systems accordance with the standard.





Hitachi air conditioning products are manufactured according to: ISO 9001 of JQA, Japan for its Quality Management accordance with the standard

ISO 14001 of JACO, Japan for its Environmental Management accordance with the standard.



Hitachi fulfills with the Certification NF-PAC that recognize the quality requirements for these heat pumps systems.

SMGB0092 rev.0 - 11/2013 Printed in Spain